



WATCH+

USER MANUAL




January 2024



DOWNLOAD THE RAD MOBILE APP

Scan the QR code with your phone to download the Rad Mobile App or go to <https://radgolf.com/pages/download-the-rad-golf-app>.

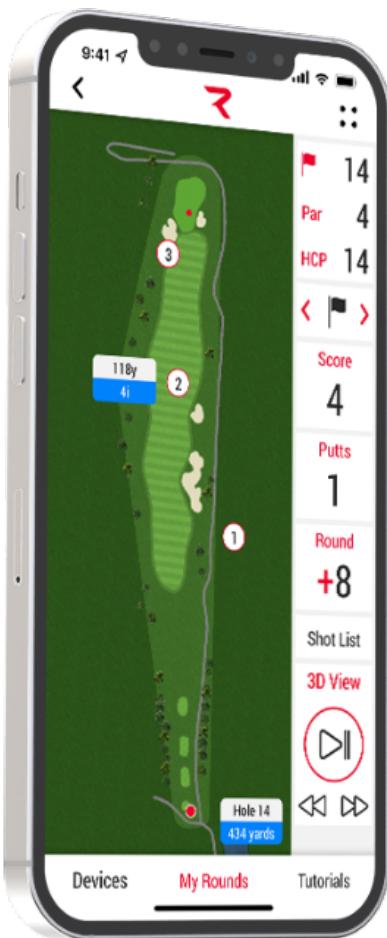

 Download on the
App Store

 GET IT ON
Google Play

POWER ON YOUR WATCH+

- To start your Watch+, hold down the side button for 3 seconds.
- “Welcome” will be followed by your startup screen for 3-5 seconds as your Watch+ boots up.



GETTING TO KNOW YOUR WATCH+ HOME SCREEN

- Once your watch boots up it will change to the Clock screen. This is what we refer to as your Home Screen.
- From your Home Screen (Clock) you can swipe up, down, left, or right to access different screens.
- The Diagram below shows what happens when you swipe in the different directions. One thing to note: You can continue to swipe in the same direction to cycle all the way around the different screens.
- If you press the side button while you are on any screen other than the Home Screen (Clock) it will revert to the Home Screen.



SETTING THE TIME

- The clock will not be automatically set when you turn it on the first time. However, once you connect to the Rad Mobile App it will automatically update to the correct time from your connected smartphone.
- From the Home Screen press the right button to open the Play Golf and Settings screen.
- Select Settings
 - Time is on the 2nd Settings screen. Swipe up to scroll to the 2nd page.
- Select Time
- Select Set Time
- Choose By GPS or Manual
 - If you choose Manual, then you can select the correct time and date by swiping up and down on the respective fields.



CHOOSE YOUR TIME FORMAT & DAYLIGHT SAVINGS MODE

- Select Format to choose between 12 hour and 24 hour display options
- Select Daylight to turn Daylight Savings mode On or Off



- You can select the watch face of your choice, between a classic analog clock and a digital face

STARTING A ROUND OF GOLF

- To initiate a round of golf swipe Up or Left from the Home Screen or Press the button on the side of the watch and Select Play Golf.
- Your watch will begin looking for a GPS signal. For quickest results:
 - Make sure that you are outside and not under a roof or tree when trying to acquire a GPS signal.
 - Don't move and hold the device with the screen facing upwards.
- Once your watch has successfully fixed your GPS position, you will see a list of courses ordered from closest to your current location to furthest from your current location.
- Swipe Right or Left to find your course and then tap the screen to choose.




- Once you select your course you need to choose your view. Swipe Right and Left to toggle between the Green View and the Classic View and hit select.
 - Green View will provide you with a projection of the shape of the green, as well as front, center, and back distances.
 - Classic View will provide you with front, center (in red), and back distances.
 - Once you select your view, your round will begin.



PLAYING A ROUND OF GOLF

- After selecting a view, your round will start. In an active round, you will see:

- Front, Center, and Back Distance
- Hole number
- Par for the Hole
- Shot - Touch to start tracking your shot distance

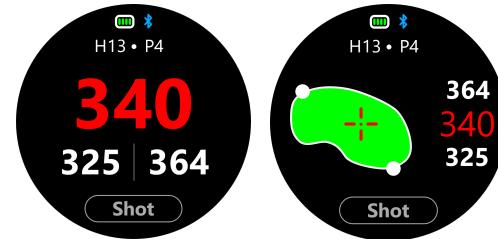


- Tap the Shot text at the beginning of your shot, at which point the Watch+ will begin measuring your starting position to your shot landing position. Tap the number displayed to close the measurement, and tap again to begin a new measurement.



GOLF ROUND SCREENS

- While playing a round you can swipe up and down to cycle through different screens.

- Home Screen - Shows the distances, Hole Number, Par and Shot
- Scoring Screen - If you swipe down, then you will be able to enter your score for the hole. Swipe down again and it brings up the Green View screen.
- Speaker Controls - If you are connected to a Rad speaker, then the Speaker Controls screen will show when you swipe up from the Home Screen.

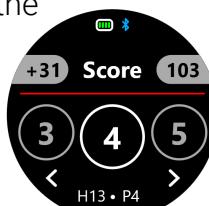

- If you are not connected to a Rad speaker, then this screen will not appear.
- Hazard View - Swipe Down again to view the Hazard Screen. This shows any major hazards. Arrows indicate which direction the hazard is from the tee box.
 - A list of possible icons and their meaning is shown below.
- You can continue to swipe up or down to cycle through all screens.
- Pressing the side button brings you back to the Home Screen.

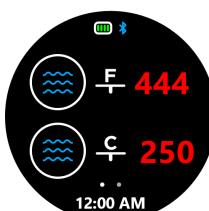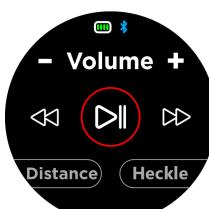

HAZARD ICON LIST

- To the right is the list of possible hazards and their meaning.
 - The 3 primary icons are for Bunkers, Water and the End of the Fairway.
 - Arrows indicate which direction from the middle of the fairway that the hazard is located.
 - Carry shows the distance needed to hit past the hazard.
 - Front shows the distance to the beginning of the hazard.

HAZARD ICONS			
1. Left Fairway Bunker	LFB	12. Left Green Bunker	LGB
2. Middle Fairway Bunker	MFB	13. Back Green Bunker	BGB
3. Right Fairway Bunker	RFB	14. Right Green Water	RGW
4. Left Fairway Water	LFW	15. Front Green Water Carry	FGWC
5. Left Fairway Water Carry	LFWC	16. Front Green Water	FGW
6. Middle Fairway Water	MFW	17. Left Green Water	LGW
7. Middle Fairway Water Carry	MFWC	18. Back Green Water	BGW
8. Right Fairway Water	RFW	19. Creek	CRK
9. Right Fairway Water Carry	RFWC	20. Creek Carry	CRKC
10. Front Green Bunker	FCB	21. End of Fairway	EOF
11. Right Green Bunker	RGB		

CONTROLLING YOUR RAD SPEAKERS

- If you own a Rad Sound or Sound+ you are able to control it from your Rad Watch+. Speaker control options include:
 - Volume Up
 - Volume Down
 - Rewind
 - Play/Pause
 - Fast Forward
 - Distance
 - By selecting Distance, the front, center, and back distances from your Watch+ will be played through your speaker.
 - Heckle
 - By selecting Heckle, your selected heckle sound will play from your speaker



ENTERING YOUR SCORE

- You are able to quickly save your score after each hole by swiping down from the Home Screen and choosing the correct number for shots taken.
 - In the Settings there is a Preferences option and you can choose if you want to track putts. If you select to track putts, then you will be able to enter number of putts on the Enter Score screen as well.
- After you leave the green on the 1st hole, you should get a popup asking you to put in your score and then you will have the option to keep Score Prompt on or off. If you choose to leave it on, then the scoring screen will come up after you leave the green on every hole. If you choose no, then you will need to swipe down every time to get to the Scoring Screen to input your score.



CHANGING HOLES

- The Watch+ uses GPS to automatically go to the hole that you are on, however if you want or need to change holes then just swipe left or right from the Golf Home Screen.
 - Scores entered on the Watch+ for holes that you are not currently on will transfer to the Rad Golf application, so ensure that your Watch+ is set to the hole you're on.

Warning

FCC Regulations:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

ISED Notice

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ISED Radiation Exposure Statement

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.



For more information contact us at:

support@radgolf.com

<https://radgolf.com/pages/faqs>

DOWNLOAD THE RAD APP

Make sure you download the App by scanning this QR code with your camera or clicking these links.

