

Mp3 Personalized Photo Crystal Swivel Light

The sound quality can reach the best situation after the crystal is pasted on it



1.Start from one corner of the double-sided transparent glue to remove the protective film.



2.Use toothpick and other small tools for help if the glue loosens.



3.The surface of the glue must not be touched by hand after the protective film is torn off, otherwise it will not stick firmly.



4.Clean the glass by wiping and press it gently, easy to fall off at the beginning.(need more than 12 hours to be firm, do not touch it by hand during this period)



Wooden/PVC holder function

- 1.LED lights colorful change
- 2.Rotating function
- 3.MP3 play
- 4.Bluetooth speaker
- 5.Memory card
6. Data storage U Disk function
- 7.LCD display
- 8.Charging indicator

Instruction

1.Bluetooth access playback instructions: Press the all-powerful key to enter the Bluetooth mode, open the phone, tablet, etc. Bluetooth-enabled device, search for the "CQEC-BT80" device name, click on the connection, and connect it. The voice prompt "Bluetooth is connected".

Then open the playback software on the device such as mobile phone, click on the play

2.If the battery is low during playback, please charge it before making it

3.During the playback, the light music suddenly stops and the rotation continues, because the battery is low. The protection function is activated, please use it after charging.

4.Power switch: Turn the power switch to the LED position, the system power is turned on and retrieved, and the storage device. There is an MP3 format file, enter the T card playback mode, if you can not retrieve such files, enter the Bluetooth mode. At the same time, the LED lights change in color. The switch is set to the LED/M position. In addition to the above functions, the lamp holder rotates.

5.Charging: There are two options for external power supply and computer USB power supply. When the computer is connected to the USB, the system will prompt, enter PC mode, you can do computer speakers, while charging the battery. The red indicator light is on when charging, and the red light is off when it is full.

6.Al-powerful key:play,pause,voice,song selection and mode conversion.

In Tcard/Bluetooth mode:

(1).Move the“up”and“down”songs to the right and left-turn to remote control"K " key

(2).Keep pressing left and right,voice“+”“””,turn to remote control“vo+”“vo-”

(3).Click to pause key,turn to remote control“ll” key.

(4).Press 3 seconds to hear the voice:“didi”,turn to remote control MODE key,three modes: MP3 player,Bluetooth mode, computer speakers (if connected to a computer USB).

7.If there is an MP3 file in the TF card,the default T card mode is turned on,and the Bluetooth mode is reversed.


8.download the song:

(1).turn off the power

(2).access data cable to the data cable port,and connect to the computer USB,open the power switch,(the power switch is turned to the middle),the computer will automatically install,and read data.

(3).refresh the data and click on my computer, there will be moving magnetic,Disk, click to enter and you can download and replace your favorite songs.(many of computers will unrecognized data is not working properly due to incorrect computer system or installation Download the song,you can remove the memory card, use the card reader)

9.Work indicator:The red light is on when charging,the blue light is on when the system is working,it is purple when working and charging at the same time (red and blue are bright at the same time)

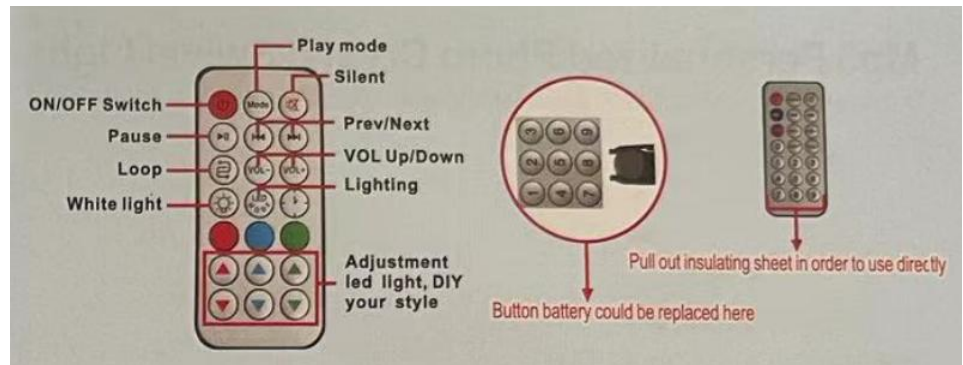

Remote control instructions:

- 1.Press the mode switch button:blue tooth/TF card mode switch
- 2.Press the on-off button:start/close power system
- 3.Press numeric button:select music stored in TF card

TIPS

- 1.The light is dim,the song is hoarse,after this situation,the whole machine will suddenly stop all because of the battery.The power is lower than the lower limit,and the protection circuit works.It can be restored after it is fully charged.
- 2.When the battery is used for the first time,the electricity is used to protect the circuit,the whole machine stops,then recharge for 4-6 hours,which can increase battery life and discharge time.
- 3.Pay attention to the safety of the battery,can not be placed in an open flame to prevent explosion,can not be used as a heavy toy,can not be placed in the public trash.Can not be replaced battery.
- 4.If there is a burst or turbid sound during playback,reduce the volume. The large volume is set for the audio source pole hour, please adjust as needed.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.