

名称	1-AD07US15 电唱机 说明书		
颜色	封面 CMYK、内页单黑		
尺寸	145X200mm		
工艺	封面哑胶		
材质	封面铜版纸 128g、内页书写纸		
折叠方式	见折叠图		
日期	2024. 10. 10	设计	Porline
折叠图	骑马钉		



HIGH FIDELITY BELT DRIVE TURNTABLE



1byone Products Inc.
1230 E Belmont Street, Ontario, CA, USA 91761
Customer Service: +1 909-391-3888
www.1byonebros.com

Instruction Manual

Made in China

Introduction

Thank you for purchasing the 1byone Integrated Turntable for Vinyl Record. This instruction manual contains important information about its safety, usage and disposal. Use the product as described and keep this manual for future reference. If you sell this turntable or pass it on, please also give this manual to the new owner.

Safety Instruction

1. Please use the appliance as instructed.
2. DO NOT expose the appliance to rain, moisture, dripping or splashing of water.
3. Ensure the power supply voltage matches the voltage indicated on the product.
4. DO NOT retrofit the plug yourself in any way.
5. DO NOT pull, bend, step on or compress the power cord.
6. Assemble the product as instructed, and DO NOT place any objects on the product.
7. Avoid dropping any objects or splashing any liquid into the appliance, for they may contact with dangerous voltage points or cause component short circuits, leading to fire or electric shock.
8. DO NOT attempt to repair the appliance or try to remove the casing panel yourself. All maintenance work should be left to qualified service personnel.
9. DO NOT use turntable replacement parts or components with this product that are not approved by the manufacturer.
10. DO NOT place the appliance anywhere near high temperature or open flame.
11. Place the product on a flat and stable surface; extra caution should be payed to prevent tipping or collision during moving or handling.
12. The slots and openings on the body of the machine are designed to ensure ventilation and reliable operation of the product, preventing overheating. DO NOT block or cover these openings.
13. Unplug the product during thunderstorm or the product is not in use for extended periods.

Compliance with FFC Regulation

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement:



When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Cancer and Reproductive Harm - <http://www.P65Warnings.ca.gov>

For more information go to <http://www.1byonebros.com/Compliance/Prop65>

Product Description

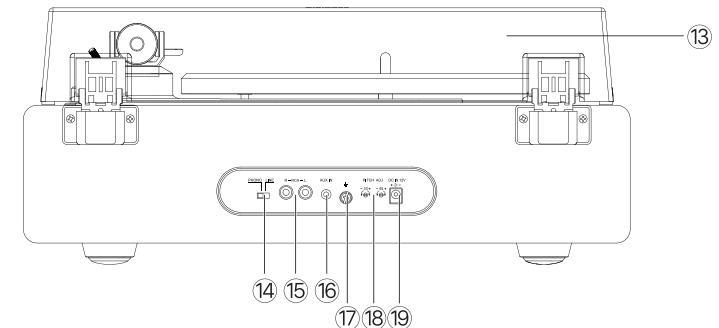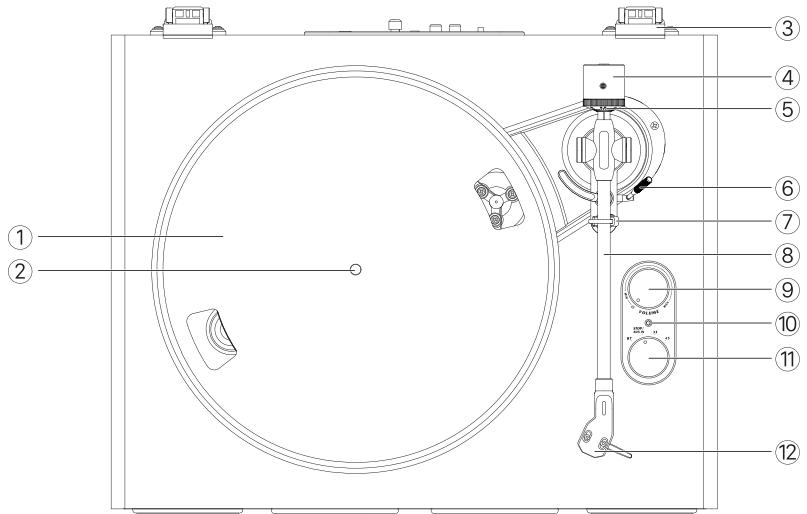

1. Turntable Platter	10. Indicator Light
2. Turntable Spindle	11. Function Knob
3. Lid Hinge	12. Stylus
4. Counterweight	13. Turntable Lid
5. Tracking Force Dial	14. Phone/Line Out Switch
6. Tonearm Lift Lever	15. Audio Output Jack
7. Tonearm Clip	16. Audio Input Jack
8. Tonearm	17. Ground Terminal
9. Power/Volume Knob	18. Speed Adjustment Screw
	19. Power Input Jack


Included Items

Before installing the turntable, check the package contents to ensure all parts below are included and free of visible damage. Please retain the original packaging materials for exchange or return purposes.

1) Turntable Unit	6) Counterweight
2) Power Adapter	7) Cartridge Alignment Protractor
3) Turntable Lid	8) 45 RPM Adapter
4) Slip Mat	9) Instruction Manual
5) Turntable Platter with Belt	

Installing the Turntable


- Mount the turntable on a level surface.
- To avoid the effects of vibrations and acoustic pressure, do not mount the turntable next to items such as speakers.
- The turntable may pick up radio static if placed next to a radio. Therefore, try to keep the turntable away from transmission devices such as radios.
- If the turntable is near equipment (cell phone, etc.) that emits strong radio waves, noise may occur.

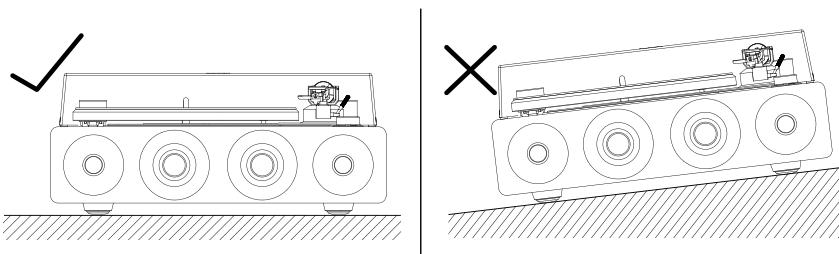

Turntable Platter and Belt Setup


1. Turn the platter over and check the belt position.

- Make sure that the drive belt is looped in the middle of the circle. The drive belt located too high or too low in this circle may cause the drive belt to fall off or speed to be unstable.

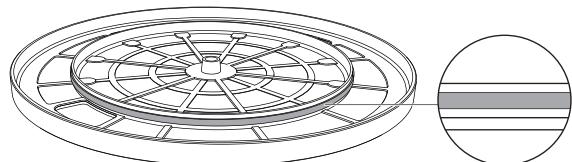


2. Set the platter on the spindle.

- Make sure the platter is fully seated on the spindle.

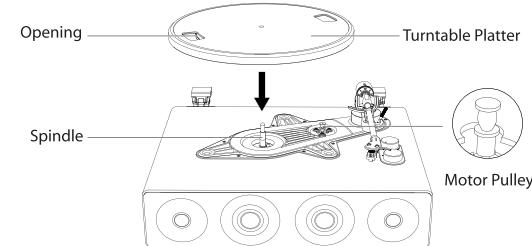


3. Place the belt on the motor pulley.

- Align one of the platter openings with the motor pulley, and while pulling both ends of the red ribbon that comes attached to the belt, place the belt on the motor pulley, as per the diagram. When doing this, be careful not to twist the belt.

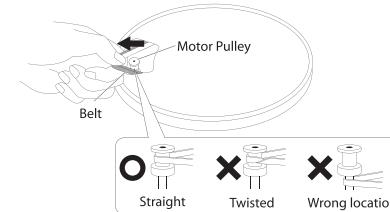


4. Manually rotate the Turntable Platter ten times in a clockwise direction.

- Check if the belt is twisted or detached to ensure the smooth operation of the Turntable Platter.

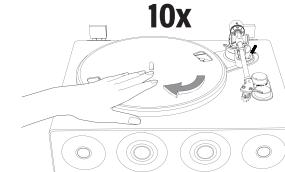


5. Place the Slip Mat on top of the platter. place the 1by one logo on the mat is facing up.

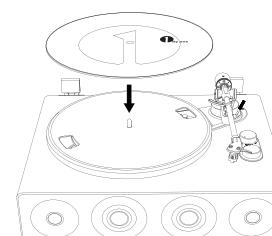

Cartridge Tracking Force Adjustment


The supplied Counterweight is suitable for cartridges weighing between **2.5g - 3.5g**

1. Gently push and turn the Counterweight onto the rear of the Tonearm (with the dial facing toward the front of the turntable).

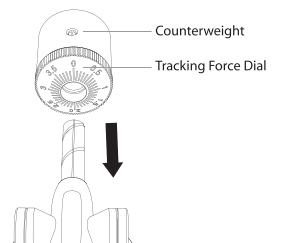


2. Pull the Stylus Protector straight forward horizontally to remove it.


Note: Applying a downward force to remove the protector may cause the Stylus to come off the body. If the Stylus was about to come off or already come off, only a faint sound will be produced. In such case, consult the section on "Replacing the Stylus" to ensure the Stylus is reattached properly.

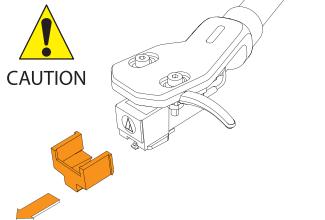


3. Remove the tie-wrap and unlock the Tonearm.
4. Lower the Tonearm lift lever and position the cartridge in the space between the tonearm rest and platter, and then press the Tonearm Lift Lever.
5. Carefully rotate the Counterweight until the Tonearm achieves a neutral balance. The Tonearm should return to this balanced position after a slight sway if it is accidentally touched.

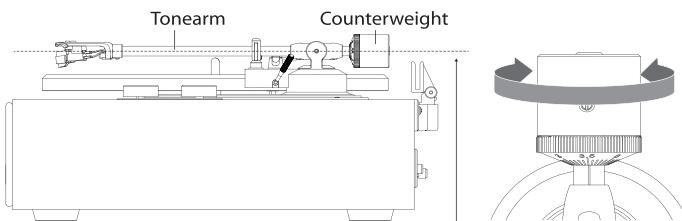

6. After achieving tonearm balance, gently position it onto its rest and secure it. Hold the Counterweight steady with one hand while rotating the tracking force dial with the other to align the "0" mark with the dial's centerline. Once this is done, release the Tonearm to verify that it maintains its horizontal balance.

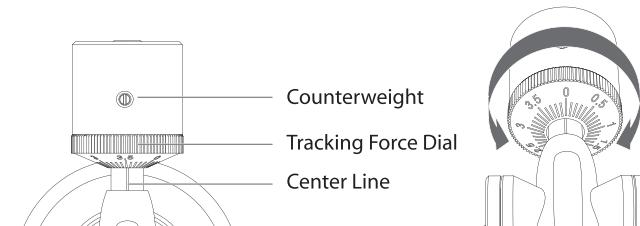


7. Finally, rotate the Counterweight counterclockwise (viewed from the front) until the recommended tracking force value **2.5** aligns with the tracking force calibration center line.

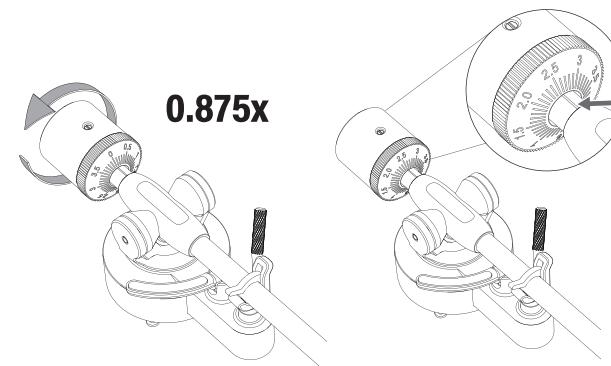

Note: Each mark on the dial represents 0.1g. The recommended tracking force for the factory-installed cartridge is 2.5g. Carefully rotate the Counterweight to the 2.5 mark, and then align it with the center line.


Installing the Lid

Align the hinge catch of the lid with the lid hinge on the back of the unit, and then press the dust cover into place.

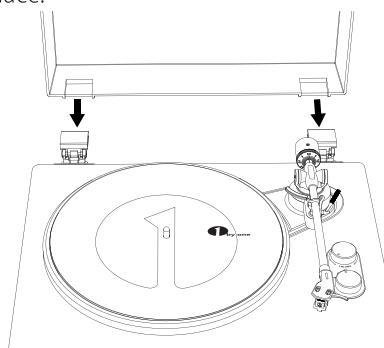

Connection to External Speaker with RCA Audio Cable

This turntable includes four built-in speakers and one built-in phone equalizer. If you wish to use your own amplifier or speakers, please follow the instructions below:

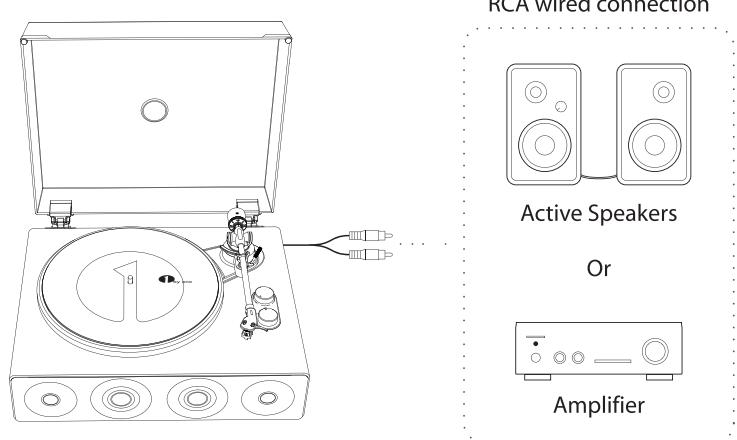

Note: In order to achieve the best sound, it is advised to set the turntable volume to a minimal level. Then the turntable's audio will be played back through your own amplifier, speakers, etc.

1. Setting Pre-amplifier Selector Switch

This product has a built-in phono equalizer function. You can use the product even if you do not have a phono amplifier or connectable equipment with a built-in phono amplifier.

Use the Phono & Line Out Switch to set the output, as shown below.

Connectable equipment being used	Position of the Phono & Line Out Switch	Where to connect RCA audio cable
Device with phono input	PHONO	Phono input jack and ground (earth) terminal of connected equipment
Device without phono input	LINE	AUX or line input jack of connected equipment

Note: The RCA Jacks are not designed to be connected directly to the passive/unpowered speakers on LINE mode. If connected to the passive speakers, there will be no sound.

2. Connecting the Device

Align the settings for the Phono & Line Out Switch and connect the RCA audio cable to an input jack that is compatible with the connectable equipment you are using (amplifier, active speakers, etc.).

- The RCA audio cable's red jack is for the right (R) channel, and the white jack is for the left (L) channel.**

