




MP3
User Manual

Introduction

The Fig Beat Music Player is a compact and versatile digital audio device designed to provide users with a convenient way to listen to music and other audio files. Its primary purpose is to store, organize, and play back audio content in the MP3 format, which has become a standard for compressed digital audio. The portability of the Fig Beat Music Player allows users to enjoy their favorite songs, podcasts, and audiobooks whether they are on the go, exercising, or simply relaxing at home.

Functionally, the Fig Beat Music Player operates by utilizing our large built-in memory. Users can load their music collections onto the device through The Fig Beat Music Desktop Software or USB connection.

The interface includes buttons that allow for easy navigation through playlists, albums, and tracks. This Fig Beat Music Player also features additional functionalities such as alarm, voice recording, and even Bluetooth capabilities to connect to wireless headphones or speakers.

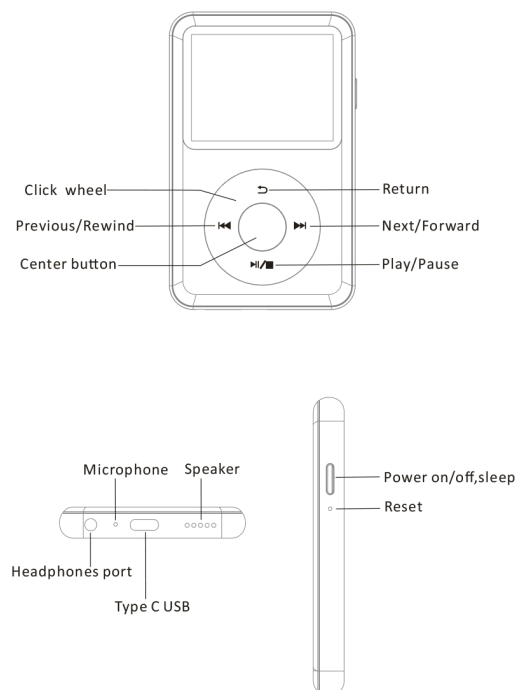

This user manual is designed to assist you in harnessing the full potential of your Fig Beat Music Player. Within these pages, you will find detailed instructions on how to set up your device, load music, and navigate its various features. Whether you are a first-time user or looking to explore advanced functionalities, this guide will provide you with the knowledge needed to enhance your listening experience and make the most out of your Fig Beat Music Player.

Getting Started

To begin using your Fig Beat Music Player, the first step is to power on the device. Locate the power button, which is situated on the right side of the unit. Press and hold this button for a few seconds until you see the screen light up, indicating that the device is turning on. If you need to power off the device, simply press and hold the same button until the screen goes dark.

Once powered on, you will be greeted by the Main Menu. This is the central hub from which you can access all of the Fig Beat Music Player's features. Use the navigation buttons to scroll through the menu options. The Main Menu includes selections such as Music, Playlists, Settings, and more. Highlight your desired option and press the selection button to enter that category.

Navigating the Main Menu is straightforward. You can move up and down through the options using the click wheel. If you want to return to the previous screen, look for a back button, typically represented with an arrow or the word "Back."

By familiarizing yourself with these basic functions, you'll be well on your way to enjoying your Fig Beat Music Player.

Using the Click Wheel and Buttons

The Click Wheel and Center button are essential components of your Fig Beat Music Player, enabling seamless navigation through menus and efficient selection of options. Understanding their functions will enhance your interaction with the device, making it easier to access your favorite music or settings.

The Click Wheel allows you to scroll through various menu options. To navigate, use your thumb to slide the Click Wheel clockwise to scroll down or counter clockwise to scroll up. As you move, the highlighted selection will change, visually indicating your current position in the menu. This feature is particularly useful when you have numerous options to choose from, such as long playlists or settings.

The Center button, located at the center of the directional buttons, acts as the selection mechanism. Once you have highlighted your desired option using the Click Wheel, simply press the Center button to select it. For example, to play a song from your playlist, scroll to the song title and press the Center button to initiate playback.

To pause or resume music playback, you can also use the Play/Pause Button. While a track is playing, pressing the Play/Pause button once will pause the music, and pressing it again will continue playback from where you left off. This functionality allows you to control your listening experience without needing to navigate away from your current track.

When scrolling through menus such as Playlists, Settings, or Music, you can quickly jump between different sections by utilizing the Click Wheel effectively. For instance, if you wish to access the Settings menu, scroll until "Settings" is highlighted, and press the Center button to enter that category. To return to the Main Menu, use the back button, represented by an arrow.

By mastering the Click Wheel and Center button, you will find it easier to explore the full range of features your Fig Beat Music Player has to offer, ensuring an enjoyable and user-friendly experience.

Now Playing Menu

The Now Playing screen is a vital component of your Fig Beat Music Player, serving as the interface that displays essential information about the track currently being played. When music is in playback, this screen will typically show the title of the song, the artist's name, and the album associated with the track. Additionally, you may see album artwork or a visual representation of the song's progress, which enhances your engagement with the music.

This screen also provides crucial playback controls. The most prominent feature is the playback progress bar, which visually indicates how far along the track is. The time elapsed and the total duration of the track are usually displayed next to this progress bar, allowing you to gauge the remaining time of your song.

To control playback, the Click Wheel plays a crucial role. Users can adjust the volume by sliding the Click Wheel while the music is playing. This ability to tweak the volume on-the-fly ensures that you can tailor your listening experience according to your environment, whether you're in a quiet space or a bustling area.

For fast-forwarding or rewinding through a track, the Click Wheel can also be utilized. Press the Center Button to toggle between volume and fast-forwarding features. While in fast-forwarding mode, slide the Click Wheel to the right, you can quickly advance through the song, while sliding it to the left allows you to rewind. This feature is particularly useful for revisiting favorite parts of a song or skipping through sections that you wish to bypass.

Additionally, the Play/Pause button can be used to pause or resume playback. This means you can stop the music momentarily without needing to leave the Now Playing screen, allowing for a seamless experience as you interact with your

music. The combination of the Click Wheel and the Play/Pause button provides a straightforward yet effective means to manage your audio experience, making the Now Playing menu intuitive and user-friendly.

Music Management

Accessing music options on your Fig Beat Music Player is straightforward and allows you to explore your audio library effectively. From the Main Menu, you can dive into various sections such as All Music, Playlists, Artists, and Albums. Here's a step-by-step guide to help you navigate through these features.

Accessing Music Options

1. **Power On the Device:** Ensure your Fig Beat Music Player is powered on by pressing and holding the power button until the screen lights up.
2. **Main Menu Navigation:** Use the Click Wheel or touchscreen to scroll through the options until you see "Music" highlighted. Press the Center button to enter the Music section.
3. **Choose a Category:** Within the Music section, you will usually find four primary categories:
 - **All Music:** A comprehensive list of every audio file on your device.
 - **Playlists:** Custom collections of your favorite tracks.
 - **Artists:** A directory sorted by the artist's name.
 - **Albums:** A collection organized by album titles.
4. **Selecting a Category:** Use the Click Wheel to navigate to your desired category and press the Center button to enter.

Adding Songs to Playlists

1. **Access Playlists:** From the Music section, scroll to "Playlists" and select it with the Center button.
2. **Creating a New Playlist:** If you want to create a new playlist, look for an option that says "New Playlist" and select it. You may need to name your playlist using the on-screen keyboard.
3. **Adding Songs:**
 - Navigate back to "All Music" or "Artists" to find the songs you wish to add.

- Once you find a song, highlight it and press the Center button to open more options.
 - Look for an option labeled “Add to Playlist” and select it. You will then be prompted to choose which playlist to add the song to.
4. **Confirming Additions:** After selecting the desired playlist, confirm your choice. The song will now be included in your playlist for easy access later.

Navigating through these music management features will enhance your listening experience and make it easy to organize your favorite tracks. Enjoy exploring your music library!

Alarm Settings

Setting alarms on your Fig Beat Music Player is a convenient feature that allows you to stay organized and punctual. Accessing the Alarm menu enables you to view, create, edit, and delete alarms with ease. Press and hold the Center button to open the options menu. Here’s a comprehensive guide on managing your alarms effectively.

Viewing Alarms

To view existing alarms, navigate to the Main Menu and scroll to the “Alarm” option using the Click Wheel. Press the Center button to enter the Alarm menu. Here, you will see a list of all the alarms you have set, including their scheduled times and status (enabled or disabled).

Creating an Alarm

To create a new alarm, select the option labeled “Add Alarm” within the Alarm menu. You will be prompted to set the time for the alarm. Use the Click Wheel to adjust the hour and minute, ensuring to select AM or PM if your device features a 12-hour clock format. After setting the desired time, you can choose a sound for the alarm. Options may include preset tones or songs stored on your device. Highlight your choice and press the Center button to confirm.

Editing an Alarm

If you need to make changes to an existing alarm, navigate back to the list of alarms in the Alarm menu. Highlight the alarm you wish to edit and press the Center button. You can adjust the time, change the sound, or modify additional settings such as the repeat frequency (daily, weekly, or specific days). Make your selections and confirm the changes before exiting the edit menu.

Deleting an Alarm

To delete an alarm, return to the Alarm menu and highlight the alarm you want to remove. Press the Center button to open the options, and look for the "Delete" option. Confirm the deletion when prompted, and the alarm will be removed from your list.

Enabling/Disabling Alarms

To enable or disable an alarm, navigate to the Alarm menu, highlight the desired alarm, and press the Center button. You will see options to toggle the alarm on or off. This feature is useful for adjusting your wake-up times or reminders without deleting the alarm entirely.

By mastering these alarm management features, you can ensure you never miss an important event or appointment.

Device Settings

The Settings menu on your Fig Beat Music Player is a crucial aspect of personalizing and optimizing your device according to your preferences. It includes several options that allow you to adjust various features, enhancing your overall user experience. Here's a detailed rundown of the available settings and how to adjust them.

About

Selecting the "About" option will provide you with essential information regarding your device, such as the System Version, and storage capacity. To access it, navigate to the Settings menu using the Click Wheel and

select "About" by pressing the Center button. This section is helpful for troubleshooting or when you need to verify your device details.

Shuffle

The "Shuffle" setting allows you to play your music tracks in a random order rather than sequentially. To enable or disable this feature, go to the Settings menu, then scroll "Shuffle," Toggle the option on or off to suit your listening preference. This feature is ideal for those who enjoy a varied listening experience.

Repeat

Similar to Shuffle, the "Repeat" feature lets you play a particular track or playlist repeatedly. To modify this setting, navigate to the Settings menu, select the "Repeat" option. You can choose from "Once," "List," or "Off" to define how you want your music to repeat. This can be particularly useful for songs you love.

Brightness

Adjusting the brightness of your screen can help improve visibility in different lighting conditions. To change the brightness level, access the Settings menu and select "Display Settings." Here, you will find a slider that allows you to increase or decrease the brightness. A brighter setting can be helpful in well-lit environments, while a lower setting is ideal for dark settings to save battery life.

Date & Time

Keeping your device's date and time accurate is essential for alarms and reminders. To set or adjust the date and time, navigate to the Settings menu and select "Date & Time." You can manually set the date and time.

Language Selection

The language setting allows you to choose your preferred language for the device interface. To change the language, go to the Settings menu and select "Language." A list of available languages will appear; highlight your preferred language and press the Center button to confirm your selection. This feature makes the device more user-friendly for non-English speakers.

By familiarizing yourself with these settings, you can tailor your Fig Beat Music Player to better meet your needs and preferences, ensuring a more enjoyable and efficient listening experience.

Bluetooth and Sound Recorder Features

Managing Bluetooth connections on your Fig Beat Music Player is a straightforward process that allows you to connect wirelessly to headphones, speakers, and other compatible devices. To begin, ensure that Bluetooth is enabled on your Fig Beat Music Player. Navigate to the Settings menu by using the Click Wheel and select "Bluetooth." Toggle the Bluetooth option to "On," which will make your device discoverable.

Pairing New Devices

1. **Enter Pairing Mode:** Ensure the device you wish to pair (e.g., headphones or speaker) is also in pairing mode. This usually involves holding down a specific button until a light starts blinking.
2. **Search for Devices:** On your Fig Beat Music Player, select "Search for Devices." The Fig Beat Music Player will scan for available Bluetooth devices within range.
3. **Select Your Device:** Once your target device appears in the list, highlight it using the Click Wheel and press the Center button to initiate the pairing process.
4. **Confirm Pairing:** If prompted, confirm the pairing on both devices. A successful connection will typically be indicated by a confirmation message on your Fig Beat Music Player screen.

Deleting Paired Devices

To remove a previously paired device, return to the Bluetooth settings. Scroll through the list of paired devices, highlight the one you wish to delete, and press and hold the Center button. You will see an option to "Forget" or "Remove" the device. Confirm your choice to delete the pairing.

Using the Sound Recorder

The Sound Recorder feature on your Fig Beat Music Player allows you to capture audio recordings easily. To start recording, navigate to the Main Menu and select "Sound Recorder."

1. **Start Recording:** Press the Center button while highlighting the Red circular record icon to initiate recording. You'll see a timer indicating the recording duration.
2. **Pause or Stop:** During recording, you can pause by pressing the Center button again. To stop the recording, press the Center button once more and confirm your choice.
3. **Playback Recordings:** To listen to your recordings, return to the Sound Recorder menu and scroll to the list icon in the bottom right corner and click Select. Highlight the desired recording and press the Center button to play it back.
4. **Manage Recordings:** You can delete recordings by highlighting the recording in the list and selecting the "Delete" option. Confirm your choice, and the recording will be removed from the device.

By utilizing these Bluetooth and Sound Recorder features, you can enhance your Fig Beat Music Player experience, allowing for seamless audio playback and effective recording capabilities.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.