

*SUPERS***ONIC**®

MODEL NO.: SC-1585TS

**LED TREE STUMP SPEAKER
USER INSTRUCTIONS**



Important Safety Precautions

When using your LED Tree Stump Wireless Speaker, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Clean using a soft cloth or paper towel. Do not use abrasive chemicals to cleans this speaker.
3. This product is not a toy, do not allow children to play with it. Adult supervision is advised.
4. Do not expose your speaker to excessive heat or fire.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your speaker to temperatures above 100° F.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
9. Do not drop, puncture or expose the speaker to extreme physical force.
10. Your speaker is not intended for commercial use.
11. Do not place near objects that generate a strong magnetic field.
12. Unplug this device when not in use for long periods of time and during lightning storms.
13. When charging do not place on textiles or flammable synthetic materials. Keep your speakers and charging cable on a dry, cool even surface.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing the LED Tree Stump Wireless Speaker. You can connect your speaker with most smartphones and Bluetooth devices to stream music wirelessly while relaxing outside. Please read this manual carefully before setting up and using the speaker.

Package Contents

- LED Tree Stump Wireless Speaker
- USB Charging Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Specification: V5.1

Bluetooth Range: Up to 33 feet (10 meters)

Power Supply: DC 5V, 1A (USB)

Battery Type: 3.7V 2200mah Lithium Ion Battery

Speaker Output: 5Watts

FM Radio : 87.5-108.0MHZ


Functions : Bluetooth / 3 Lighting modes / FM radio / TWS pairing / AUX in

Music Playtime : Up to 3 hours


Charing Time : 3 hours

Waterproof: IPX4

A Quick Look at Your Speaker

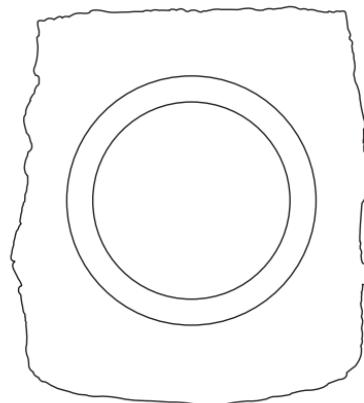

Front

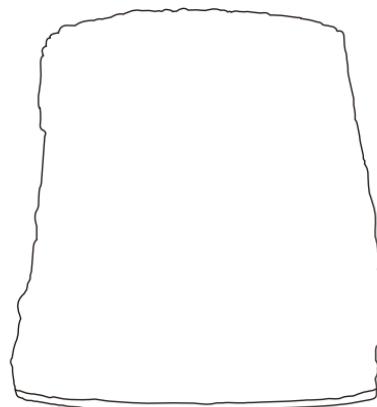

Side View

Product size : W 9.25 X D 7.87 X H9.05 inches

Product Weight : 4.75 LBS


Common issues and solutions:

Issue	Reason	Solution
No Power	Power switch is not turned on	Turn on the power switch
	Built-in battery runs out	Charge the product via adapter or power cable
	The plug is not plugged in properly or the power cable is defective	Reinsert or replace the power cable
	Power outlet is not electric field	Replace the power outlet
	Other reason	Contact after-sales dept.
No Sounds	Volume is turned off or in mute mode	Adjust the volume or turn off mute mode
	Source media / input connection selected incorrectly	Select the correct audio media / input connection
	Audio media / input connection selected audio file	Reinsert media with supported format
	Other reason	Contact after - sales dept.
Distortion of sounds	Poor audio signal or volume too large	Adjust audio / files signals or reduce volume
	Battery running low	Fully charge before using


Tips:

To protect your hearing from damage and avoid affecting others, recommends that do not use this product at high volume for a long time. In order to bring a better using experience, please keep the accessories of this product.


Interface Description

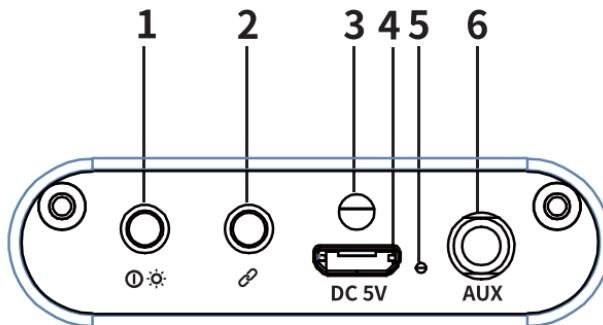

1. Power Button / LED Lighting Switch Button / Mode Button
2. TWS Pairing Button / FM Channels Auto Search Button / FM Channel Switch Button
3. Bluetooth working LED Indicator
4. DC 5V Charging soket
5. LED Indicator for Charing
6. AUX in Port

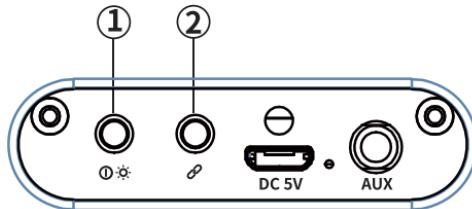


1. Power on / Power off the speaker : Press and hold the ① button for 2-3 seconds .
2. FM Radio : Double press the ① button to switch to FM Radio mode .
3. LED Lighting Mode Switching : Quick press the ① button to switch the LED lighting modes .
4. TWS Pairing : Double press the ② button to pair with another SC-1585TS speaker when both speakers in bluetooth mode .
5. FM radio Channels Auto Searching : Press and hold the ② button for 2-3 seconds , it will auto searching the FM channels .
6. Switching the FM channels : Quick press the ② button to switch to the next FM channel .
7. When using the FM Radio funcion , please insert your USB charging cable as the external antenna . To get a better signal, And please put your speaker in a dry enviroment when with this cable inserted .

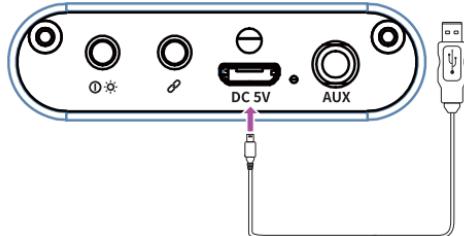


Charging Your Speaker

 
Micro USB
Plug



1. The USB charging cable has a Micro USB plug and a standard USB plug.

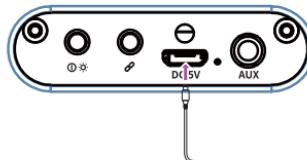


2. Insert the USB charging cable's Micro USB plug into the the speaker's charging port.

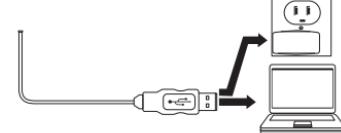

3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable 1A USB charging adapter.

(red) = Charging
(off) = Charging Complete

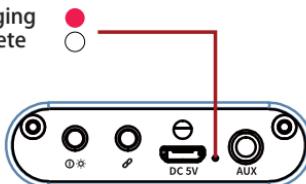


4. The LED Indicator Light will turn red when the speaker is charging and will turn off when charging is complete.

NOTES:

- When battery power is running low, your speaker will emit a voice . Recharge your speaker's battery when you hear this sound.
- Remove the charging cable once charging is complete.
- Overcharging could reduce the life of the battery.
- A charged battery will lose its capacity if it is not used on a regular basis.
- Make sure the rubber battery compartment seal is securely closed once charging is complete and before use.


Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.

Bluetooth Pairing

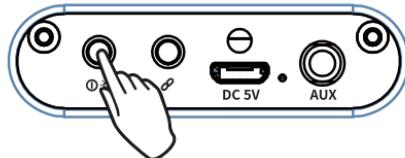

PRESS & HOLD
2-3 SECONDS

1. Press and hold the Power button for two to three seconds to turn the speaker On.

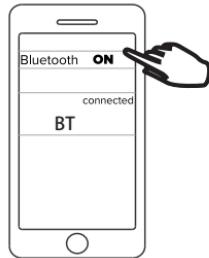

3. On your phone, go into the Bluetooth page in the Settings app. Make sure Bluetooth is turned on before connecting to the available device 'SC-1585TS' .

Pairing Mode
Blue Flashing LED Lights



2. The LED Indicator Light will flash blue indicating your speaker is in pairing mode.

Paired
Blue Solid LED Light




4. The LED Indicator Light will turn solid blue indicating your speaker and phone are paired. The LED Indicator Light will slowly Flash blue when music is playing.

TWS Paring (for two Speakers)

If you have two SC-1585TS speakers, enjoy high-quality sound by using the TWS pairing function.

1. After powering on both speakers, double press either one's ② button quickly. After a short amount of time, you will hear a tone to indicate the two speakers have been paired successfully.
2. On your phone, go into the Bluetooth page in the Settings app. Make sure Bluetooth is turned on before connecting to the available device BT. You will hear a voice from both speakers to indicate that the two speakers and your phone are paired.

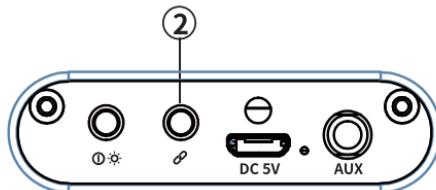

Notes:

1. Please be sure that both speakers are close to each other when pairing. After being paired successfully, the distance of the two paired speakers should be within 6-8 meters, avoiding any physical barriers between them.
2. The TWS function is only available when your speakers are in Bluetooth mode. When in AUX mode, paired speakers will automatically disconnect from each other.

Disconnect TWS Paring (for two SC-1585TS Speakers)

To disconnect two paired speakers, double press either one's ② button quickly. You will hear a tone to indicate the two speakers have been disconnected.

Using Your Speaker

Powering Your Speaker:

Press and hold the power button for two to three seconds to turn the speaker On and Off. If you have already paired your speaker to your phone (or another Bluetooth compatible device), the two devices will automatically remain paired each time your speaker is turned On.

Light Control:

Press the ① button quickly to toggle through the lighting modes.

Music Control:

You can adjust volume and playback settings on your phone or connected audio device.

Auxiliary Input Mode:

To use your speaker with devices that are not Bluetooth enabled, plug one end of a standard 3.5mm audio cable into the AUX Jack on the rear of your speaker. Plug the other end of the cable into the AUX jack on your audio device.

WARNING: When an audio device is connected to your speaker via the Auxiliary Port, the rubber battery compartment seal must remain open. As such, your speaker will not be water resistant and should be kept away from water.

Maintenance & Care

- Before using your speaker, inspect the ports to make sure they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on the USB charging cable when it is connected to your speaker and a wall outlet. Connect and disconnect cables carefully.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.