

Fan Lamp Remote Controller User Manual

Installation Attention:


- 1, !!!!! Turn off the power to the fan at the breaker before doing anything!!!!!!
 - 2, Electrical installation should be performed by licensed electrician.
 - 3, Spliced conductors should be turned upward and pushed carefully up into the outlet box.
 - 4, Install the transmitter with the flat part up, so the ceiling fan cover is easier to close back in place.
- !!!!If both the fan and the lamp are equipped with a switch, please switch the fan to the highest speed and turn on the lamp before use of the remote control.(Put the pull chain at the max speed)

Specification:


Input Voltage	110V
Control Methods	REMOTE
Wireless Transmission	RF 433MHz
Max Power for Fan	145W
Max Power for Light	500W(Incandescent) / 150W(LED)
3 Fan Speeds Control	High / Med / Low
Fan Timing	1H/2H/4H/8H
Fan Spin Reverse	No
Light Dimming	No Dimming

Note: Not all ceiling fan have same color wires.Please check which wire is Fan, light and Neutral carefully before install.

Wiring Diagram of Receiver

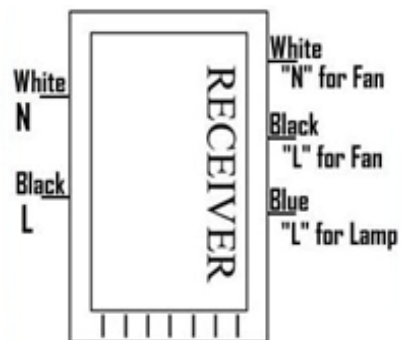 

Installation Diagram of Receiver

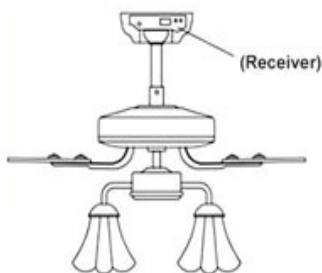 


Notice:

- 1, The inputs and outputs of the receiver can not be connected reverse.
- 2, Check the dimension of receiver carefully to make sure there is enough space in the canopy of your fan
- 3, Press every button on the remot to check if there are any response from the transmitter. The transmitter should be beep when you press any buttons. If there are no beeps, please contact seller for technical support

Before contacting the seller, Please Check the following steps to get a quick solution:

- A. Is there a wall switch or pull chain to the control unit?
- B, Are the wires connected all right?
- C, Are the batteries in the remote fresh?
- D, Whether there are other RF remote controller products nearby and working?

 The RF remote controlled products with the same frequency may disturb each other when working in close RF range.

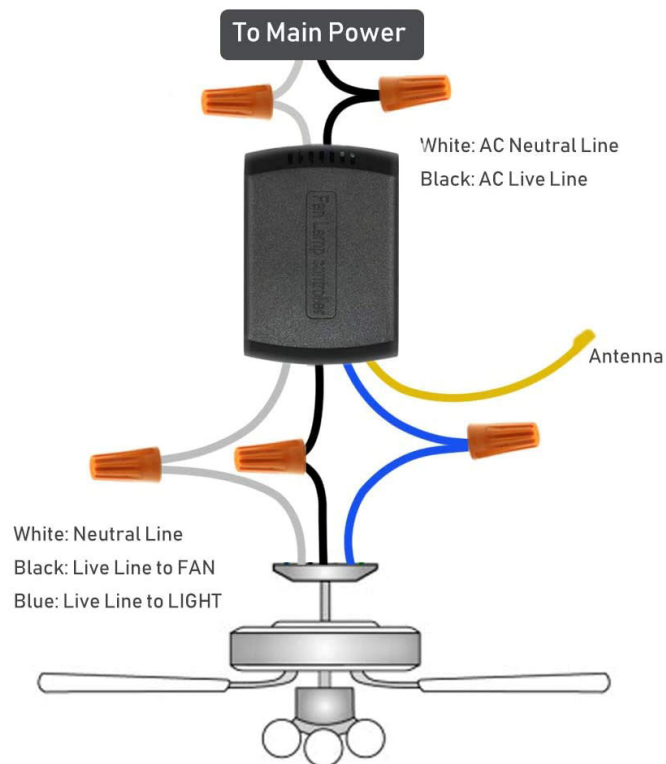

INSTALLATION STEP:

- 1, Connect the wires
- 2, Power On, you will hear a short sound beep from transmitter. Then the light should be on automatically. The fan will not on.
- 3, Press fan speed button, control the fan.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.