


# User Manual

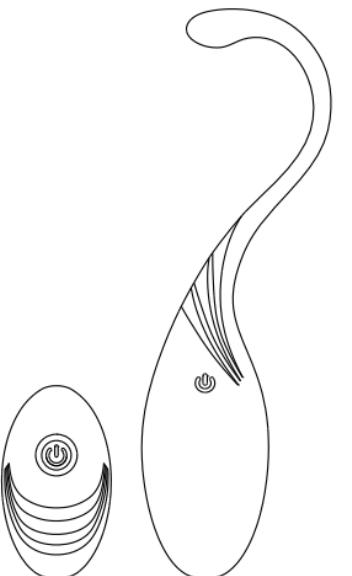

Thank you for using our product.  
Please read this carefully before use.

Made in China


## Product description

It is the elegant appearance and perfect touch that gives you an array of options. It has super strong vibration and multiple vibration modes. You'll have the anticipation of the most dynamic stimulation. The products also provide a sense of safety and environmental protection which is a part of our design philosophy. We hope this culminates in a superior experience for the user. This product is destined to be an extraordinary product.


- 1.Mode:10 different vibrations
- 2.Material: Food-grade silicone
- 3.Max noise: ≤50db
- 4.Battery:170mAh rechargeable lithium battery and 3V 2032 button cell
- 5.Power :USB 5V 150mA DC charging ,charging time about 1.5H,use time about 1H.
- 6.Waterproof Rating: IP65.

※ Package:1× Remote controller& Massage ball  
1×USB charging cable, 1×User manual.

## Instruction

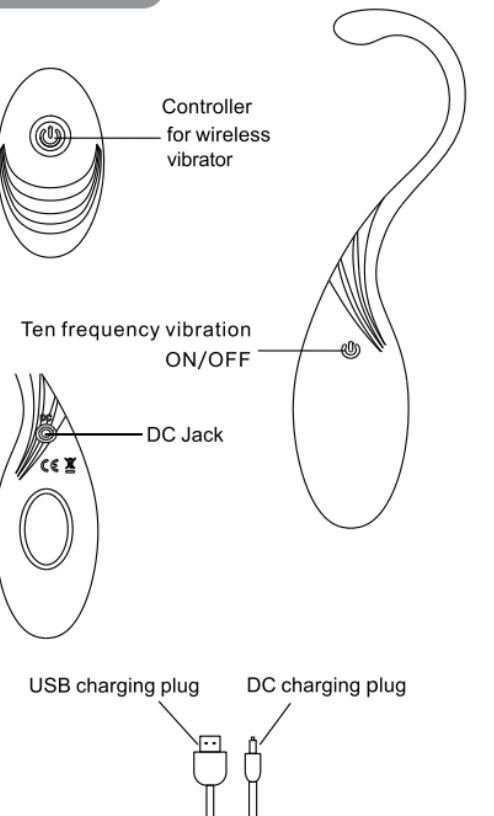

## Charging guide

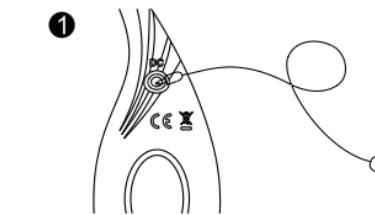

Put the DC charging plug into the hole of product to charge. Then insert the USB charging plug into the USB port of your computer or other charger.(output:5V=1A or 5V=1.5A).



② When product is charging,  
the LED will be flashing




③ When a solid light appears,  
charging is complete.

※When being charged, the toy must be in shutdown state and cannot be used.

## Direction for use

- 1.When product is received, please charge at once (Refer to charging guide).
- 2.Press button **b** (Massage ball) 1.5 seconds to open /off the product,press again change vibration mode
- 3.Press button **a** Controller for wireless Massage ball
- 4.Press **a** 1.5 seconds to stop vibrating.

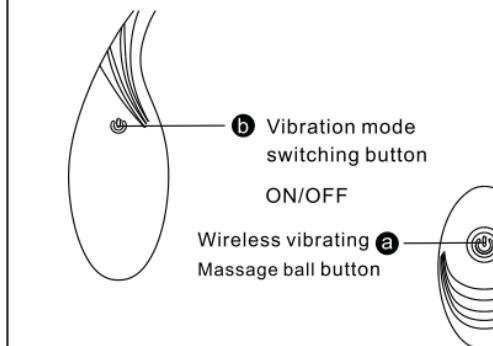

### Vibration curve graph



## Attention

- 1.You must charge the toy in a safe place.
- 2.Water-based lube is suggested as lubricant. Do not apply massage oil or hand cream to the toy surface.
- 3.Stop using it if you feel uncomfortable or you find the toy is no longer smooth or has sharp edges.
- 4.Not recommended to use it below one meter in the water.
- 5.After use, the toy should be cleaned immediately. Warm water and soap can be used to clean the toy, with special detergent,disinfectant or 75% alcohol sometimes.Long term use is not recommended.
- 6.Wash thoroughly with clean water flow.
- 7.The product contains lithium battery. Please put it in the non-recycle bin for disposal.
- 8.Store it well beyond the reach of children.



**Warning:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.