

MYSTERY

CONCEPT



Record Player
with Radio

Dear customers	
Congratulations on your purchase of this product. Like all phonograph products, this product also Developed according to the latest technical standards and manufactured using the most modern electronic components usable.	
Before using the device for the first time, please take a few minutes to read the following instructions carefully so that you canWill be able to enjoy this product for a long time have fun!	
Steps first use	2
Power Connection	2
Input connection	2
Output connection	2
Bluetooth playback	3
Notice	3
Important Safety Instructions	3
Technical Specifications	4
Technical Specifications	5
About the lighting logic of two LEDs	5
Action button analysis	6

Steps first use	
Power Connection:	
Before playing a record, please insert the power plug into the power outlet.	
Tip: This record player is powered by a DC 5V 1A adapter during normal use.	
Using other specifications of the power supply will damage the record player, which is not covered by the warranty.	
Input connection:	
To connect a location device with an audio cable:	
(1.) The 3.5mm plug is connected to the AUXIN socket of the machine.	
Output connection:	
To connect to an external amplifier or amplifier with an audio cable:	
(1) The red plug is connected to the R channel output	
(2) The white plug is connected to the L channel output	
Tip: Please confirm the connection before playing. After the connection, you can control the volume through the power amplifier.	
record player:	
1. Put the vinyl record on the tray, push the record speed selector button, and select the rotation speed (33/45/78) of the vinyl record you are playing. Note: When playing a large hole turntable place the large hole disc cover on the center shaft.	
2. Turn on the power switch.	
3. Take off the white stylus protective cover of the phono cartridge, and unfasten the stylus lock that secures the tonearm.	
4. Push up the tonearm lifter, move the tonearm close to the edge of the record, and the tray starts to rotate. Push down the tonearm lifter, the tonearm begins to slowly descend, the cartridge is lowered to the record, and playback begins.	
5. When the automatic switch is in the ON position, the record will automatically stop after the end. If the automatic stop switch is in the OFF position, the record will not automatically stop after the end. Note: We generally recommend that this switch be adjusted to the ON position.	
6. After the record is over, please use the lift lever to lift the record bar and move it back to the record bar lock position.	
7. Put on the protective cover of the phono head and change the light only. (For those who teach only Daxiu's sheath, please don't stop touching the stylus)	
8. Turn off the power.	
9. Please do not turn the turntable artificially, this will cause damage to the tone arm and stylus.	

Bluetooth playback

1. When the record stops playing, the product will automatically switch to the Bluetooth playback mode, and the blue light of the Bluetooth prompt light will be on.


2.Turn on the Bluetooth function of the mobile phone, search the nearby Bluetooth, and select the Bluetooth Name: "mcb01". Hearing the prompt of "successful connection" in English or the Bluetooth symbol displayed at the top right of the mobile phone interface indicates that the Bluetooth connection is successful. Bluetooth needs to be paired manually for the first time, and it can be paired automatically in the future.

3. The use distance of Bluetooth device is about 10m, and the transmission distance is different in different environments.


4. When you manually disconnect Bluetooth, the English "disconnect" prompt, and the blue light of Bluetooth prompt is off.

5. Note: when playing with an external audio amplifier or phonograph, Bluetooth will be automatically disconnected from the mobile phone.


Notice



The lightning bolt symbol with an arrow in this equilateral triangle informs the user that there is uninsulated dangerous voltage sufficient to cause electric shock within the enclosure of this product.



The exclamation point in the equilateral triangle is to warn the user that there are important operation and maintenance instructions in the product manual.



Warning: In order to avoid electric shock, please do not move the parts inside the Yan board (or the back board), if you need to repair it, consult a professional.

Important Safety Instructions

1) Please read the manual carefully.

2) Save the manual.

3) Heed all warnings.

4) Please follow the instructions in the manual.

5) Please do not place the turntable near water or damp.

6) Please put the whole machine in a cool and ventilated place and use it according to the manufacturer's instructions.

7) Please do not place the whole machine near heat sources, such as radiators, stoves, etc.

8) Please use the accessories provided by the manufacturer.

9) Please unplug the power plug when encountering thunder and lightning or not using it for a long time.

10) If maintenance is required, professionals must be invited.

11) Please do not move the power cord casually, and do not squeeze the plug.

12) Do not place this unit near a container full of liquids or where water is dripping.

13) Please use the power supply as required.

14) Please do not use chemical reagents to clean the surface of the wooden box, which will cause damage to the surface of the wooden box,

15) Before starting the machine, please confirm whether the plug is inserted properly.

16) Please unplug the power plug before moving the turntable.

TECHNICAL SPECIFICATIONS	
HARDWARE FEATURES	SAMPLE PARAMETERS
OUTPUT POWER (RMS)	GRAMOPHONE 2*3W BLUETOOTH 2*3W
NEEDLE FREQUENCY	80-- 10000HZ+3/-1DB
FREQUENCY	FO 160HZ 20% --- 20 KHZ 20%
POWER	VDD=5.0V,RL = 4 Ω ,PO = 3W
POWER SUPPLY	DC/ 5V/1A
CHARGING CONNECTOR	TYPEC
MUSIC PLAYER	TURNTABLE, BLUETOOTH AND AUDIO INPUT PLAYBACK
OTHERS	AUX-OUT LINE-IN HEADPHONE
RADIO INTERFACE	SAMPLE PARAMETERS
BLUETOOTH FREQUENCY	2.4GHZ
RECEIVING RANGE	WITHIN 15 METERS
MECHANICAL PROPERTIES	SAMPLE PARAMETERS
SIZE (L*W*H)	49.2FT
WEIGHT	5.5LB
MATERIALS (FRONT , REAR , MIDDLE , BACK COVER ...)	FRONT, BACK, WOOD BOTTOM, ABS ABOVE, DUST COVER TRANSPARENT PC
COLOUR	BROWN
COLOR COMPOSITION	TAN WOOD+PC TRANSPARENT COVER
OTHER	VOLUME KNOB AUDIO INPUT/OUTPUT TERMINAL

POWER SUPPLY

SAMPLE PARAMETERS

BATTERY TYPE

18650

CAPACITY

2000MA

USE TIME

ABOUT 3 HOURS


CHARGING TIME

ABOUT 4 HOURS

NOTICE

What is the expected RMA after 1 year of sales?
How long is the cycle life of the product?

About the lighting logic of two LEDs

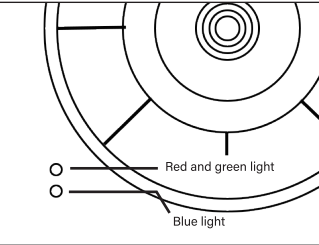


1.The red light is on after the external power supply is connected (the red light goes out when the power supply is unplugged)


2.The green light is on after playing with the battery (the green light is on only when playing)

3.Plug in the external power supply battery and turn on the yellow light after playing (when playing, the external power supply and lithium battery are powered at the same time, the red light and green light are on at the same time, and the light is yellow).

1305 Function Description

record player

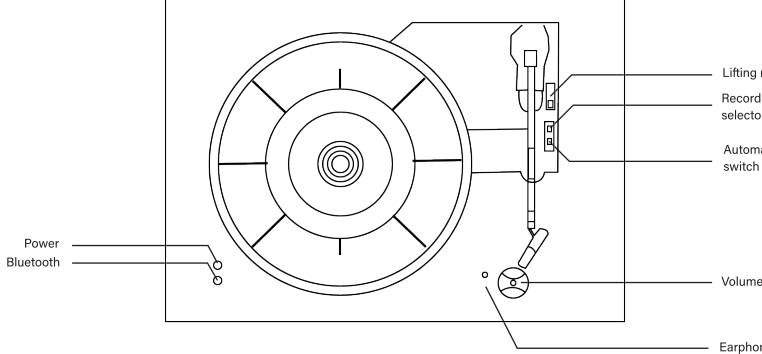

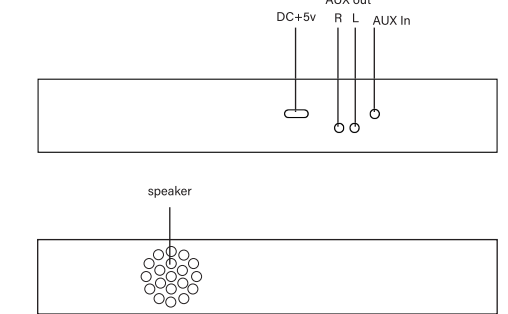

1) Power

2) Bluetooth

3) Lifting rod

4) Record tempo selector (33/45/78)

5) Automatic stop switch

6) Volume

7) DC+5v

8) AUX out R L

9) AUX In

10)speaker

11)Earphine hole

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment