


1

# CIDRON

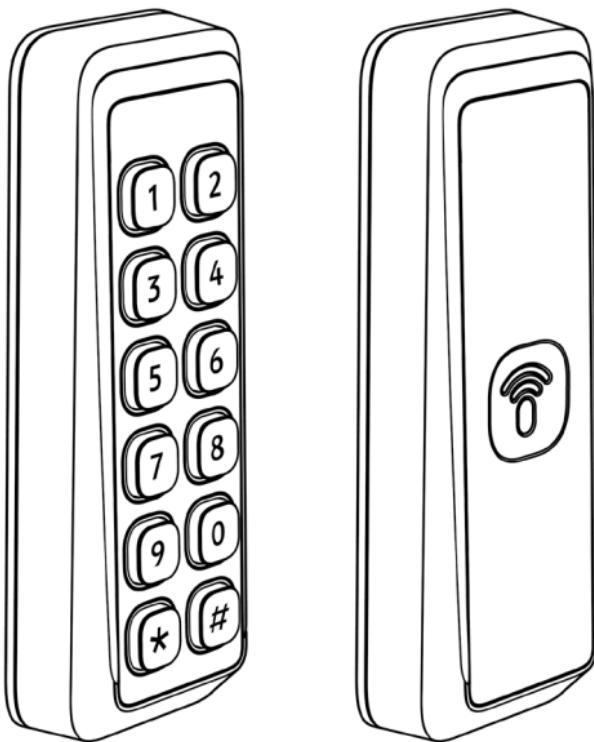

---

Installation guide  
Cidron Slimline Reader

# Cidron Slimline (VG3) Reader - Technical specifications

Operating frequency	13,56MHz.
Reading technologies	<p>MIFARE® CSN 4 byte, MIFARE® CSN 7 byte, MIFARE® Classic, MIFARE® Plus and MIFARE® DESFire® EV1.</p> <p>Also supports other ISO 14443 A/B* compatible cards.</p> <p>*Not all ISO14443 B cards have been implemented in the reader, please contact Civintec Global for more details on current status.</p>
Secure Access Module (SAM):	MIFARE SAM AV2, external SIM card connection slot.
Communication protocols	Wiegand, RS485 (OSDP 1, OSDP 2, including Secure channel), BLE.
Reading output format	24-1024 (excluding parity bits)
Keypad output format	Wiegand 4bit, Wiegand 8bit (Dorado), Wiegand 26bit, OSDP ASCII format.
Keypad	12 digit keypad in 6 rows of 2 keys in each row with configurable backlight in blue color. Control features On/Off/Auto indicators. Light intensity can be adjusted.
Indicators	LED, Green, Red and Yellow (Bi-color). Backlight in blue color. Buzzer.
Power supply	9 – 30VDC
Input/Output	4 input for LED and buzzer and 2 configurable General Purpose Input/Output (GPI/O). The GPI/O's are push/pull type which provides 5VDC as output when "high" on each respective GPI/O connection pin.
Tamper alarm	Built-in mechanical tamperswitch which allows for indication both break off protection and opening of the reader.
Operating temperature	<p>–40° – +70°C (With thermostat controlled embedded heater)</p> <p>When installing readers in environments with extreme heat (above + 50°C) it is recommended to utilize the climate protection SC9901-V which provides additional shading to the reader.</p>
Heater	Thermostat controlled embedded heater.
Operating humidity	0 – 95% RHNC (Relative Humidity No Condensation)
Ingress Protection Classification	IP65 require together with weather protection cover SC9901-T or SC9901-V.
Housing dimension	L = 141mm, H25mm, W=48mm
Configuration Methods	Configuration card, Configard software or factory configured readers.
Compliances	FCC,CE

# 3

## Power Consumption

Model Feature	Brightness		Current draw (idle)	
Model: Civintec Global Cidron	LED-Bar	Backlight	12VDC	24VDC
SC93100-MDEB STD 13.56MHz/125KHz/2.4GHz with keypad	Low	Low	90 mA	47 mA
	Medium	Low	90 mA	47 mA
SC93110-MDEB STD 125KHz/13.56MHz/125KHz/2.4GHz without keypad	Low	Low	90 mA	47 mA
	Medium	Low	90 mA	47 mA
SC93200-MDB SLIM 13.56MHz/2.4GHz with keypad	Low	Low	34 mA	18 mA
	Medium	Low	34 mA	18 mA
SC93210-MDB SLIM 13.56MHz/2.4GHz without keypad	Low	Low	34 mA	18 mA
	Medium	Low	34 mA	18 mA

Note: SC93200-MDB series contains models SC93200-MDBQ-VDI27-S, SC93200-MDB-VDI27-S, SC93200-MDBQ-VG3, SC93200-MDB-VG3, SC9292-SQ, SC9292-SQ2.

SC93210-MDB series contains models SC93210-MDBQ-VDI27-S, SC93210-MDB-VDI27-S, SC93210-MDBQ-VG3, SC93210-MDB-VG3, SC9292-SQ, SC9292-SQ2


---

The above values are excluding heater consumption which is variable and depending on configuration settings. Default value is 220 mA at 12VDC but can be configured in 20 mA intervals from minimum 120 mA to maximum 300 mA. When the heater is set in automatic mode, the heater will be activated when the internal temperature of the reader is below +1°C, the heater will automatically deactivate when the internal temperature exceeds +5°C.

Depending on the heater consumption setting the time it will take for the reader to exceed +5°C will vary- a higher power consumption setting will reduce the time required to heat the reader.

Current draw (idle) is defined as reader connected to power, no LED's lit, buzzer is not sounding and no reading of credential or key pressing is processed by the reader. Current draw (peak) is defined as reader powered with both backlight and LED frame lit (Yellow), buzzer is sounding and reader is reading a credential while simultaneously a key pressing is processed.

# 4

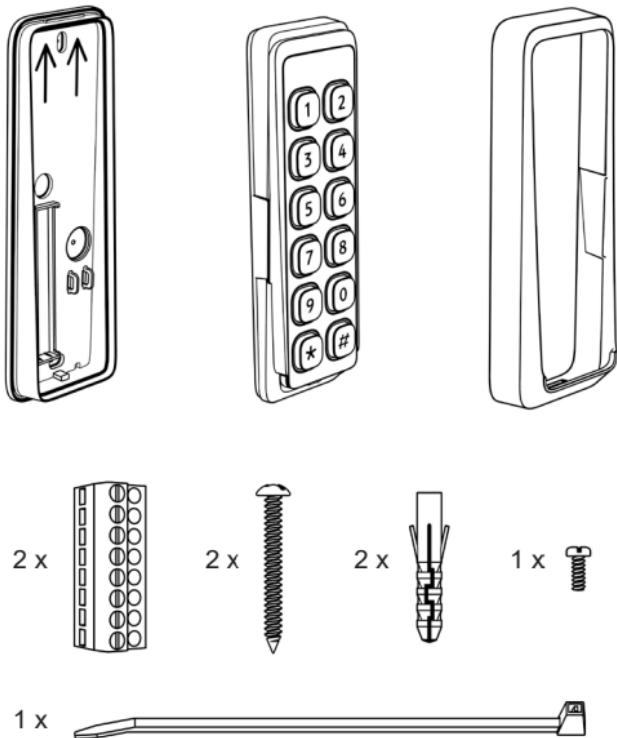

---


## Package content:

- 1pc Installation plate
- 1pc Reader module with front plate
- 1pc Front cover
- 2pcs Terminal connector (8-pin)

- 2pcs Installation screws
- 2pcs Screw plugs
- 1pc Cable strip
- 1pc Fixing screw
- 1pc Quick installation guide

\* Please note that all pictures in this manual are illustrations and do not represent the actual sizes and form of the components.


# 5

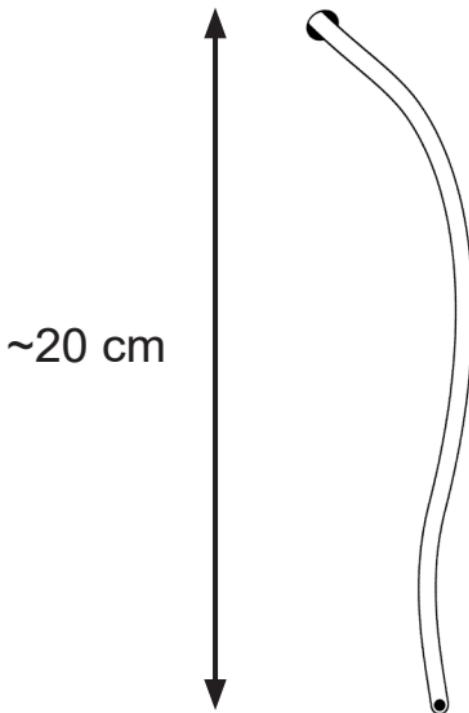

---


In order to facilitate installation a cable length of 20cm is recommended.

# 6

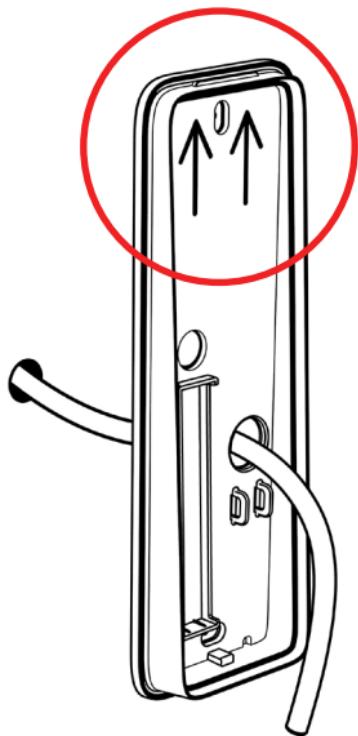


---

Ensure that the installation plate is fixed in the correct direction, i.e. the arrows pointing upwards.

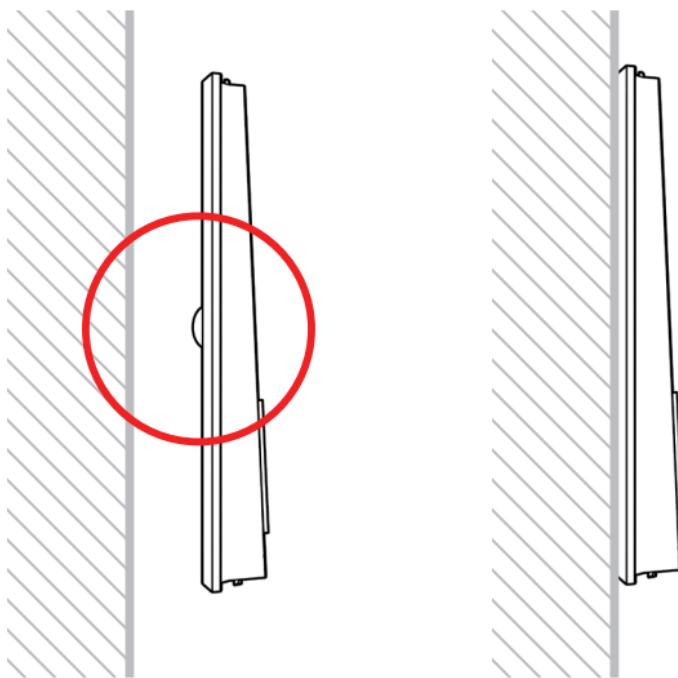

---


Ensure that the area behind the tamper switch bulb of the installation plate is flat, to be able to push the bulb for correct tamper alarm functionality. If it is not flat enough, you will find accessories in this manual that will assist with improving this functionality.

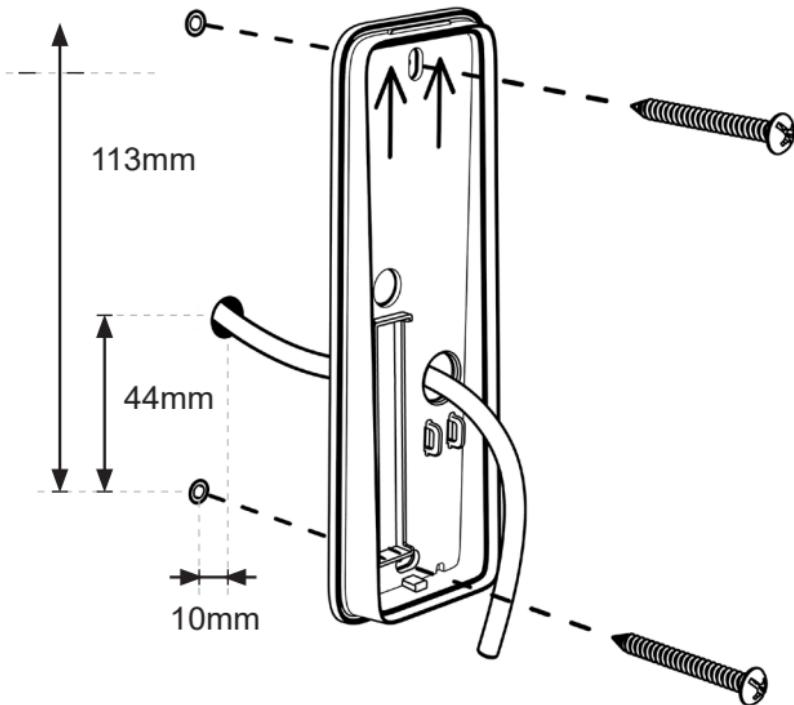

When installing directly to wall or door, use the installation holes as picture describes. If using other screws than the ones supplied with the reader, make sure to use a flat headed screw with a maximum height of 2.8 mm and a maximum diameter of 7.8 mm on the screw head.


Make sure not to tighten the screws too hard as doing so will deform and skew the installation plate. This may affect the tamper switch functionality of the reader. Countersunk screws should never be used.

9

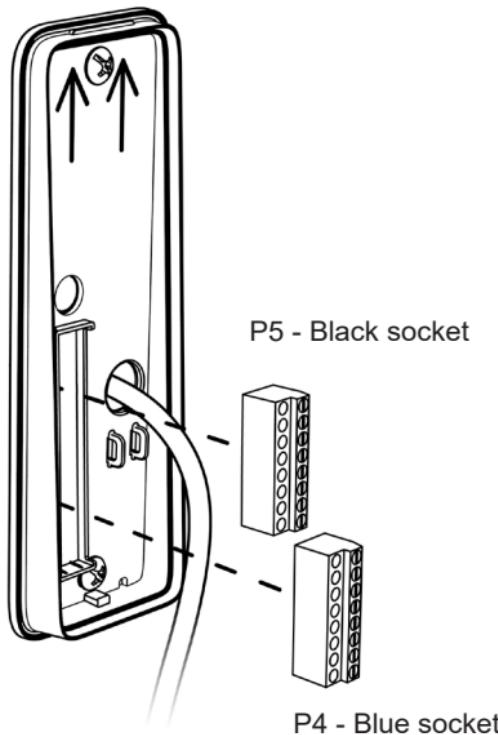


---

Make sure to place the terminal connectors with the fastening screws facing towards you.

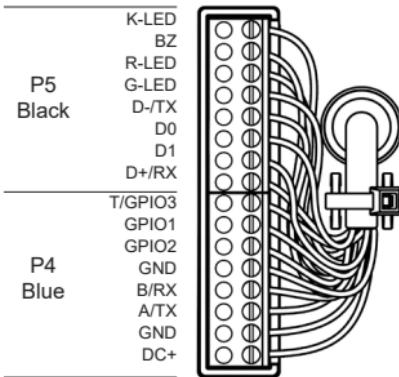

	PIN	Description	Wiegand	RS485/ OSDP
P4 - Blue	T/GPIO3	Tamper output	x	x
	GPIO1	General purpose I/O	x	x
	GPIO2	General purpose I/O	x	x
	GND	Ground	x	x
	B/RX	RS485 -	x	x
	A/TX	RS485 +	x	x
	GND	Power supply	x	x
	DC+	Power supply 9-30 VDC	x	x
P5 - Black	D+/RX	Card Present/RS485+(reserve)	x	-
	D1	Wiegand D1/CLK	x	-
	D0	Wiegand D0/DATA	x	-
	D-/TX	RS485-(reserve)	x	-
	G-LED	Green LED control	x	-
	R-LED	Red LED control	x	-
	BZ	Buzzer control	x	-
	K-LED	External Keypad LED control	x	-


1. Maximum wiegand cable length is 150 meters and requires a high quality shielded cable with minimum AWG18 dimension (=0.8231mm<sup>2</sup>) in an environment free from electrical noise. A cable with smaller dimension or an installation environment with electrical disturbances will reduce the maximum cable length.
2. Wiegand & Clock/Data requires dedicated wires for external control of Green LED, Red LED, Buzzer and Keypad backlight.
3. When utilizing the GPI/O's, each respective GPI/O1 or GPI/O2 must be connected to each respective pin and also to GND. The general purpose input/output will only be activated if so applied in the reader configuration.
4. RS 485/OSDP requires twisted pair cable.

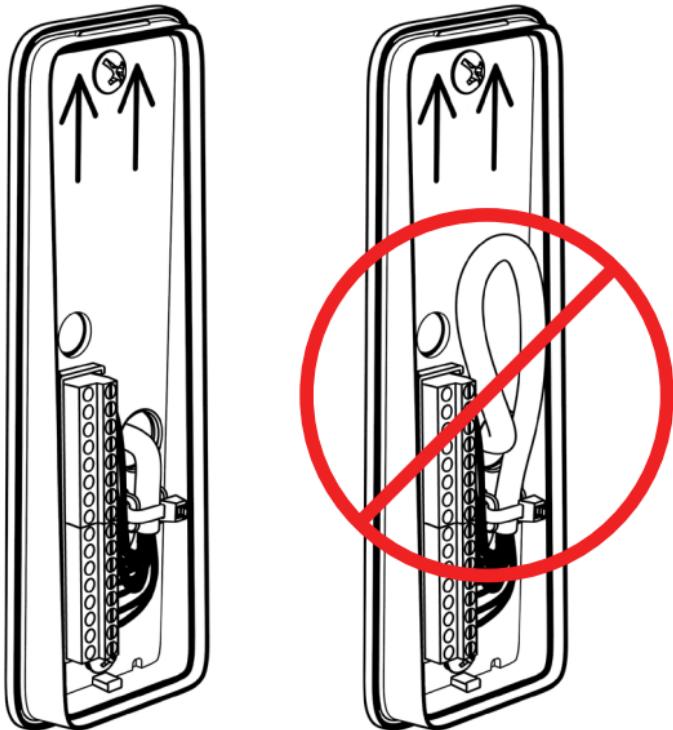

---

Make sure no excess connection cable is left in between the reader module and the installation plate.


Use the enclosed cable strip to fix the cable in the cord grip. It is recommended to connect the wires to the terminal connectors before tightening the cable strip.

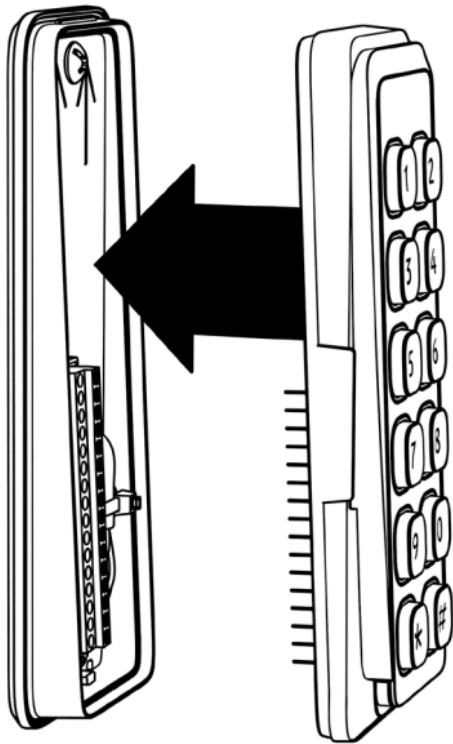

---

When installing the reader to the mounting plate ensure that the reader pin header contact perfectly aligns with the terminal connector block.

# 13

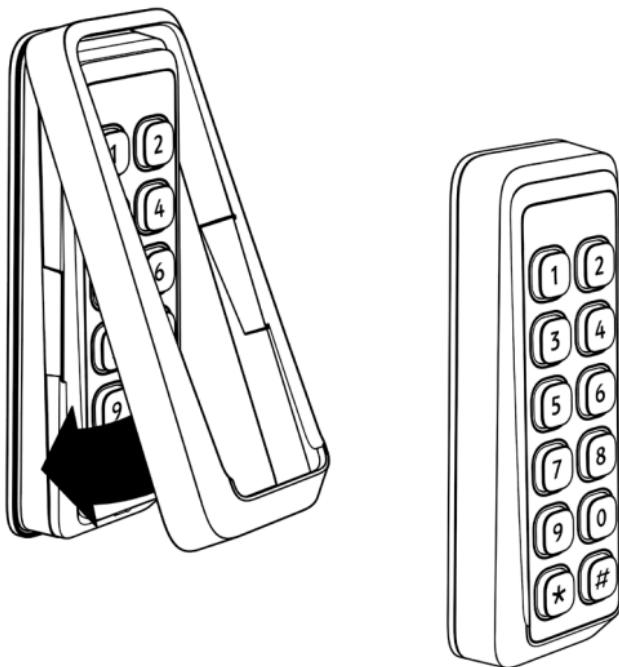

---


Mount the front cover as per the image above and make sure it is fitted correctly.

In order to do so, align and fit the top snap fastening, apply and maintain pressure on the top of the front cover while sliding the front cover over the bottom snap fastening.



---

To secure the front cover to the reader use the supplied fixing screw and fix it into the installation plate through the front cover.

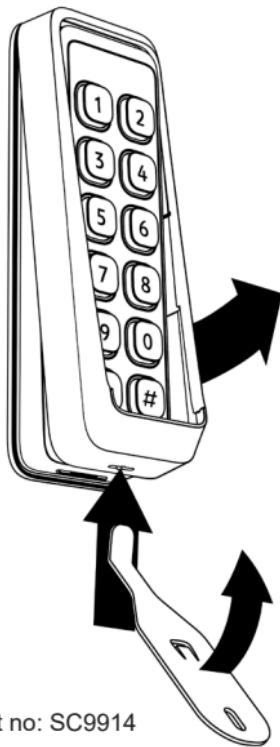


Cidron installation tool, part no: SC9914

---

To open the reader, first remove the fixing screw and then detach the front cover from the installation plate by inserting the tip of the tool into the slot at the bottom of the front cover and move the tool upwards. This will release the front cover without damaging the front cover and/or the installation plate.

# 16

## Overview, programming of reader

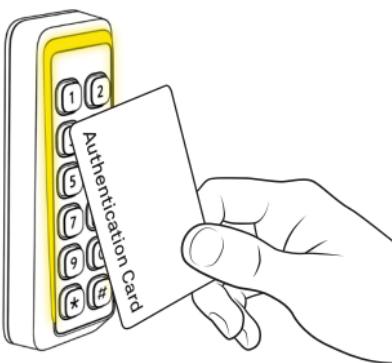

Setting the reader in programming mode

see page: 17



Configuring the reader

see page: 18



Changing authentication card

see page: 19




Resetting the OSDP secure channel.

see page: 20

# 17

## Setting the reader in programming mode

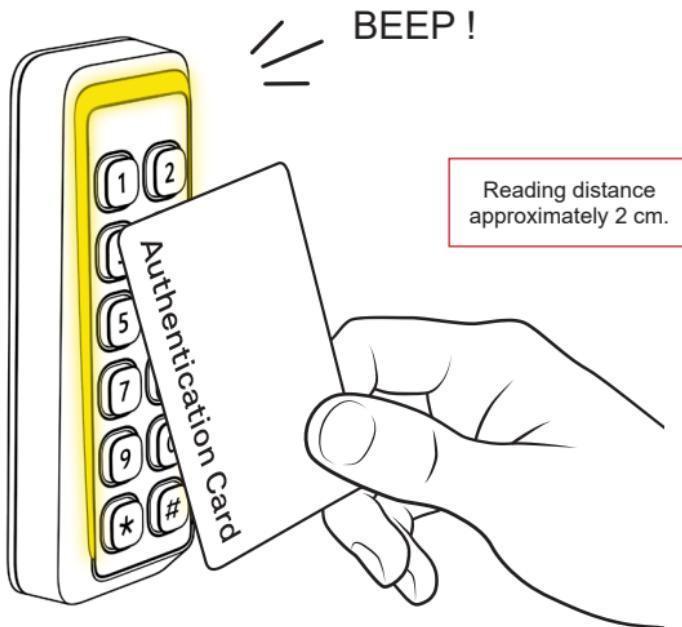


---

In order to set the reader in programming mode, present the valid "Authentication Card" to the reader as shown. The reader will beep and start blinking yellow to indicate that it is now in programming mode.

The Reader is in programming mode for 10 seconds. If no other programming card is presented within this time, the reader will return to normal mode. When a reader leaves programming mode it is indicated by a blinking red LED and a beep.

Note: for above 3.80.04 firmware version, the LED status of authorization mode is yellow and green flash alternately.

# 18 Configuring the reader

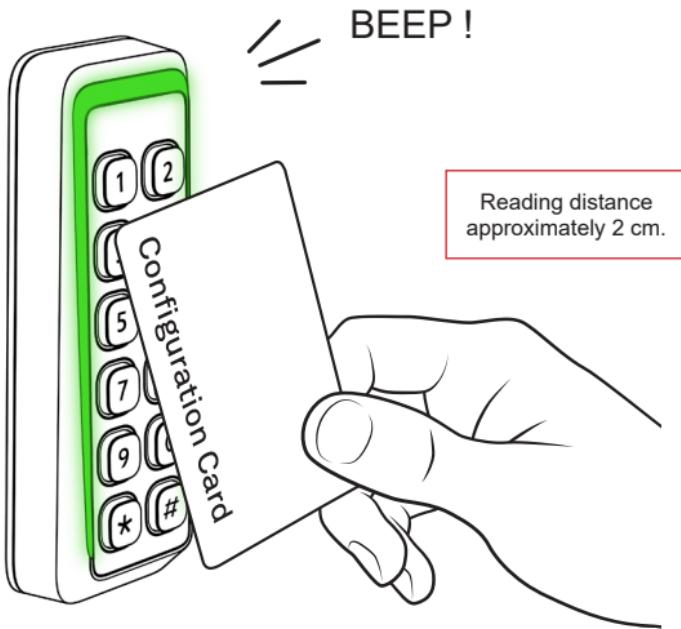


1: Set the reader in programming mode, see page: 17

2: Present the "Configuration Card" to the reader as shown. Keep the card within reading distance until the reader beeps and blinks in green. The reader is now programmed and ready for use according to the configuration settings on the configuration card.


# 19

## Changing authentication card

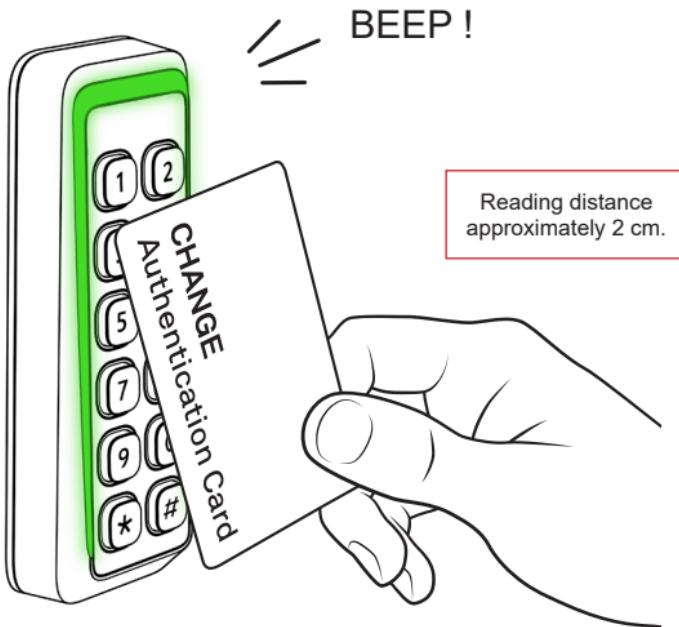

1: Set the reader in programming mode, see page: 17


2: Present the "CHANGE Authentication Card" to the reader as shown. Keep the card within reading distance until the reader beeps and blinks in green. The reader is now reprogrammed to only be set in programming mode by the new "Authentication Card". The old "Authentication Card" is no longer authorized to set the reader in programming mode.

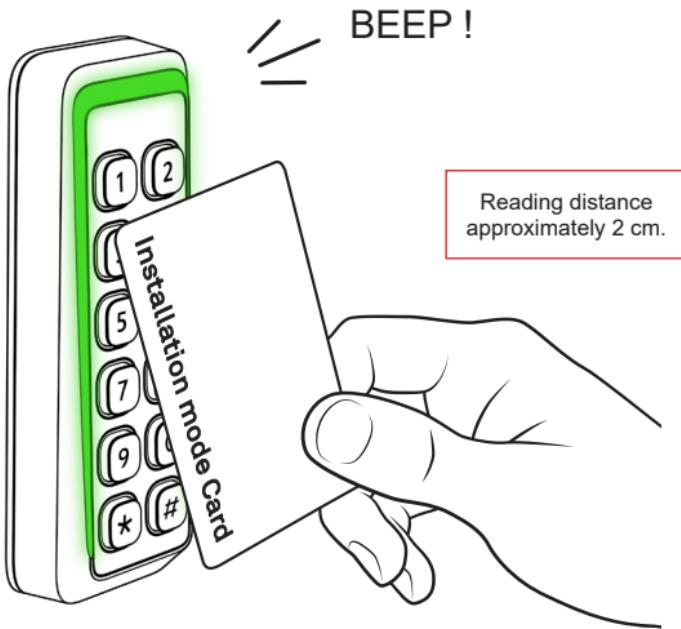

---

1: Set the reader in programming mode, see page: 17

2: Present the "OSDP Installation mode Card" to the reader as shown. Keep the card within reading distance until the reader beeps and blinks in green. The reader has now reset the secure channel encryption keys to installation mode.

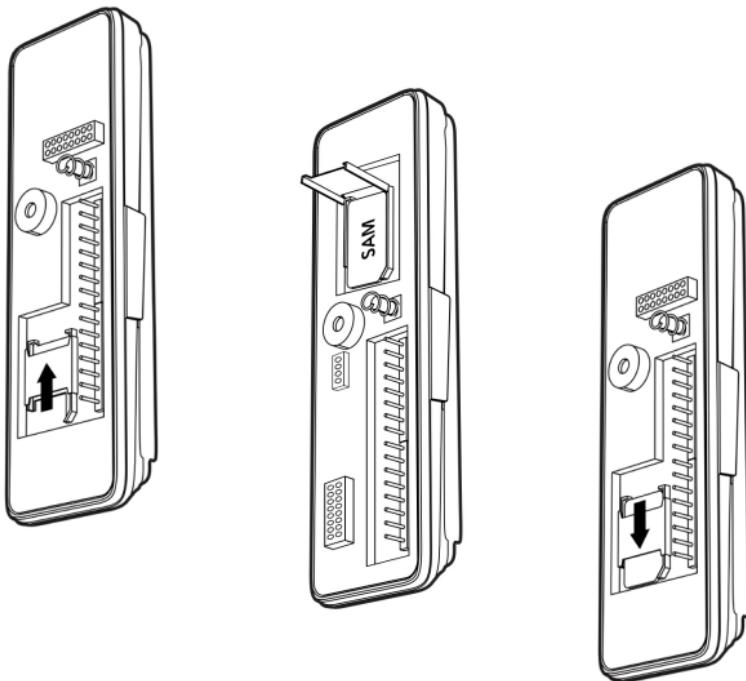

MIFARE® SAM AV2 (SIM Card),  
Software ISLOG SAM Manager.

---

In order to install the SAM into the reader open the SAM socket by unlocking and opening the lid. Then place the SAM into the socket lock it into place by closing the lid and sliding it into locked position.

22

# CIDRON

## Accessories


---

Cidron Slimline Reader

---

# 23

## Distance plate, Slimline

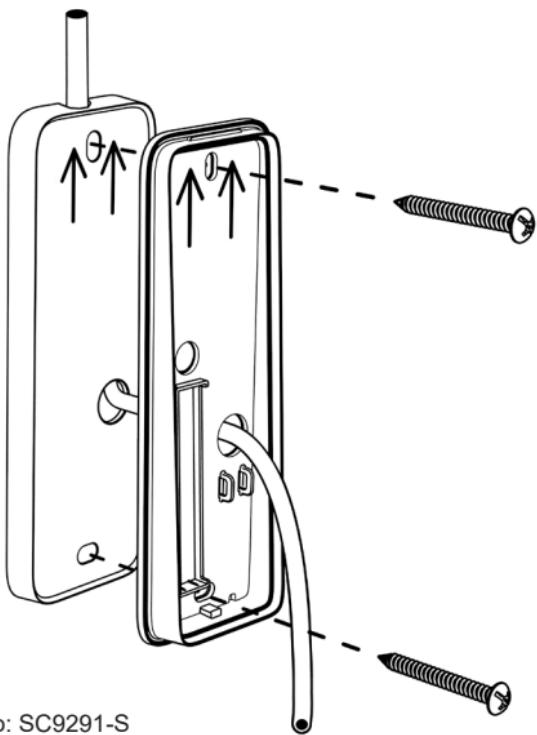


Matte black, part no: SC9291-S  
Matte white, part no: SC9291-V

---

The distance plate can be used for example when installing readers in environments where the installation surface is uneven or/and external wiring at the same side as the reader.

# 24

## Distance plate, large, Slimline

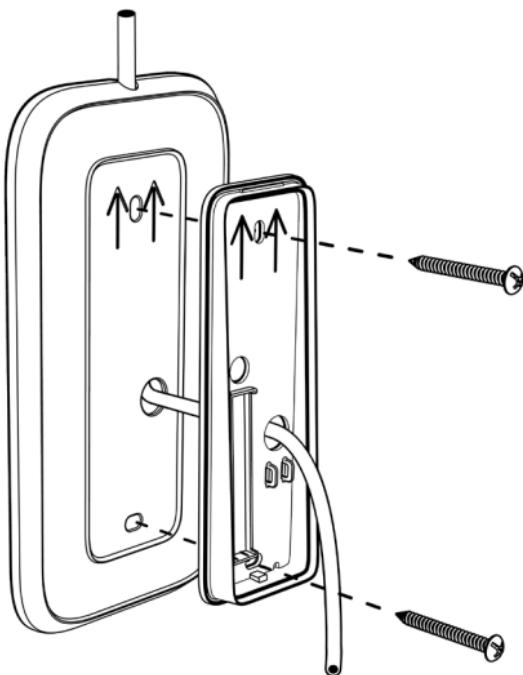

Matte black, part no: SC9297-S


Matte white, part no: SC9297-V

---

Used to install readers on an area where additional cover is needed to hide old installation holes or on uneven surfaces. Can also be used with external wiring on the same side as the reader.

25

Distance plate, angled 10°  
Slimline

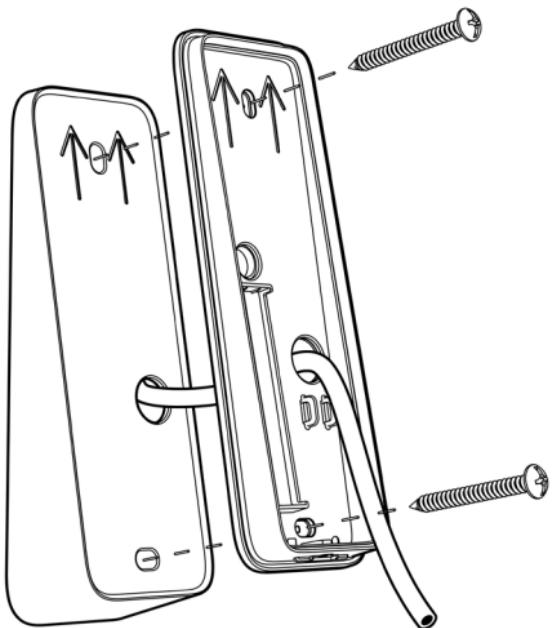

Matte black, part no: SC9293-S


Matte white, part no: SC9293-V

---

Used to increase accessibility as well as visibility of the keypad.

# 26

## Distance plate, angled 33° Slimline

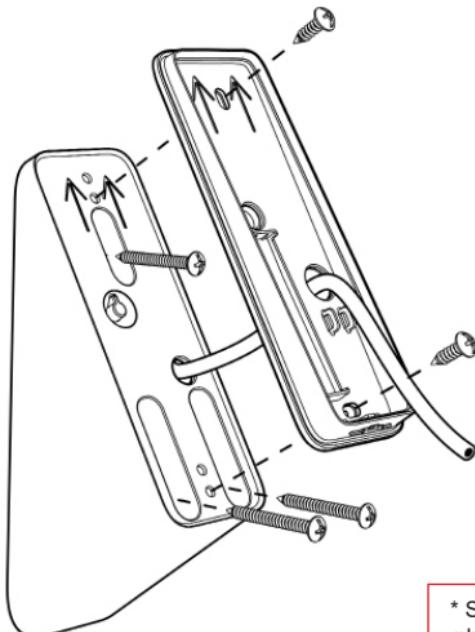

Matte black, part no: SC9292-S

---

Used to increase accessibility as well as visibility of the keypad.  
Recommended height is 900mm (center of reader) above the ground/floor.

# 27

## Distance plate, angled 33° QR-CODE MODE




\* Screws and screw plugs included with accessory.

Matte black, part no: SC9292-SQ

---

1. Red wires(DC+), The first PIN that connects to the terminal block
2. Black wires(GND), The second PIN connects to the terminal block
3. Green wires(RX), The 9 PIN connects to the terminal block
4. White wires(TX), wires(GND), The 12 PIN connects to the terminal block

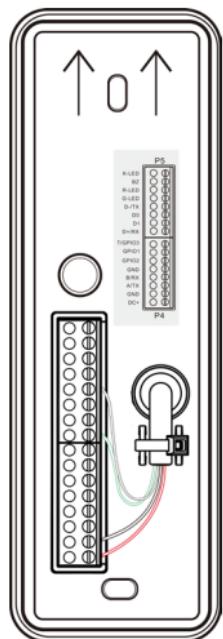


\* Screws and screw plugs included with accessory.

Matte black, part no: SC9292-SQ

---

1. Red wires(DC+), The first PIN that connects to the terminal block
2. Black wires(GND), The second PIN connects to the terminal block
3. Green wires(RX), The 9 PIN connects to the terminal block
4. White wires(TX), wires(GND), The 12 PIN connects to the terminal block

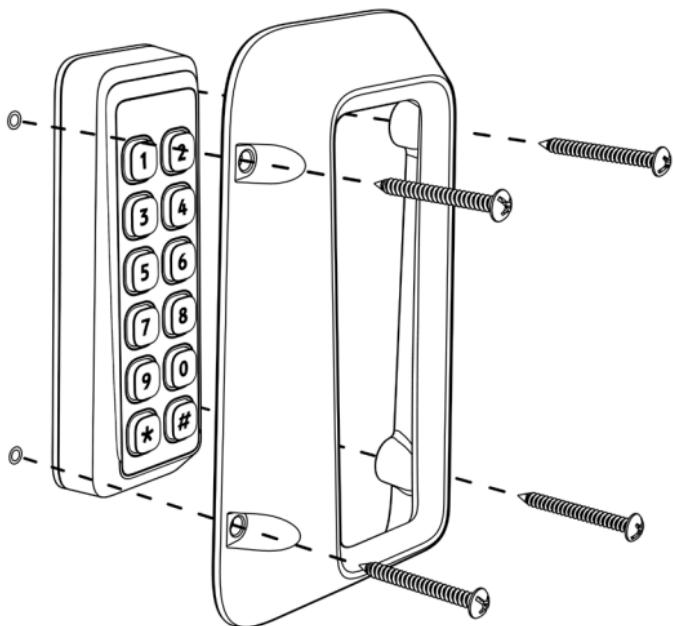

Matte black, part no: SC9280-S


\* Screws and screw plugs included with accessory.

---

The vandalization protection is an accessory that shields the reader and helps it withstand violence by absorbing and redirecting external forces away from the reader. Can be retro-fitted to already installed readers.


# 30

## Distance plate, large + Vandalization protection, Slimline

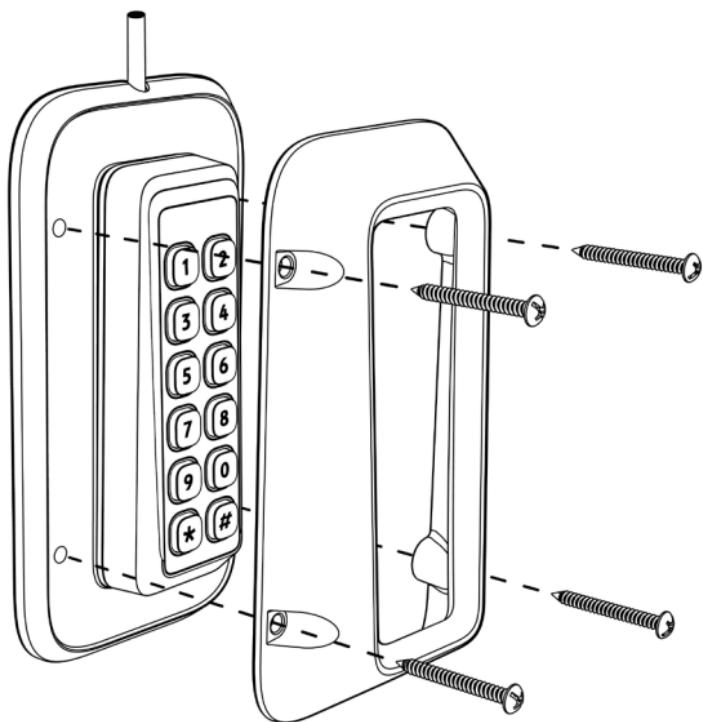

---

A recommended combination when external wiring is needed together with the vandalism protection. Can also be used for covering up old installation holes.

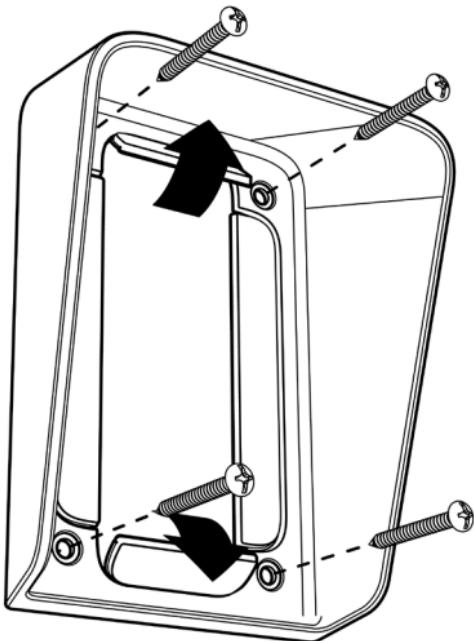

Transparent, part no: SC9901-T  
White, part no: SC9901-V

\* Screws and screw plugs included with accessory.

The transparent version SC9901-T is recommended to use for increased protection from rain and snow while still providing great visibility and accessibility in a slender format.

When installing readers in intense sunny conditions, the white version SC9901-V is recommended to use as a shading accessory to provide an environment for the reader without direct intense sunlight. In these conditions, it is also recommended to use white readers.

SC9901-V can also be used as PIN-privacy protection and/or increased climate protection.

When installing the climate- & privacy protection, use a pair of pliers to remove the plastic break-off parts to fit your reader model.

Use compressed air in between the buttons to remove dust and dirt and after that Isopropyl alcohol can be used with a piece of fabric to rub in between the buttons and the reader exterior.

---

The Cidron reader family are intended for Sale to professional security companies and installation by experienced security professionals. Civintec Global can not provide assurance that any entity or person buying or obtaining the product is properly experienced or trained to correctly install security related products including card readers.

---

CiVinTec Global Co., Limited.

[info@civintec.com](mailto:info@civintec.com)  
[www.civintec.com](http://www.civintec.com)

Version 3.1 April 20, 2021

---

## **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.