

Bluetooth Speaker Instruction Manual LZH57

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.

In the Box


- ESP-AD24 Audio Dome Lighted Bluetooth Speaker (x1)
- USB-C Charging Cable (x1)
- Instruction Manual (x1)

Safety Precautions

- This device is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Product

Back of Speaker

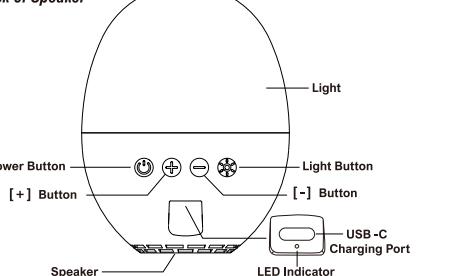

Instructions

Be sure to fully charge the speaker before using for the first time.

Charge the Speaker

- Plug the small connector of the included charging cable into the USB-C charging port on the back of the speaker.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator on the back will glow **RED** when charging and turn off when fully charged.
- On lower power, you will hear a voice prompt saying "Low battery," indicating that the speaker needs to be recharged.

White Noise Mode

- Press and hold the **Power button** for 3 seconds to power ON. The speaker will enter **white noise mode**.

- Press the **[+]** button and **[−]** button to select sound.
- Press and hold the **[+]** button to increase volume.
- Press and hold the **[−]** button to decrease volume.
- Press and hold the **Power button** again for 3 seconds to turn off the speaker.

Pair & Connect with a New Device

- Press and hold the **Power button** for 3 seconds to power ON.
- Press and hold the **Light button** to enter Bluetooth mode. You will hear a voice prompt saying "Bluetooth is connecting." The LED indicator on the back of speaker will flash **BLUE** indicating the speaker is in pairing mode.
- Open the Bluetooth menu on your smart device and search for new devices.
- When you see "**Audio Dome Light**" listed, tap it to connect. You will hear a voice prompt saying "Bluetooth Connected," and the LED indicator will stay **SOLID BLUE** when paired successfully.
- Previously paired speaker will pair automatically after they are powered on.
- Press and hold the **Power button** again for 3 seconds to turn off the speaker.
- **Note:** The speaker will automatically shut off after 5 minutes when it is disconnected.

Playing Music

- Press the **Power button** to play/pause your audio.
- Press the **[+]** button to skip to next track;
- Press and hold the **[+]** button to increase volume.
- Press the **[−]** button to skip to previous track;
- Press and hold the **[−]** button to decrease volume.
- **Note:** There is no microphone in the speaker. You need to use your smartphone to answer phone call.

Using the Light

- Press and hold the **Power button** for 3 seconds to power ON.
- The light will turn on and enter **color-changing light mode**.
- Press the **Light button** to select the color of light and to turn off the light.
- **Note:** The light can be used in both white noise mode and Bluetooth mode.

Reset the Speaker

- If you have trouble pairing your speaker, forget the pairing name "**Audio Dome Light**" from the list of the connected device and turn off the Bluetooth.
- Follow the instructions under "**Pair & Connect with a New Device**" to pair with the speaker again.

Tech Specifications

Speaker Output	5W
Impedance	4 ohm
Frequency Response	20Hz - 20KHz
S/N Ratio	>80dB
Connection Range	33 feet
Continuous Play Time	Up to 4 hours
Battery Capacity	500mAh/3.7V 1.85Wh
Power Input	DC 5V/500mA
Charging Time	1 hour
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure



35mm



16 mm

110mm

74 mm

74 mm

74 mm

74 mm

74 mm