

TELESIN

# Fun Shot Magnetic Grip

趣拍乐·磁吸乐享版

User Guide / 使用指南


# 前言

感谢您购买Telesin产品。

## 重要提示

- 在使用本产品前, 请仔细阅读本手册。
- 请妥善保管本手册。若其他用户需要使用本产品, 请随产品一并提供本手册。
- 请注意本用户手册中的所有警告, 并遵循所有指示。
- 请勿拆卸或损坏本产品。若产品变形或进水, 请立即停止使用。
- 请将本产品放置在儿童触及不到的地方。

## 产品介绍

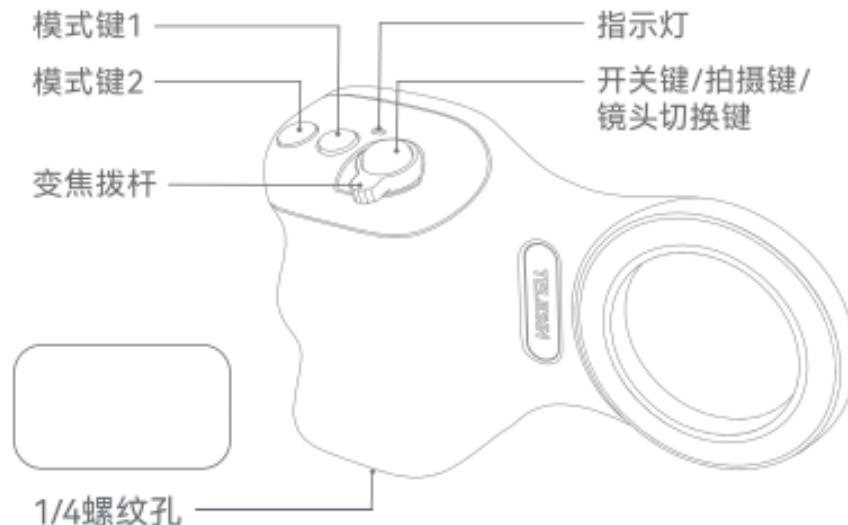

变焦拨杆: 拍照和摄像过程中, 拨动拨杆可进行变焦

拍摄键: 1. 长按: 2秒进行开关机

2. 单击: 开始/停止摄像

3. 半按双击: 切换前后镜头



4. 半按单击: 对焦

模式键: 1. 进行拍摄模式的切换

2. 在横屏模式下, 半按对焦后, 模式键可调节曝光

## 操作说明

1. 首次使用请将电池塑胶片取下。

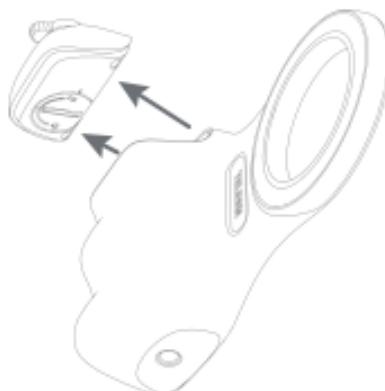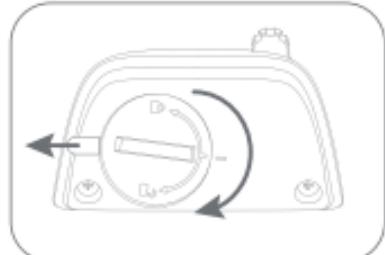

2. 将产品吸附在手机背面。(磁吸适配机型  
请参考产品参数表)



3. 长按拍摄键2秒开机，点击蓝牙名称(TELESIN\_MG)进行蓝牙连接；如2分钟未连接则设备关机。
4. 苹果手机连接蓝牙后仅可使用拍摄键。首次使用其他按键功能，请进行如下操作：  
进入设置-->辅助功能-->缩放-->打开缩放



\* 打开“缩放”时，画面会放大，三指轻点两下恢复。其它设置不变。

## 开关机

开机：长按遥控器2秒开机，指示灯闪烁，进入蓝牙配对状态。  
关机：

1. 开机或休眠状态下，长按拍摄键2秒，指示灯快闪3下后熄灭，遥控器关机。

2. 休眠状态持续30分钟后，遥控器自动关机节电。
3. 开机后，2分钟内无配对则自动关机。

## 快速唤醒

屏幕状态	黑屏 所有状态	亮屏 未解锁状态
苹果系	长按模式键1	单击模式键2
安卓系&鸿蒙	长按模式键1	长按模式键1
OPPO系	长按模式键1-先亮屏 再次长按模式键1	长按模式键1

## 进入休眠状态

1. 开机配对后5分钟无操作，自动进入休眠。
2. 助拍器与手机处于连接状态时，在手机里面手动取消配对、远距离断开、关闭手机的蓝牙，助拍器进入休眠状态，休眠状态持续30分钟后，遥控器自动关机节电。

## 休眠唤醒

休眠状态下，单击任意按键即可唤醒。

1. 休眠唤醒后，如上一次已配对手机蓝牙是打开状态，直接自动连接。
2. 如果上一次已配对的手机蓝牙关闭，指示灯开始闪烁2分钟

后无配对，进入休眠状态，30分钟后关机。

## 低电量提醒

低电时，所有指示灯状态变为红色时，电量低于20%，请注意更换电池。

## 更换电池

取下遥控器，使用配套拆卸工具拆卸电池仓盖，顺时针拧松，更换电池型号为：纽扣电池CR1632。

## 注意事项

在复杂环境或人流量较大场景下，请务必搭配磁吸手机壳+手机绑绳使用，请勿将产品用于高冲击等运动场景下。



该助拍器适用于苹果12及以上手机使用，如果您的手机非以上机型，或带壳使用可以选择以下两种方案：

### 1.选用强力磁吸手机壳

(磁吸手机壳不包含在套装中，请另行购买)

### 2.选用引磁片

选择表面光滑平整的手机壳，将金属环贴在上面，轻轻按压，

然后等待12小时后再使用，手机壳中的油性材料会影响粘度，如液态硅胶型或有图案的手机壳，所以不建议使用。

禁止将金属环直接贴在裸机背面！

禁止将引磁片重复粘贴，以避免粘性降低！

## 产品参数

产品型号:	P1-MP-10
材质:	ABS+PC+铝合金
产品尺寸:	124.7mm*79.6mm*37.7mm
产品重量:	107.6g
电池型号:	CR1632
电池标称电压:	3.0V
蓝牙适配机型:	苹果、安卓、鸿蒙机型
磁吸适配机型:	苹果12~16全系列，其他机型需适配自带磁吸的手机壳，或粘贴引磁片使用

## 警告

1. 本产品内含纽扣电池，为保障安全，使用后请将废旧电池妥善处理，切勿随意丢弃或焚烧。同时，要确保电池远离儿童和宠物，避免意外发生。

2. 本产品内含纽扣电池, 危险勿触! 纽扣电池若被吞食, 可能造成食管灼伤等严重伤害。请妥善保管, 防止儿童接触。如不慎吞食, 请立即就医。
3. 纽扣电池易被儿童误吞食, 为避免潜在危险, 请将其存放在儿童接触不到的位置, 防止因误食、塞入鼻腔或耳朵等引发严重后果。
4. 本产品兼容的电池类型为CR1632。
5. 本产品使用的电池标称电压为3.0V。
6. 本产品内含的纽扣电池不可再充电。
7. 请勿强制排放、重新充电、拆卸、加热至60°C以上或焚烧。以防电池过热、起火或爆炸, 从而导致人员受伤或化学灼伤。
8. 请严格按照产品说明书的要求正确安装和更换纽扣电池。正负极安装错误可能导致电池短路、发热甚至引发火灾。若在使用过程中发现电池有异常, 应立即停止使用。
9. 如长期未使用的设备, 请从中取出并立即回收或处理电池。
10. 如果电池盒关闭不牢固, 请停止使用产品, 应立即取出电池, 并使其远离儿童。

## 免责声明

请仔细阅读本声明,一旦使用本产品,即视为对本声明的全部认可和接受。每次使用前,请仔细检查产品,若出现破损、变形,请勿使用。使用本产品,就意味着您认可并同意,您将对使用本产品的行为和可能产生的后果负全部责任。您承诺仅会出于正当合法的目的使用本产品。您理解并同意,对于直接或间接因使用本产品而造成的滥用、不利影响、损害、伤害、惩罚或者其他法律后果,泰迅数码有限公司(以下简称"Telesin")将不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项。在国家法律法规范围内,本承诺解释权、修改权归Telesin所有。

本产品保修期为6个月。


## Foreword

Thankyou for purchasing Telesin product.

## Important Notes

- Before using this product, read this manual carefully.
- Keep the manual properly. If other users want to use this product, give this manual with the product.
- Note all the warnings and follow all the instructions in this user manual.
- Do not disassemble or damage the product. If the product is deformed or gets wet, stop using it immediately.
- Keep this product out of reach of children.

## Product introduction

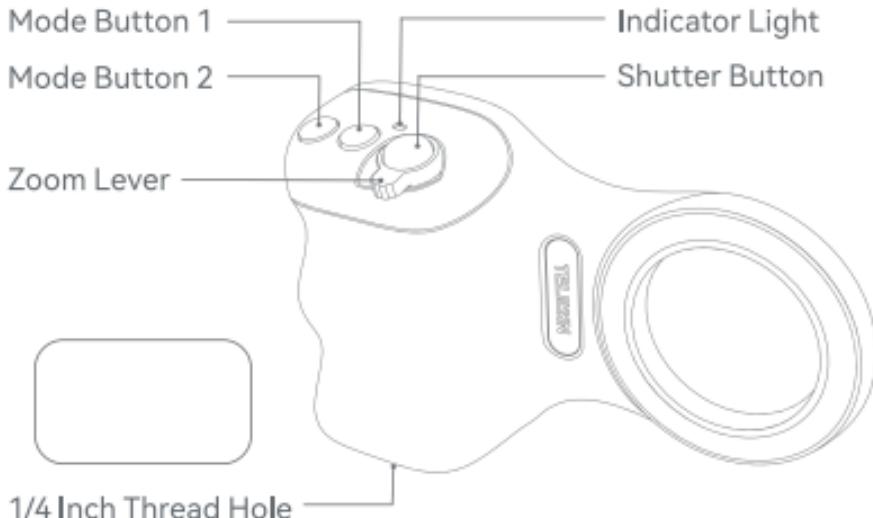

**Zoom Lever:** During photo and video shooting, you can zoom in and out by sliding the lever.

**Shutter Button:**



1. Long Press: Turn the device on/off after pressing for 2 seconds.
2. Single Press: Start taking photos/recording videos.
3. Half Press double Tap: Switch between front and rear cameras.
4. Half Press: Focus

**Mode Button:**

1. Switch between shooting modes.
2. In landscape mode, after half-pressing to focus, the mode button can adjust the exposure.

## Operation Instructions

1. For first-time use, please remove the plastic battery tab.

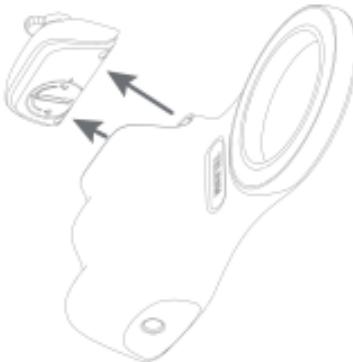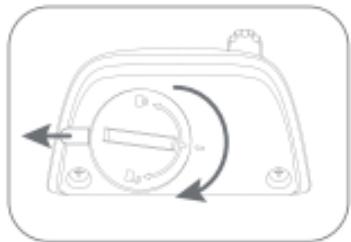


2. Attach the product to the back of the phone. (For compatible magnetic models, please refer to the product specifications.)



2. Power on by holding shutter for 2s, connect via Bluetooth TELESIN\_MG. Auto shut-off if not connected within 2 mins.
3. iPhone: Bluetooth enables shutter only. First use of other functions requires enabling Zoom in Settings > Accessibility

Go to Settings -Accessibility- Zoom - Turn on Zoom

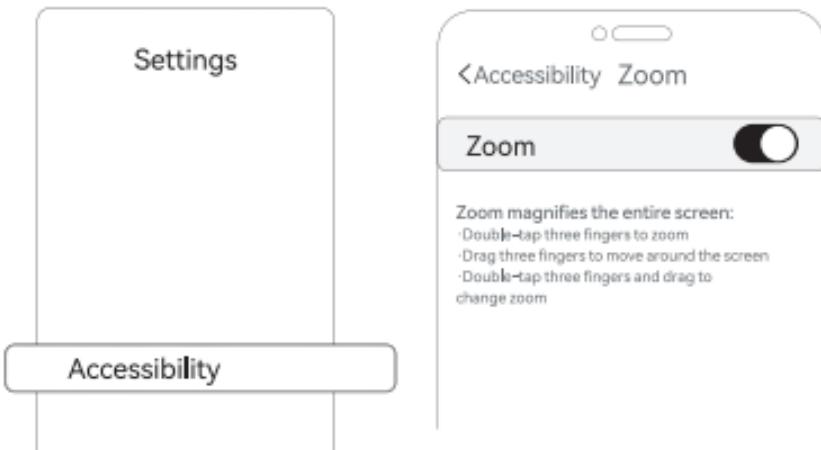

\* (triple-tap with 3 fingers to restore).

## Power On/Off

Power On: Press and hold the remote control for 2 seconds to turn it on. The indicator light will flash, entering Bluetooth pairing mode.

Power Off:

1. In the on or sleep mode, press and hold the shooting button for 2 seconds. The indicator light will flash quickly three times and then go out, turning off the remote control.

2. If left in sleep mode for 30 minutes, the remote control will automatically turn off to save power.
3. If not paired within 2 minutes after powering on, it will automatically power off.

## Quick Wake-up

Screen Status	Black Screen All States	Screen on Unlocked status
iOS	Long Press Mode Button 1	Click mode button 2
Android & HarmonyOS	Long Press Mode Button 1	Long Press Mode Button 1
OPPO	Long Press Mode Button 1-First Light Up Screen. Long Press Mode Button 1 Again	Long Press Mode Button 1

## Entering Sleep Mode

1. Auto-sleep after 5min inactivity post-pairing.
2. Disconnects via phone settings, distance, or Bluetooth off, put it to sleep. Auto-off after 30min.

## Waking from Sleep Mode

Press any button to wake up.

1. Auto-reconnects if last paired phone's Bluetooth is on.
2. If the previously paired phone's Bluetooth is off and there's no pairing within 2 minutes, the device will enter sleep mode and shut down after 30 minutes.

## Low Battery Reminder

When the battery is low, and all indicator lights turn red, it indicates that the battery level is below 20%. Please replace the battery.

## Battery Replacement

Remove the remote control and use the provided tool to disassemble the battery compartment cover by turning it clockwise to loosen it. The battery model to be replaced is: button cell CR1632.

## Note

In complex environments or crowded scenarios, please be sure to use the product with a magnetic phone case and a phone lanyard. Do not use the product in high-impact or other sports scenarios.



This grip is suitable for use with iPhone 12 and above. If your phone is not one of these models, or if you use a phone case, you can choose one of the following two options:

## 1. Use a strong magnetic phone case

(The magnetic phone case is not included in the set, please purchase separately)

## 2. Use a magnetic sticker

Choose a smooth and flat phone case, attach the metal ring to it, press gently, and then wait for 12 hours before use. The oily material in the phone case, such as liquid silicone or patterned cases, can affect adhesion, so they are not recommended.

Do not attach the metal ring directly to the back of the bare phone!

Do not reapply the magnetic plate to prevent a reduction in adhesiveness!

## Product Parameters

Product Model:	P1-MP-10
Material:	ABS+PC+Aluminum Alloy
Product Size:	124.7mm*79.6mm*37.7mm
Product Weight:	107.6g
Battery Model:	CR1632
Battery nominal voltage:	3.0V
Bluetooth Compatible Devices:	Apple, Android, HarmonyOS devices

Magnetic compatibility:

iPhone 12 to 16 series. Other models require a magnetic phone case, or an adhesive magnetic plate.

## Warnings

### ⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH or serious injury can occur if ingested.**
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP new and used batteries OUT OF REACH of CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



1. This product contains a button battery. For safety reasons, please dispose of used batteries properly and do not discard or burn them carelessly. Also, ensure that the batteries are kept away from children and pets to avoid accidents.
2. Button batteries can be easily swallowed by children. To avoid potential dangers, please store them in a location out of reach of children to prevent serious consequences such as accidental ingestion, insertion into the nose or ears.
3. This product contains a button battery. Danger, do not touch! If swallowed, the button cell may cause serious injuries such as esophageal burns. Please store it properly to prevent children from accessing it. In case of accidental ingestion, seek medical attention immediately.
4. This product is compatible with CR1632 battery type.
5. The nominal voltage of the battery used in this product is 3.0V.
6. The button battery included in this product is not rechargeable.

7. Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. If the device has not been used for a long time, please remove the battery and recycle or dispose of it immediately.
11. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## **FCC Caution**

### **15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **15.21 Information to user.**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **15.105 Information to the user.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**\*RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

## **IC Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **RF exposure statement:**

The device was evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à utiliser l'équipement.

Déclaration d'exposition RF:

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF. L'appareil peut être utilisé en condition d'exposition portable sans restriction.

## **Disclaimer**

Please read this statement **carefully**. Once you use this product, it is deemed that you **fully** recognize and accept this statement. Before each use, please **carefully** check the product. If it is damaged or deformed, do not use it. By using this product, you **acknowledge** and agree that you **will** be **fully responsible** for the actions and possible consequences of using this product. You **promise** to use this product **only for legitimate and legal** purposes. You understand and agree that Telesin Digital Co., Ltd. (hereinafter referred to as "Telesin") **will not be liable** for any abuse, adverse effects, damages, injuries, penalties or other **legal** consequences directly or indirectly caused by the use of this product. Users should **follow** the usage precautions mentioned herein and others. Within the scope of **national laws** and regulations, the right to interpret and modify this commitment belongs to Telesin. The Telesin warranty period starts from the day you receive the goods and enjoys a 6-month warranty service.

[www.telesin.com](http://www.telesin.com)