 


Swimming earphones


USER MANUAL

Product Function Diagram




1. How to Wear

For optimal performance, wear the headphones as shown in the diagram.

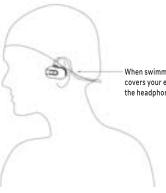

When swimming, ensure the swim cap covers your ears and a small portion of the headphones for a secure fit.

2. Product Overview

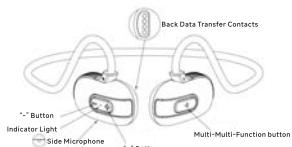

- Volume: Tap “-” to decrease, and “+” to increase.
- Track Selection: Hold “-” for the previous track, hold “+” for the next track.
- Play/Pause & Calls: Tap the Multi-Function button to play/pause or answer/end calls. Hold for 1 second to reject a call.
- Local Playback Mode: Triple-tap the Multi-Function button to switch between single-track repeat and all-track repeat.
- Voice Assistant: Hold the Multi-Function button for 2 seconds until you hear a beep to activate voice assistant.

3. Operating Instructions

Power & Connectivity

- Power On: Hold the Multi-Function button for 2 seconds. The blue light will flash 1 second.
- Pairing Mode: Hold the multi-function button until the headphones are in pairing mode. Select the device on your phone. Note: Only one device can be connected at a time.
- Switching Playback Mode: Double-tap the Multi-Function button to switch between Bluetooth and local playback.
- Power Off: Hold the Multi-Function button for 4 seconds. The red light will flash briefly before shutting off.



4. Charging & Data Transfer

To charge or transfer data:

- Connect the USB end of the magnetic charging cable to your computer or adapter.
- Align the magnetic end to the back contact points of the headphones.
- Note: Keep the back contact points and charging base clean to prevent charging failures or data transfer issues.

5. Using the Headphones While Swimming

5.1 Pre-Swimming Preparation

- Switch to MP3 mode before entering the water.
- Wear a well-fitted swim cap.
- Position the headphones correctly: L for the left ear, R for the right ear.
- Tuck part of the headphone wire under the swim cap to keep them secure.

5.2 Safety & Precautions

- Do not disassemble or modify the headphones to avoid damage or hazards.
- Unplug the charger after charging; do not leave it plugged in for over 12 hours.
- Avoid damaging the battery; do not expose it to heat or impact.

- Charging base and cable are not waterproof—keep them dry.
- Do not use in ocean water.
- Bluetooth signals do not work underwater beyond 1 meter—use local playback mode when swimming.
- Follow local swimming pool regulations when using the headphones in public facilities.
- These headphones are suitable for freshwater, pool water, tap water, and sweat but do not expose them to other liquids.
- Avoid high-volume music for long duration to protect hearing.
- After swimming, dry the headphones with a towel and air dry in a ventilated area—do not expose to direct sunlight.

6. Basic Specifications

- Product model: B55
- Bluetooth Version: V5.3
- Battery: Polymer lithium battery
- Transmission Range: 33 Feet (No obstructions in the middle)
- Charging Time: ~2 hours
- Charging Port: Magnetic Base
- Internal Memory: Built-in memory card
- Waterproof Rating: IPX8
- Weight of headphones: about 26 grams

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.