

材质:70g 书写纸 尺寸:95*60(展开95*720)mm 双面黑色印刷 12页

Instruction Manual


Touch Control Gaming Earbuds

VG22-GSPL-TWSEARBUDS

Packing List


Earbud x2

 
Charging Case x1


Ear tips x2


USB Type-C Charging Cable x1


Instruction Manual

Parts Description

1. Charging port

2. Charging case LED light 1#

3. Charging case LED light 2#

 
4. Charging pin (inside the charging case)

 
 
5. Touch control area(MFB key)

6. Earbuds LED light

7. Microphone


8. Charging contact

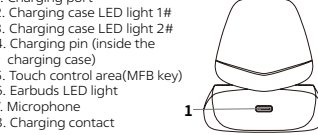

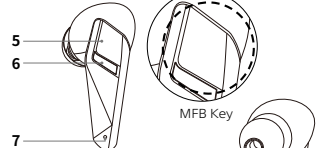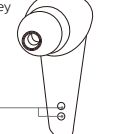



Wear

 Step 1: Choose the suitable ear tips for earbuds.



 Step 2: Please note the left and right earbud, wear it in the ears and adjust it to a comfortable position.

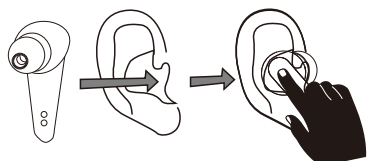


How to pair and use


1. Open the charging case which contains two earbuds.



 2. Take out both earbuds from the charging case, tear off the film on the contact point, put it back to the charging case and close the cover. Reopen the case, then the earbuds will turn on automatically, then one of the earbuds will enter the Bluetooth pairing mode when red and blue lights flash alternately. When the earbuds are paired with the device successfully, a beep sound will be heard.

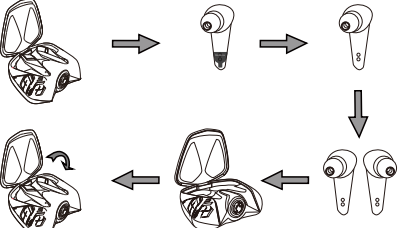

 
3. Find Bluetooth setting in your phone and select "GS_TWSEarBuds" for pairing.




4. When pairing with "GS_TWSEarBuds", some mobile phones will appear "Bluetooth Pairing Request", please select "Pair", after pairing is completed, a confirmation tone of "connected" will be heard.



 5. When pairing is completed, wear both earbuds in the ears and adjust it to a comfortable position, then you can use the earbuds for True Wireless Stereo music.

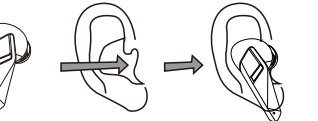

 6. The earbuds will be powered off and recharged when putting back to the charging case.




Charging Charge the earbuds

Put the earbuds into the charging case, when closing the cover, charging will be started automatically. LED light #1 will be in red during charging, when the capacity is full, red light will be off.



Charge the charging case

 Charge the Charging Case by the USB-C cable. When charging, all the light will be in red, and all the light will be off when the capacity is full.



Safety Instruction

Using earbuds at high to moderate volume for extended periods of time will result in permanent hearing damage. It is advised to keep volume level at moderate to low at all time for your safety.

Do not use earbuds while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sound.

Do not use earbuds in thunder storm whether, it may not work properly in the condition, and may increase the risk of being hit by lightning.

Earbuds may not work properly under the condition of high temperature or high humidity.

Do not use any corrosive cleaner/oil to clean the earbuds. If the earbud comes in contact with liquids, quickly wipe away, if submerged in water, do not turn the earbuds on until completely dried.

Note: Liquid submersion voids the warranty, keep the earbuds and package out of reach of children.

Controls

▶ Pause Music	Single click MFB key on either side
▶ Play Music	Single click MFB key on either side
◀ Previous	Double click MFB on left earbud
▶ Next	Double click MFB on right earbud
🗣️ Activate Voice Assistant	Triple click on either earbud
🎵 Music Mode to Game Mode	Long press either earbud for 2 seconds
Game mode to Music Mode	Long press either earbud for 2 seconds

Calls

📞 Answer Call	Single click MFB key on either earbud
📞 End Call	Single click MFB key on either earbud
📞 Reject Call	Long press either earbud for 2 seconds when a call is coming

Other

📶 Connection Distance	About 32.8 feet
🔋 Earbuds Low Battery (10%)	Red lights flash 3 times every 1 minute, a warning tone of "Battery Low" will be heard.
🔋 Charging Case Low Battery (10%)	Red lights of the charging case flash 3 times quickly every 5 seconds

Trouble Shooting

Unable to power on

Try to charge the charging case and the earbuds

Unable to charge

1. Try another charging cable or charging adapter;
2. Check whether there is any other objects at the charging contact of the earbuds or the charging case.
3. Check whether the socket is powered on and whether the charging plug is right for the charging interface.

No sound

1. Make sure the volume of playback device is normal;
2. Check whether the earbuds are turned on properly;
3. Check whether the left and right earbuds are paired successfully, unpaired earbuds can be activated by putting back the earbuds into the charging case or long press the MFB key of the left and right earbuds for 10 seconds to reset.

Unable to connect

1. Confirm whether the earbud is turned on properly;
2. Make sure that the playback device is turned on properly;
3. Make sure the playback device has switched off other connections;
4. Check whether there is obvious interference or shielding in the surroundings;
5. Check whether the playing device is right for the earbuds, the playing device must be Bluetooth 4.0 or above;
6. Check whether the left/right earbuds are paired successfully.

Sound instability

1. The connection distance between the earbud and the playback device is too far;
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of device.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS (s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of device.


This Symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact with the local authority or your retailer where you purchased the product.

• Hereby, Geeknet, Inc. declares that the radio equipment type "GS_TWSEarBuds" is in compliance with directive 2014/53/EU.

• The full text of the EU declaration of conformity is available at the following internet address: www.geeknet.com

The Bluetooth(R) word mark and logo are registered trademarks owned by Bluetooth SIG Inc. and any use of such marks by Geeknet Inc. is under license. Other trademarks and the trade names are those of their respective owners.

FCC ID: 2A6JIM-PC037
Manufactured for: Geeknet, Inc.
625 Westport Pkwy, Grapevine, TX 76051
Imported by: GameStop European Services Limited Estuary Limited Estuary House Swords Co.Dublin,Ireland
Made in China

