



Assembly Instructions & User's Manual for Member's Mark 12 FT Hanging Reaper

SKU#: 980395968
Model Number: 2233-12433
Customer Assistance (spare/replacement parts): Email: service.3fww@gmail.com

Battery Replacement

Battery Powered – Requires three (3) "C" batteries for the "Sound Box" and three (3) "AAA" batteries for the Wireless Remote Control. Please note that the batteries are included with your purchase.

To Replace Sound Box Battery:

1. Remove battery case cover. Battery case is located in the bottom of the hanging reaper. Please open the hook and loop closure and use a screwdriver to remove the safety screw and then remove the battery compartment cover (See diagram).
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 3 "C" batteries with correct polarity and replace cover and safety screw.
4. Turn switch to the "ON" position.

Replace batteries if the lights become dim or sound is distorted or faint.

To Replace the Remote Control Batteries:

1. Remove the battery compartment case cover which is located on the back of the remote control.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 3 "AAA" batteries with correct polarity and replace cover and safety screw.

Replace batteries if the Remote signal become weak.

To Activate Sound Box:

The ON/OFF switch is located on the sound box at the bottom of the head. Move the switch to the "ON" position to activate the sound box so it will interact with the remote control. Switch to "OFF" and remove batteries when not in use.

To Activate Remote Control:

Press the "LEFT" button to activate the LED lights.

Press the "RIGHT" button to activate the lights and the sounds.

(Important: The maximum remote activation distance is 20 ft.)

To Activate Sound Box:

	ON → Activate The Sound Box So It Will Interact With The Remote Control
	OFF → Switch To "OFF" And Remove Batteries When Not In Use


To Activate Remote Control:

	LEFT BUTTON → To activate the LED blinking eyes.
	RIGHT BUTTON → To activate the LED blinking eyes and the eerie Halloween sound.


1

2

Front

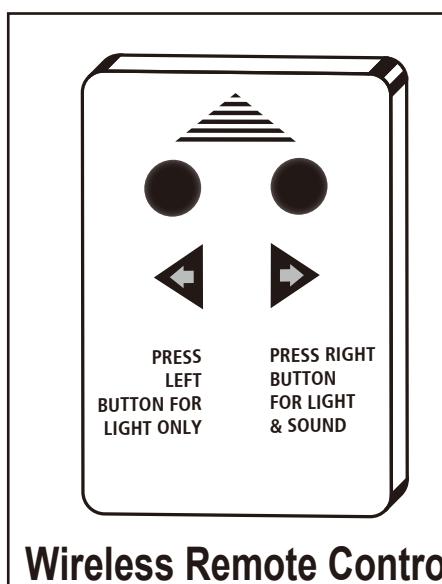

Wireless Remote Control

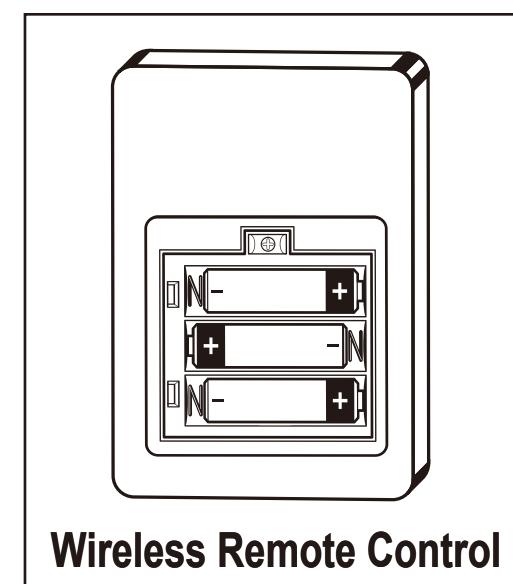

Wireless Remote Control

BATTERIES SHOULD BE REMOVED AND REPLACED BY ADULTS ONLY.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.
- To avoid the possibility of explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries.
- Be sure to insert batteries with correct polarities and always follow the product and battery manufacturer's instructions.
- Remove batteries and store them in a cool, dry place when not in use.

SAFETY INSTRUCTIONS:

1. This item is for INDOOR/OUTDOOR use.
2. All cautions listed in these operating instructions should be followed.
3. Do not use near water, such as a bathtub, laundry tub, kitchen sink, swimming pool or other areas where open water is stored.
4. Do not display reaper near any heat source, such as a radiator, stove, fireplace, etc.
5. Display should only be serviced by a qualified service technician.
6. Take extra care when displaying any figure that contains small parts around small children.
7. Use of the reaper should always be under the supervision of an adult.
8. Remove batteries when not in use or when storing the reaper.

CAUTION: Please remove batteries if their power is consumed or if the product is to be left unused for a long period of time.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to: <http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.

THIS ITEM IS NOT A TOY. FOR DECORATION ONLY. FOR INDOOR AND OUTDOOR USE.
THIS ITEM IS NOT INTENDED FOR USE BY CHILDREN UNDER THE AGE OF 14.

WARRANTY INFORMATION

Warranty

This product is covered by the Sam's Club Member Satisfaction Guarantee. Please visit samsclub.com for more information. If you have any questions regarding the warranty or spare / replacement parts, please email us at service.3fww@gmail.com

NOTE: Please consider recycling all applicable packaging material

Set-Up Instructions:

Step. 1: Carefully remove product from package. Properly discard any fasteners, bags or tags with care.

CAUTION: Be sure to remove the remote control from the packaging.

Step. 2: Carefully lay-out the 12 foot Reaper and the "hanging cords" in an open area adjacent to where you plan on hanging the Reaper.

CAUTION: This is a large display piece and we advise that at least two people assist in the hanging of the display. Be sure to use a stable and secure ladder when hanging the display.

Step. 3: Before hanging the display, activate the sound box by switching to the "ON" position.


This will allow the Reaper to interact with the remote control.

Step. 4: The hanging cords that are included with the Reaper can be secured or tied to a stable overhead support. Make sure that whatever the Reaper is secured to is strong enough to support the weight of the Reaper.

Step. 5: Test the remote control system from the required distance between the remote and the Reaper.

Important: The maximum remote activation distance is 20 ft.

Note: If you plan on suspending your Reaper from a ceiling, we suggest that you use 1/4 inch "eye screws" and securely attach to the ceiling. Use heavy duty tie cords to secure the Reaper to the eye screws and make sure that the eye screws are securely anchored into "solid" material strong enough to support the weight of the Reaper. Please note that "eye screws" are not included with the Reaper.

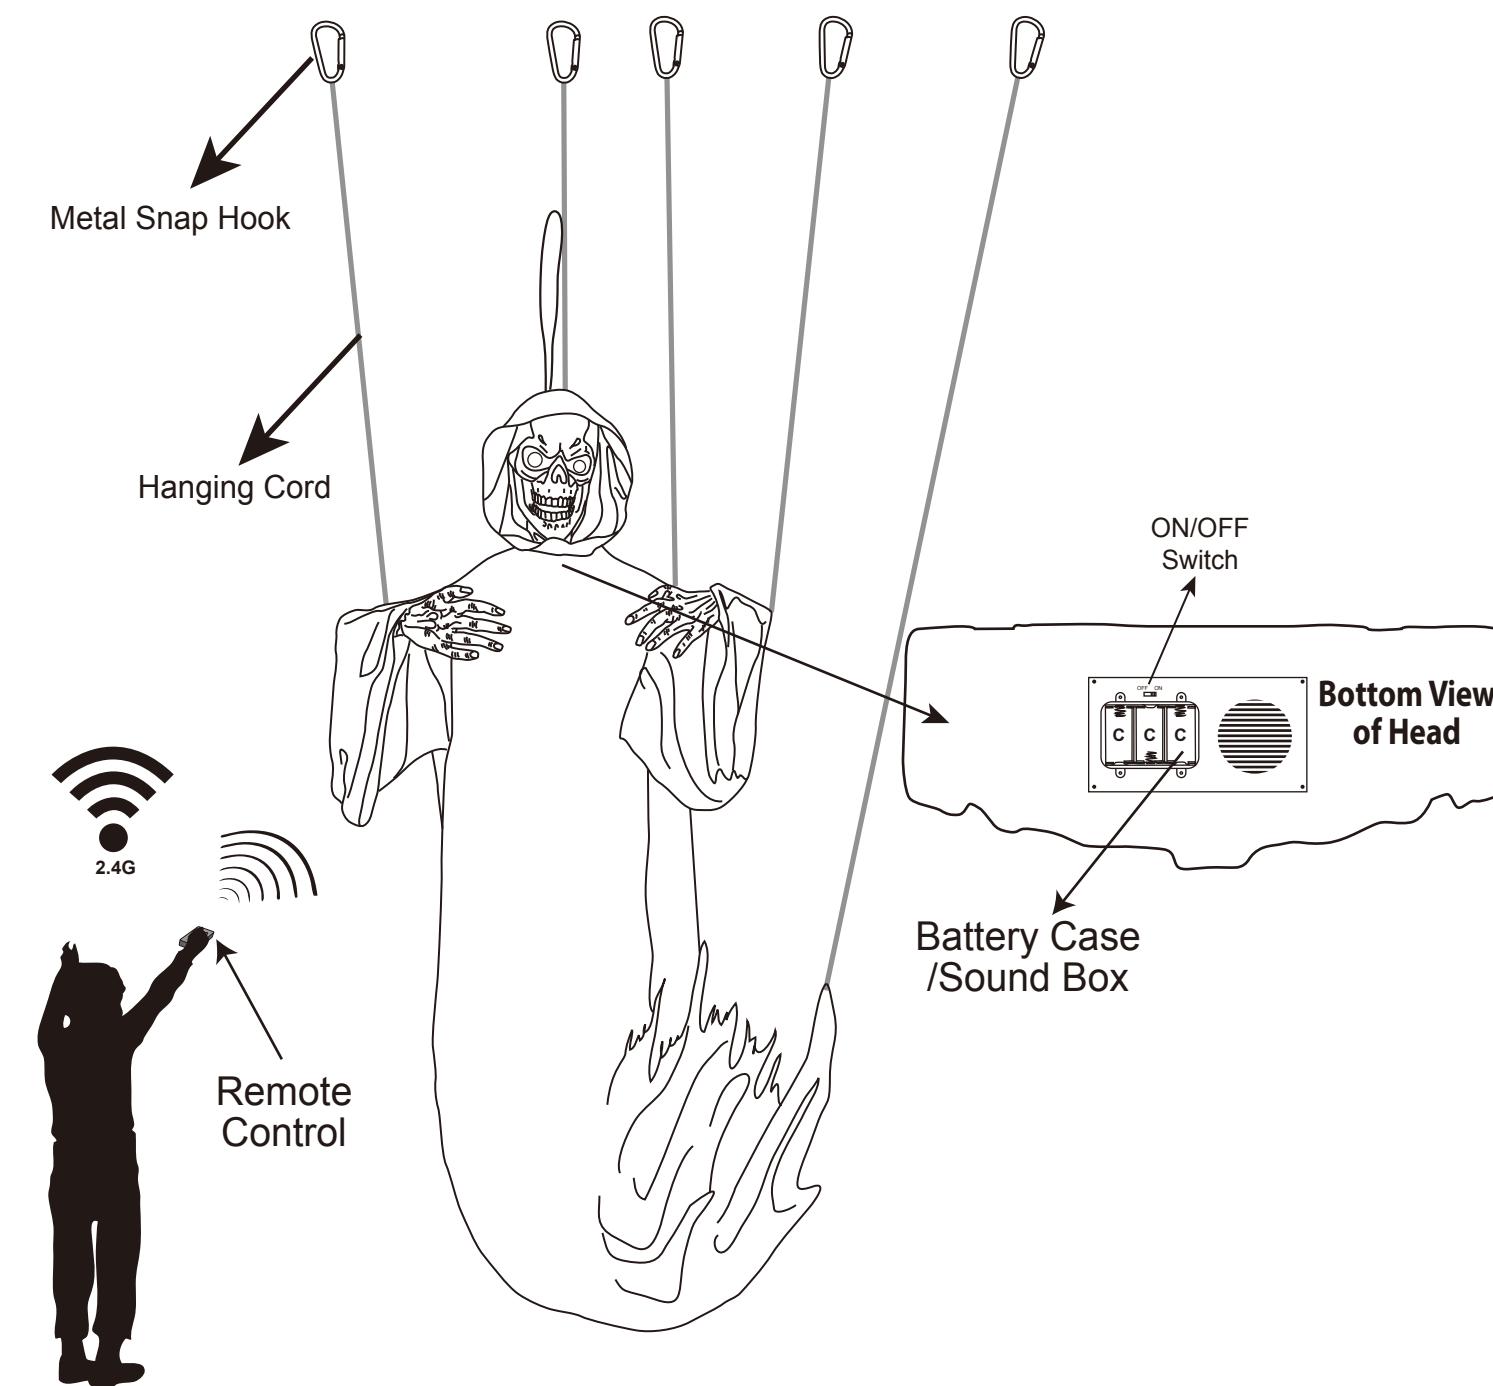

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: 3FWW INC

Address: 529 MERCURY LN, BREA, CA, 92821 USA

For FCC email: service.3fww@gmail.com

Troubleshooting

Problem	Solution
The product does not work	<ol style="list-style-type: none"> 1. Check if the positive and negative terminals of the battery are installed correctly. 2. Check whether the battery is drained. Replace the new battery.

If you are still experiencing problems with the product please email service.3fww@gmail.com for further assistance.

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at: samsclub.com/membersmarkhelp

Distributed by Sam's West Inc.

2101 SE Simple Savings Dr.

Bentonville, Arkansas 72716-0745

Made in China



Need Assistance? Visit us at: samsclub.com/membersmarkhelp

4

Back