



温馨提示 REMINDER

Kemove 提倡环保节能 ，在全球发售的 kemove 系列“不再提供纸质说明书”，可在 www.kemove.com 官网进行说明书下载以及 kemove control hub 首页右上角找到多国语言电子版说明书。

Kemove advocates environmental protection and energy saving. The Kemove series, which are released globally, "is no longer available in paper manuals". The manual can be downloaded from the official website www.kemove.com as well as found in the upper right corner of the homepage of the Kemove control hub.

Kemove defiende la protección del medio ambiente y el ahorro de energía. La serie kemove que se comercializa en todo el mundo, "ya no está disponible en manuales en papel." El manual puede descargarse del sitio web oficial www.kemove.com, así como encontrarse en la esquina superior derecha de la página de inicio del centro de control de Kemove.

Kemove выступает за защиту окружающей среды и энергосбережение. Серия Кемове, выпущенная по всему миру, «больше не доступна в бумажных руководствах». Руководство можно загрузить с официального веб-сайта www.kemove.com, а также найти в правом верхнем углу домашней страницы центра управления Kemove.

Kemove setzt sich für Umweltschutz und Energieeinsparung ein. Die Kemove-Serie, die weltweit veröffentlicht wird, „ist nicht mehr in Papierhandbüchern erhältlich“.

Das Benutzerhandbuch kann auf der offiziellen Website www.kemove.com heruntergeladen werden und ist auch in der oberen rechten Ecke der Startseite der Kemove-Steuerzentrale erhältlich.

Kemove défend toujours la protection de l'environnement et les économies d'énergie. La série Kemove, qui est publiée dans le monde entier, « n'est plus disponible dans les manuels papier ». Le manuel peut être téléchargé sur le site officiel www.kemove.com ainsi que dans le coin en haut à droite de la page d'accueil du centre de contrôle Kemove.

Kemove sostiene la protezione dell'ambiente e il risparmio energetico. La serie Kemove che viene rilasciata in tutto il mondo, "non è più disponibile nei manuali cartacei".

Il manuale può essere scaricato dal sito ufficiale www.kemove.com e anche trovato nell'angolo in alto a destra della homepage dell'hub di controllo Kemove.

Kemove はエコのために、紙質の手順書を提供するのが中止した。公式サイ www.kemove.com で手順書ダウンロードして、及び kemove control hub のトップページの右上で手順書が探しています。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

KEMOVE K68 三模功能说明书

三模功能分别为有线模式、2.4G 模式、蓝牙模式

KEMOVE T63 three mode function instructions

The three mode function are wired mode, 2.4G mode and Bluetooth mode respectively



2.4G 模式 2.4G Mode

FN+B= 打开 2.4G, 长按 3 秒 B 键闪白灯, 连接成功 B 键恢复默认。

FN+B=Turn on 2.4G, Press and hold the B button for 3 seconds and the white light will flash. B key is restored to the default when connected successfully.



蓝牙模式 Bluetooth Mode

FN+Z=BT1 (按住三秒, 红蓝灯交替闪烁进入蓝牙匹配, 配对过的, 再轻按一次, 则是回链);

FN+X=BT2 (按住三秒, 红蓝灯交替闪烁进入蓝牙匹配, 配对过的, 再轻按一次, 则是回链);

FN+C=BT3 (按住三秒, 红蓝灯交替闪烁进入蓝牙匹配, 配对过的, 再轻按一次, 则是回链);

FN+Z=BT1. Press and hold for 3 seconds, the red and blue lights flash alternately, and the Bluetooth is in the pairing state. If paired already, tap again to reconnect.

FN+X=BT2. Press and hold for 3 seconds, the red and blue lights flash alternately, and the Bluetooth is in the pairing state. If paired already, tap again to reconnect.

FN+C=BT3. Press and hold for 3 seconds, the red and blue lights flash alternately, and the Bluetooth is in the pairing state. If paired already, tap again to reconnect.

切换说明 / Reminder:



背部 ON/OFF 开关是有线 / 无线 (电池) 开关, 有线状态下无法使用无线模式链接。

The ON/OFF switch on the back is a wired, wireless (battery) switch. It is unable to connect using wireless mode in wired mode.



无线模式下蓝牙和 2.4G 通过组合键可直接切换。

按下 FN 时 B 键亮白光提示正在链接使用 2.4G 中, FN+B 一键从蓝牙模式切换到 2.4G 模式 & 配对模式。

In wireless mode, Bluetooth and 2.4G can be switched directly through the combination key.

When FN is pressed, the B key will light up in white to indicate that 2.4G is being used in the link. Press FN+B to switch from Bluetooth mode to 2.4G mode & pairing mode.



2.4G 模式需要先进入配对, 再插入接收器 (重置后也需要先配对再插入接收器)。

In 2.4G mode, you need to enter pairing first, and then insert the receiver (you also need to pair first and then insert the receiver after resetting).



BT1/2/3

蓝牙模式下, 按下 FN 键 Z/X/C 其中一键会亮蓝色显示当前通道。

In Bluetooth mode, when pressing FN key Z/X/C, one of the keys will flash blue to display the current channel.



FN+Z/X/C 键可以直接切换蓝牙设备。

FN+Z/X/C keys can directly switch Bluetooth devices.

电量显示 / Power Display:

有线模式下

FN + 右 Shift

In wired mode:

FN+Right Shift



充电中

charging



充满电

fully charged

蓝牙模式下

FN + 右 Shift

In Bluetooth mode:

FN+Right Shift



0%~20%



20%~50%



50%~95%



95%~100%

FN 组合功能键 / FN Combined Function Key:

FN+A=⏻	FN+S=⏏	FN+D=⏏	FN+F=⏏	FN+G=⏏	FN+H=⏏
FN+1=F1	FN+2=F2	FN+3=F3	FN+4=F4	FN+5=F5	FN+6=F6
FN+7=F7	FN+8=F8	FN+9=F9	FN+0=F10	FN+_ =F11	FN+=F12
FN+U= Print Screen	FN+I= Scroll lock	FN+O=Pause	FN+J]= software light switch	FN+J=Insert	
FN+\\=Hardware light	FN+K=Home	FN+L=PageUp	FN+M=Delete	FN+<, =End	
FN+>, =Page Down	FN+Tab= Restore the keyboard to factory settings(Press 5 seconds)	FN+Space= FN key function lock			
FN+Win= Win key to lock / unlock	FN+Capslock = Switch the color of the default lighting effect of the keyboard				
FN+N= All keys without overrun, switch six keys without overrun	FN+Backspace= Turn off backlight, turn on backlight, turn off all lights				
FN+Enter= Enter the power saving mode	FN+Q=Profile 1	FN+W=Profile 2	FN+E=Profile 3	FN+R=Profile 4	
FN+T= Switch back to Standard layer (Cannot set macro command)	FN+?= ↑	FN+R_Alt= --	FN+R_Ctrl= --	FN+Menu= ⏏	