


product name	Weather forecast module	product model	XM-8635
--------------	-------------------------	---------------	---------

Renderings



actual picture

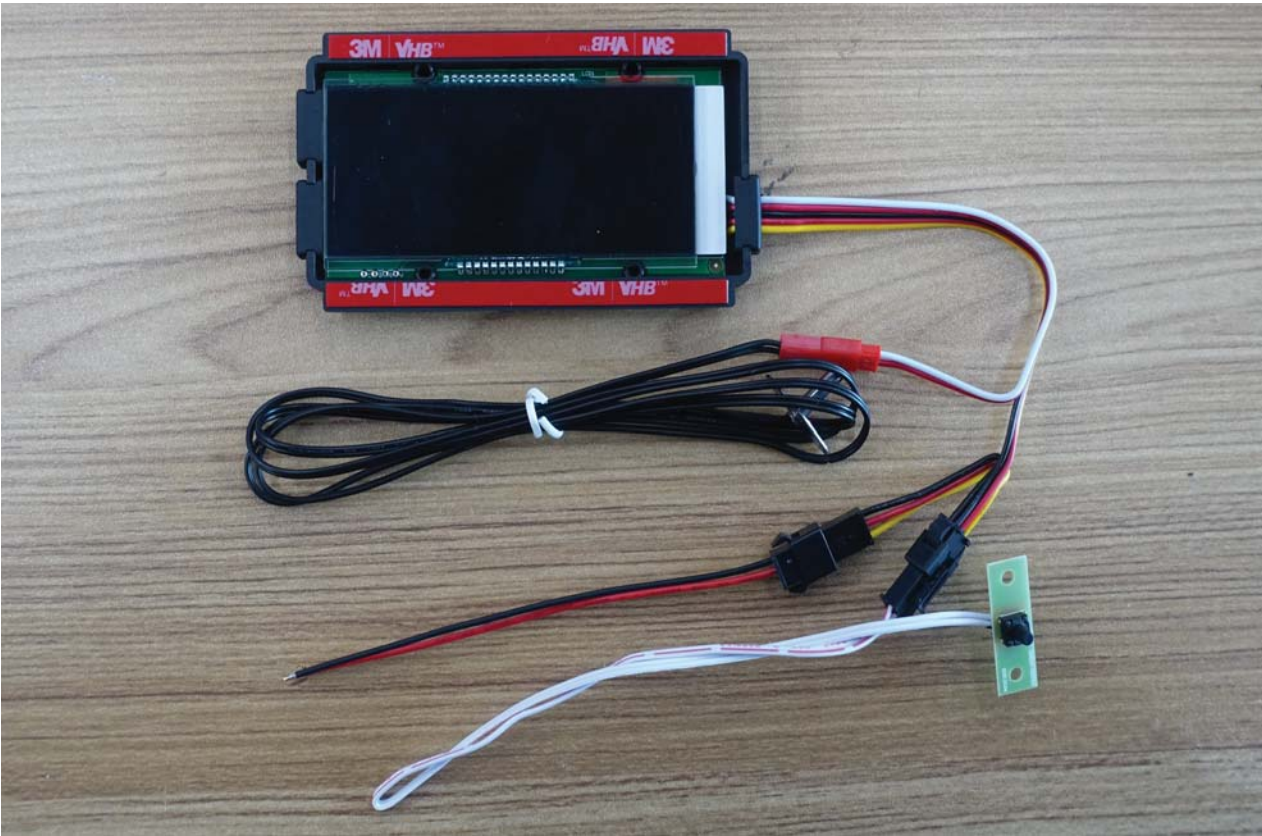

I. Technical specifications

project	performance parameter
operating voltage	DC12-24V
incoming current	200ma (Max)
screen size	86mm*35mm(L*W)


Second, the job description

Operating instructions:


1. Use with touch switch

2. Use with touch switch


1. The first step is to search for "Graffiti Intelligence" in the application store and download and install it.

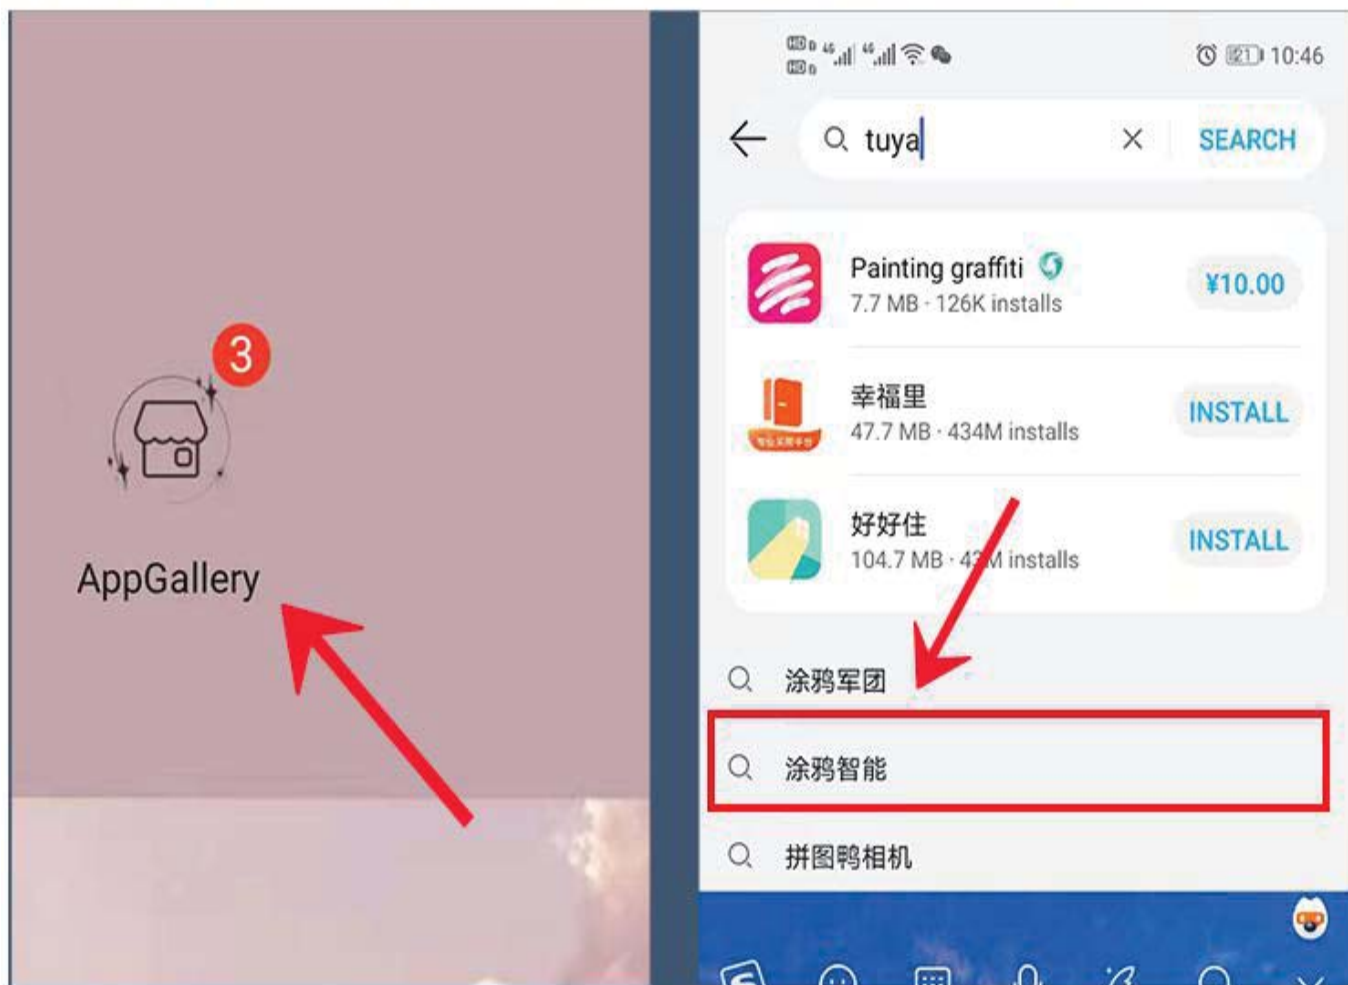


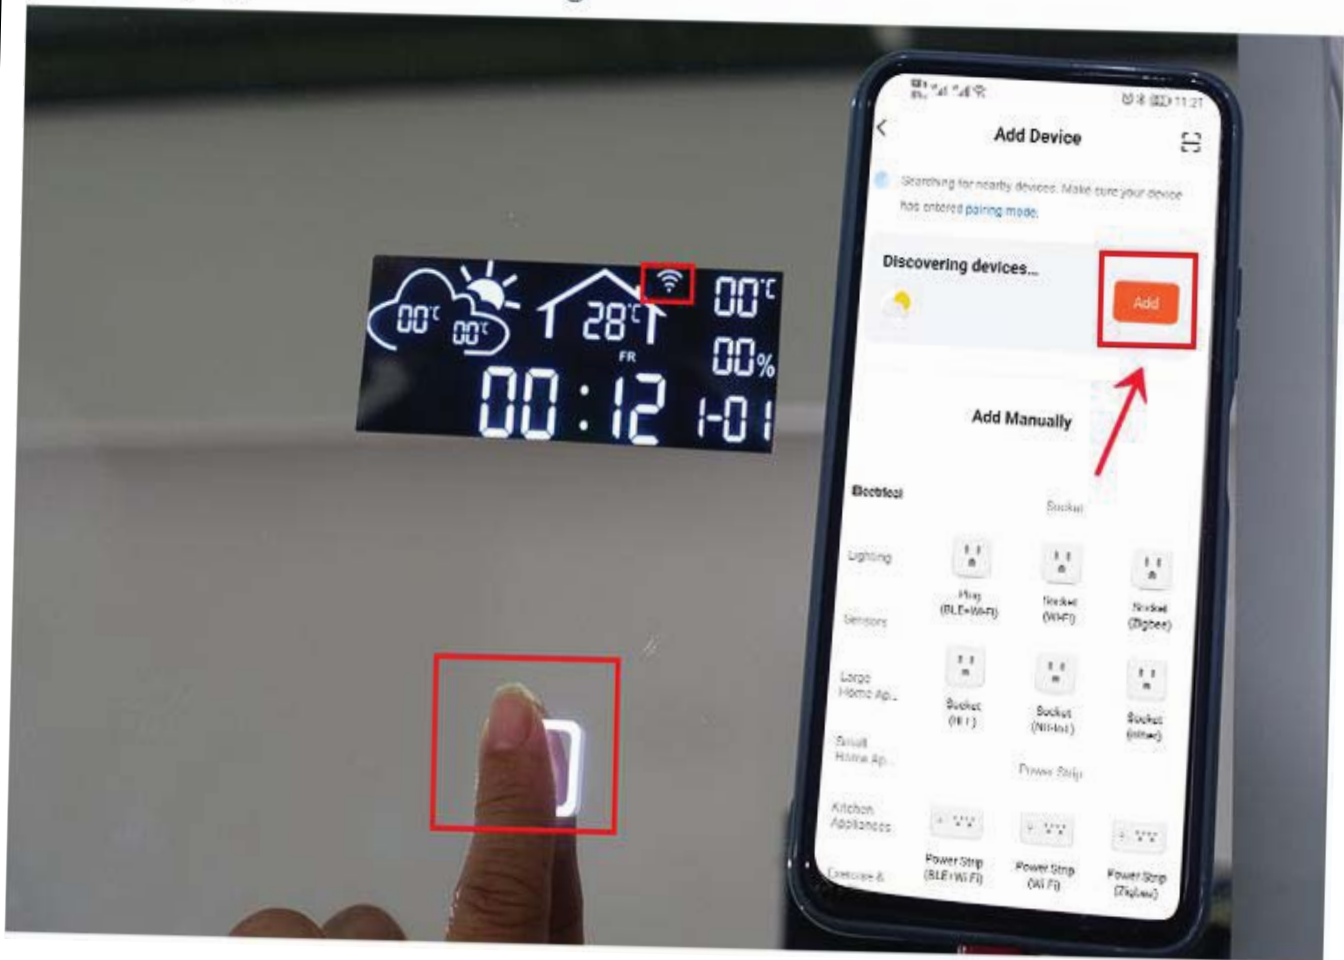
2. After installation, open the "Graffiti Intelligence" APP, register your account and log in.

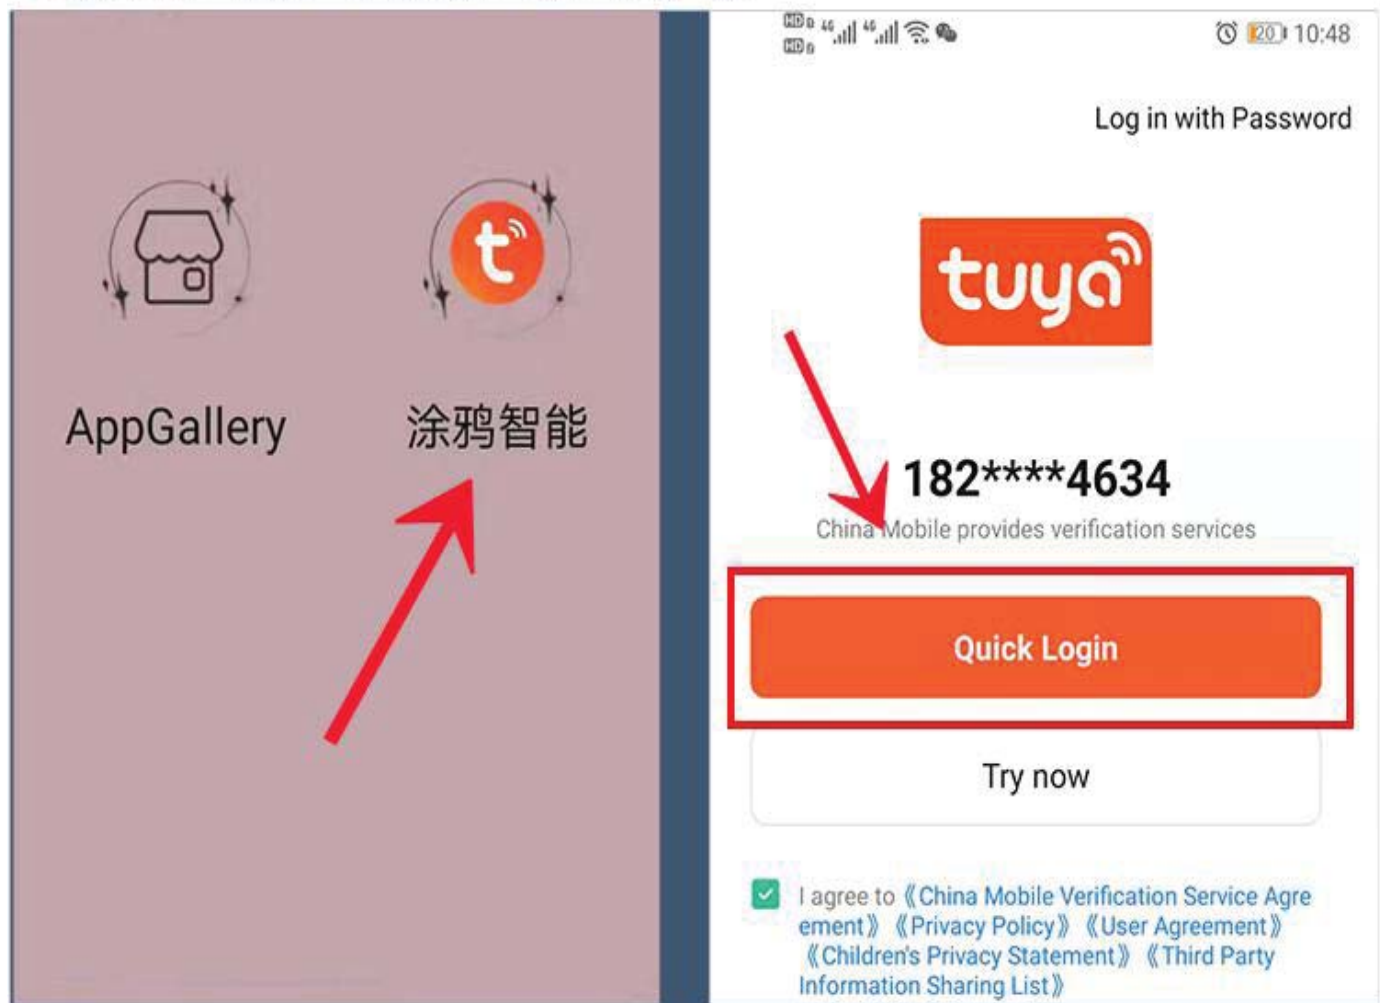


3. After successful login, click the "+" sign on the top right of the homepage or click "Add Device" to add the discovered device.

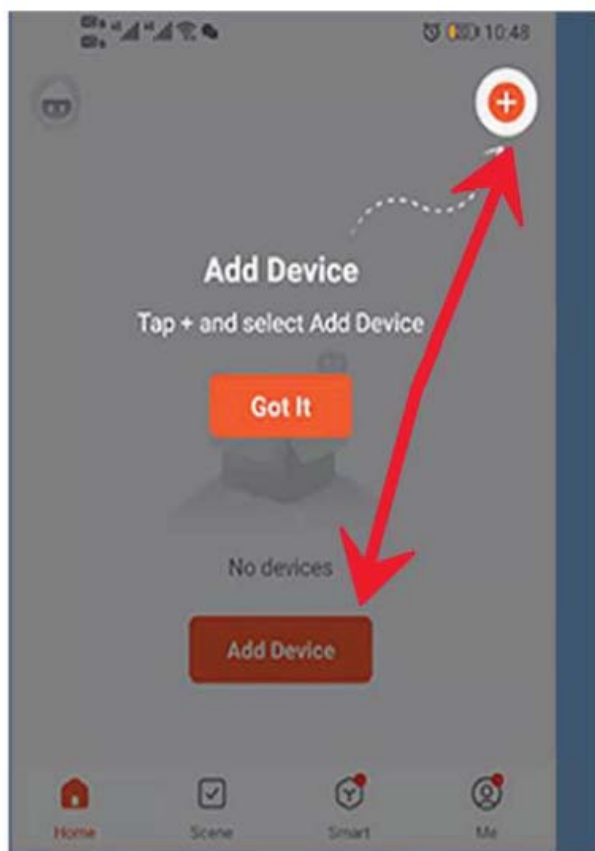

4. Press and hold the touch switch or touch switch for 3s. After the WIFI  icon in the weather forecast screen jumps, it can be added by graffiti intelligence.




5. Click "Add" to enter the Wi-Fi password ①, continue to click "Next" to wait for the addition to be completed and click "Next ②" again, and click "Finish" to display ③ after the successful addition.

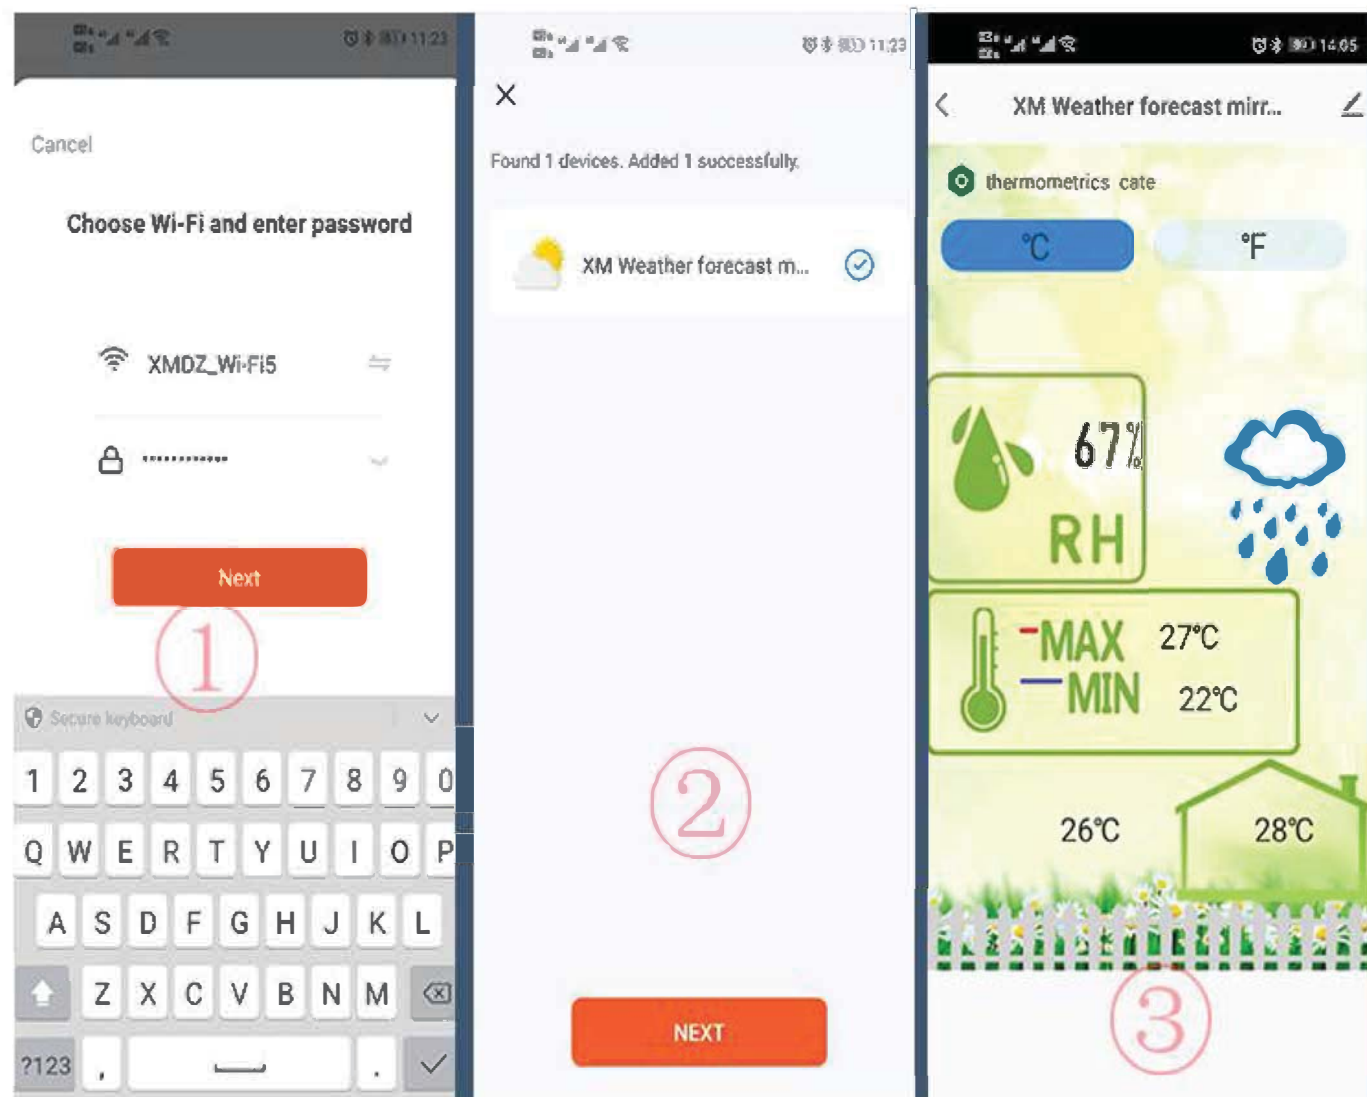

6. Presentation of renderings




III. Screen display:

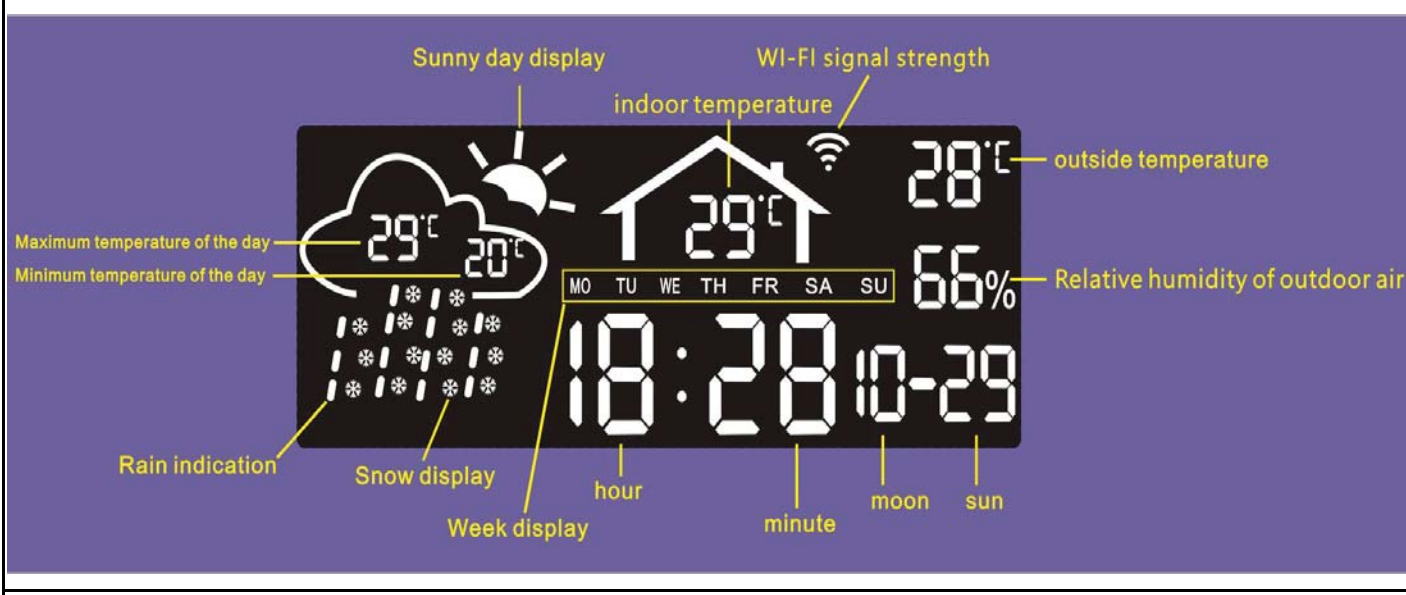


IV. Product wiring diagram:

Touch switch wiring diagram

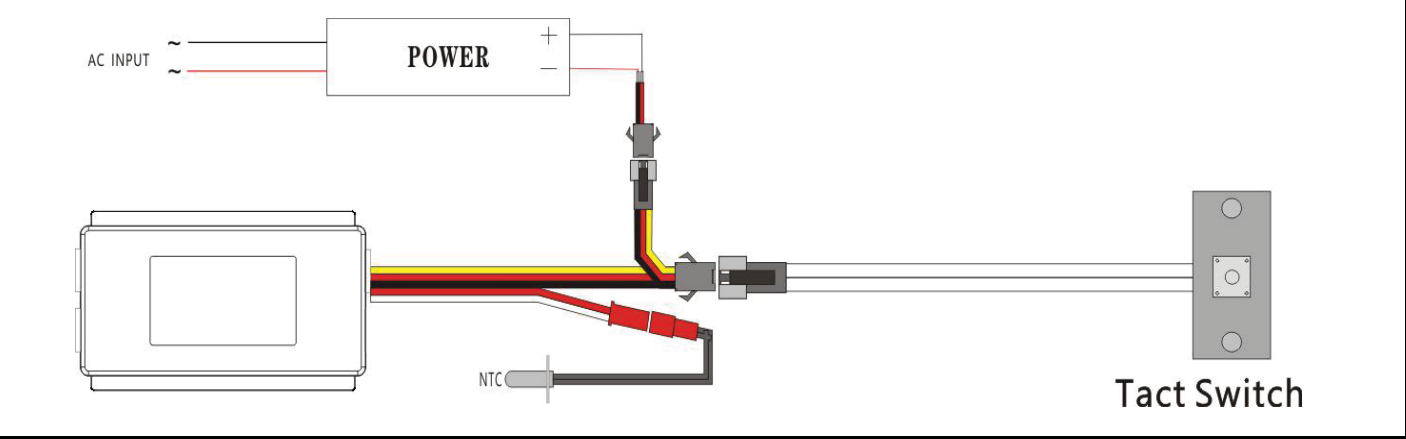


Touch switch wiring diagram

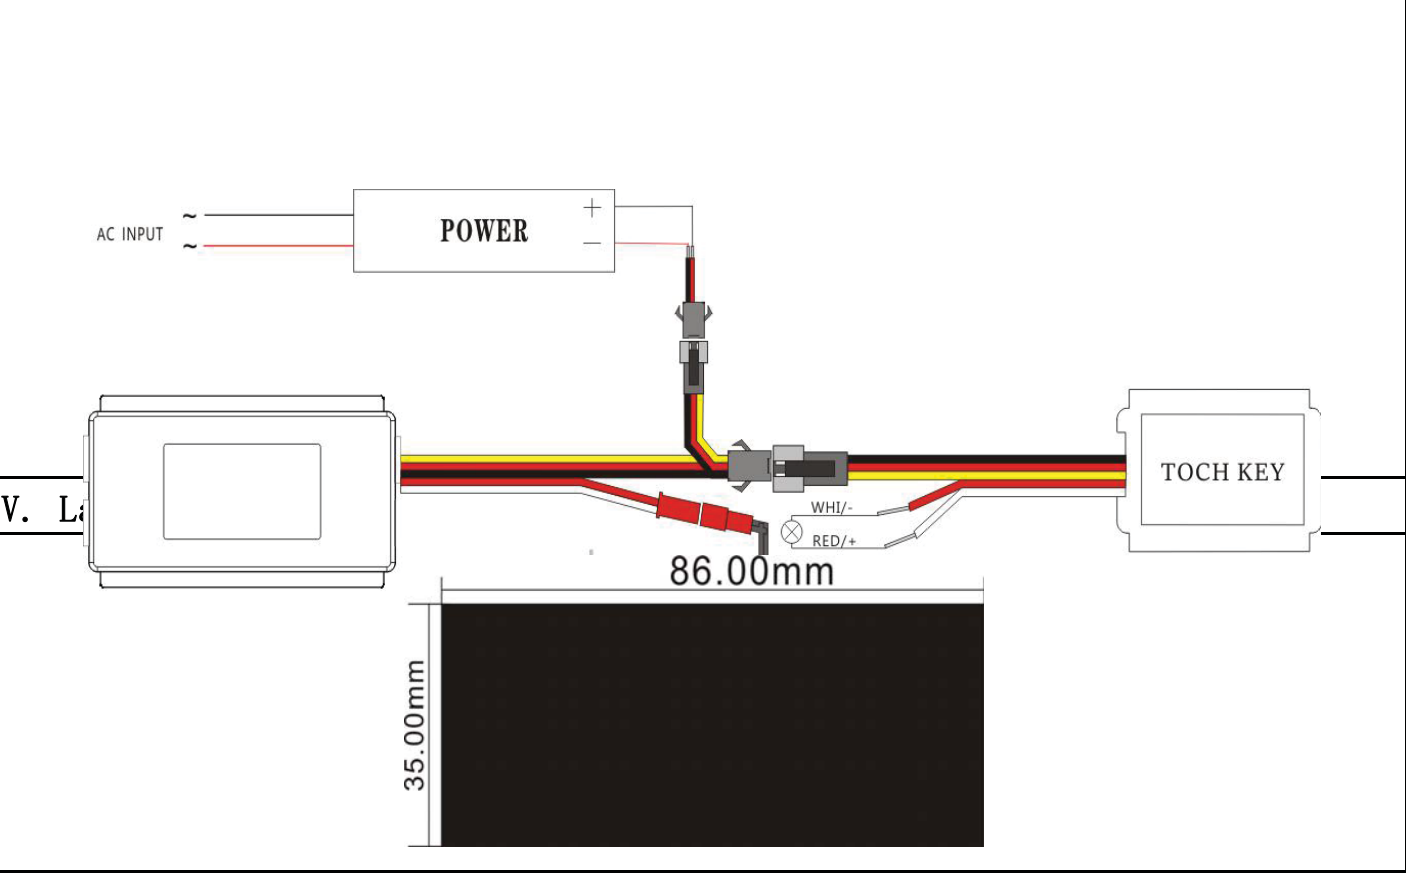

VI. Installation Steps




1. Sanding the mercury surface of the mirror or carving out the marking drawing by laser.

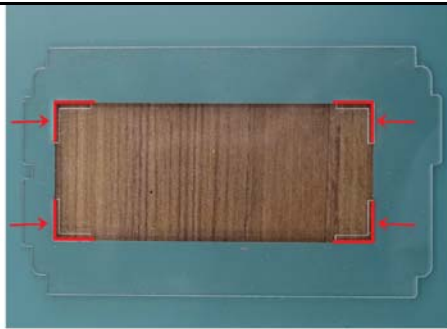

2. Align the marking line of the positioning plate with the marking drawing (subject to the peripheral reference line) to facilitate the next step of attaching the bracket.



3. Tear off the double-sided adhesive protective film on the back of the bracket to facilitate the next step of fixing and installing the bracket.

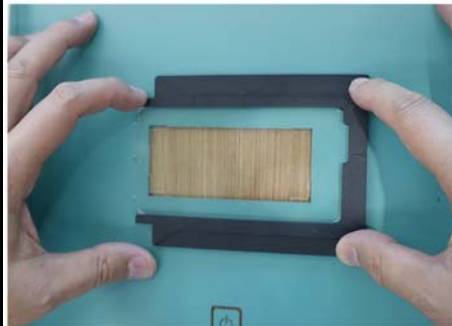

4. Place the bracket on the positioning plate to overlap and compress.



5. After the tape fixing bracket is pasted, pull out the positioning plate fixture.



6. Put fixing glue around the bracket and fix it again.



4. Place the bracket on the positioning plate to overlap and compress.



5. After the tape fixing bracket is pasted, pull out the positioning plate fixture.



6. Put fixing glue around the bracket and fix it again.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.