 


Quick Guide

 
① Open the lid

Hold down the top two buttons to open the lid.

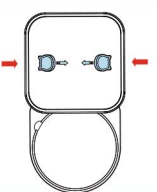


② Take out the food bowl

Disassemble the food hooper and take out the food bowl.

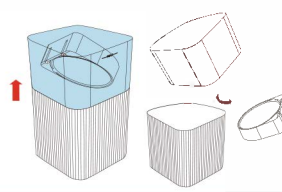


③ Install the food bowl

 Install the food bowl properly.

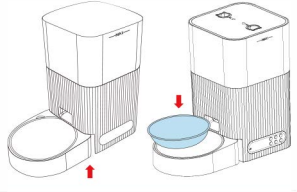

④ Put in desiccant

 
Open the desiccant box and put in the desiccant

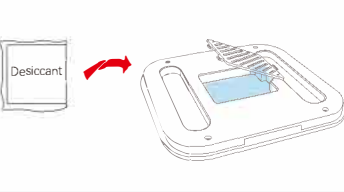

⑤ Install Impeller

Rotate and align the impeller to base

 The arrow should be aligned with the scale mark.

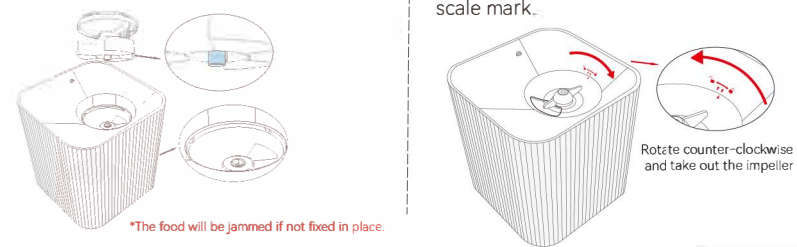



*The food will be jammed if not fixed in place.

⑥ Fill pet food


The filled pet food shall not exceed the MAX line on the food hooper.

 Note: The food size should be less than 12mm.


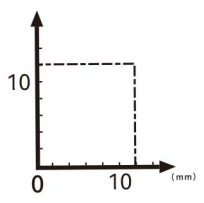


⑦ Close the lid

 Close the lid properly.

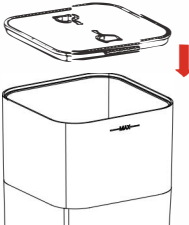

⑧ Dual power supply

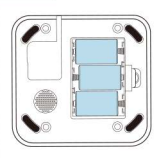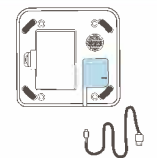  

1.Power on with Plug in Plug in with Type-C cable and turn on the switch on the bottom of the device

 
2.Power on with Battery Put in Three "D" sized battery and switch on

* Device will be offline with only battery mode

* The backup battery is only work feeding when power cut.


⑨ Instant feed

Press the Control Button twice to feed one portion, repeat the operation for more portions.

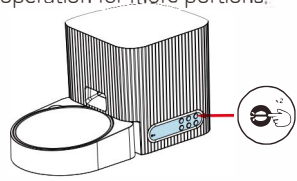

* The weight of first portion may not accurate, please do instant feed twice to ensure it works normally.

⑩ Connect the APP



Scan the QR code or Search "Tuya Smart" in App Store to download the app

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

INTENDED USE

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance.
- Intended for use with dogs or cats only. Do not use this pet feeder with puppies, kittens, dogs or cats not able to reach the food tray or with any physical disability.
- Use the appliance only for intended household purposes as described in this User Manual.

ELECTRICITY SAFETY

 
- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT immerse power cord, plugs, or the device base in water or other liquid or allow moisture to come into contact with these parts.
- To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug the appliance when not in use, before putting on or taking off parts and before cleaning. Never unplug by pulling on power cord.

RELATED TO USE


- DO NOT attempt to disassemble, repair, modify or replace any part any part of your product. All servicing should be performed by qualified personnel only. No user serviceable parts inside.
- Only use attachments recommended or sold by the manufacturer.
- Install 3 D batteries as backup power in case of power failure.
- DO NOT allow pets to chew on or swallow any parts. Cover or hide the power cord with care to prevent pets from biting.
- DO NOT lift the pet feeder by lid, hopper, bowl or bowl holder. Lift and carry feeder using both hands and hopper base, while keeping unit in upright position.
- Install or store pet feeder on a level surface against wall or in a corner to avoid tripping.
- For dry food use only. Do not use wet, canned, moist food or pet food with special shapes, holes or diameter above 12mm/0.6 inch.
- Before leaving for extended time, always replace batteries with new batteries. Check operation frequently to be sure the pet feeder is dispensing properly.
- Dispose of all packaging materials properly. Keep away from children and pets.

-1-

Rizzari
User Manual
Fatassy Smart Pet Feeder

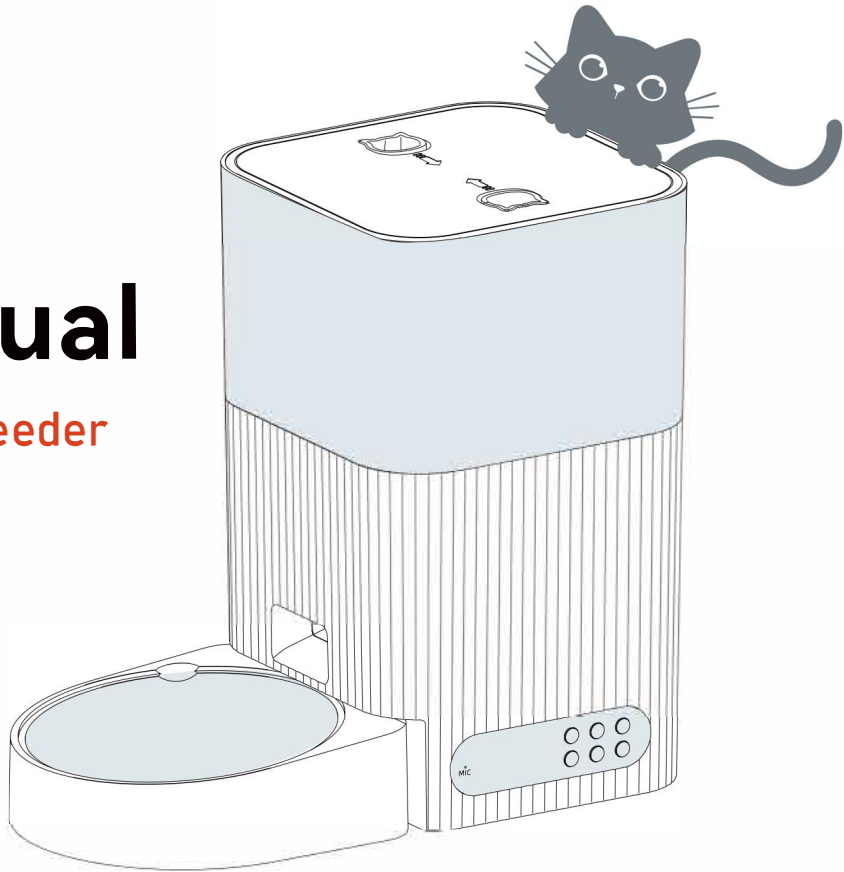

Components

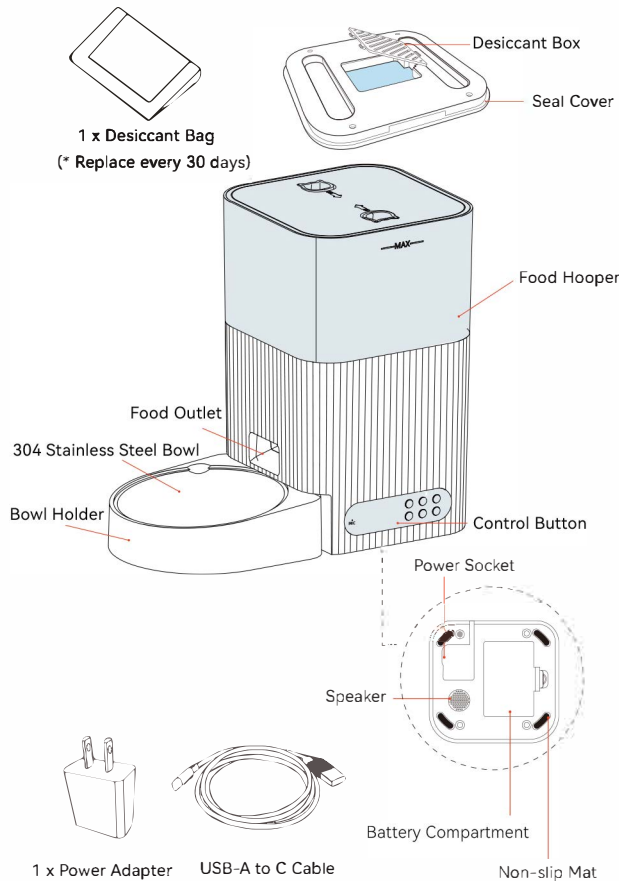 


Product Name	Fatassy Smart Pet Feeder
Dimension	310x190x341mm
Applicable for	Small dogs / Cats
Power Supply	5V = 1A
Connection	Bluetooth Connected
Food Type	Dry Pet Food within 12mm
WiFi Router Distance	10m
capacity	4.2L
Warranty	One Year

Precautions

- 1.Please use in the indoor environment, do not use in the balcony and other places with direct sunlight.
- 2.Please do not drop any items other than dry pet food into the storage bucket. Otherwise, the equipment may be abnormal or spoiled the risk of ingestion.
- 3.To prevent pets from falling over, it is recommended to place the feeder in a corner or against a wall.
- 4.Please cover or store the power cord to prevent pets from biting the cord and causing electric shock and other dangerous situations.
- 5.Do not disassemble or modify the device by yourself.
- 6.This product does not support pet food with irregular shape, holes and diameter larger than 12mm, only suitable for pet dry food Do not put wet food in.
- 7.The grain shape and density of pet grain will cause a certain deviation to the grain bucket capacity.
- 8.If the battery is powered, the standby time can be up to 10 days. Please replace the battery before you travel.
- 9.The number of grams per serving varies with different grain densities.

-2-

 Control Button

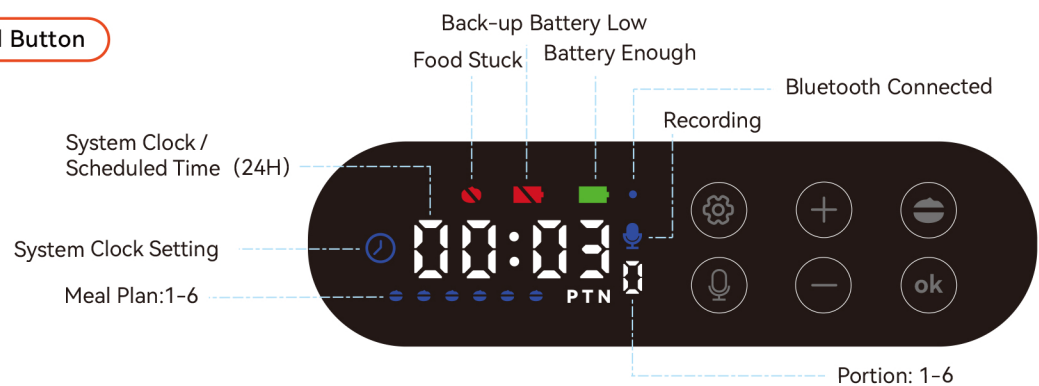

Settings

- Hold for 2 seconds to enter settings.
- While setting, press once to exit.
- Hold for 10 seconds to restore to factory settings.

Record

- Press once to record (Max. 10s) with loud voice towards microphone.
- To manually stop, press once again.

Increase

- Press to increase time / portion or select meal plan.

Decrease

- Press to decrease time / portion or select meal plan.

 
Manual Feed

- Press twice to dispense one portion of food.
- When adding food for the first time or after the tank is empty, repeatedly press to dispense the first one portion.


Confirm

- Press to confirm and enter next step.


Step 1 - Setting System Clock To Local Time First

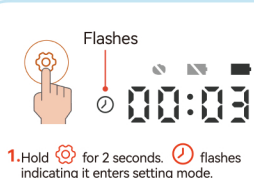

 
1. Hold for 2 seconds. flashes indicating it enters setting mode.

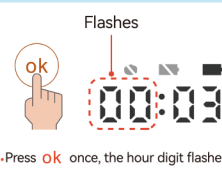

 2. Press **OK** once, the hour digit flashes.

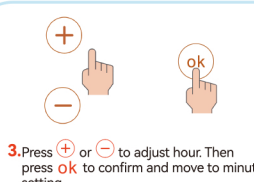


 3. Press **+** or **-** to adjust hour. Then press **OK** to confirm and move to minute setting.

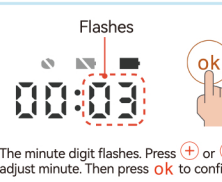


4. The minute digit flashes. Press **+** or **-** to adjust minute. Then press **OK** to confirm.

 
Step 2 - Setting Feeding Time & Portion(PTN)

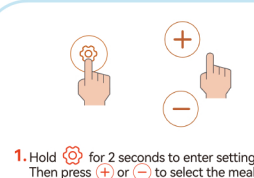

 
1. Hold for 2 seconds to enter settings. Then press **+** or **-** to select the meal plan.

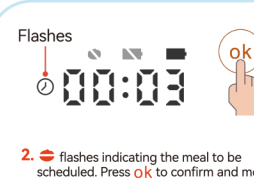

 2. flashes indicating the meal to be scheduled. Press **OK** to confirm and move to time setting.

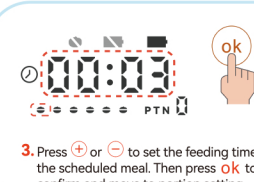

 3. Press **+** or **-** to set the feeding time for the scheduled meal. Then press **OK** to confirm and move to portion setting.

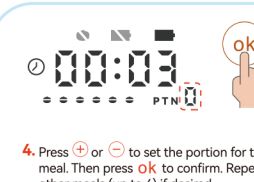


4. Press **+** or **-** to set the portion for the meal. Then press **OK** to confirm. Repeat for other meals (up to 6) if desired.




Cleaning & Maintenance

- Make sure the pet feeder is unplugged before cleaning. Dry all parts thoroughly and reinstall it
- Wipe only with a soft and damp cloth, do not rinse or submerge.
- Suggest to clean the food hopper, food impeller and food bowl regularly.

 
1. Remove the food bowl to clean it.

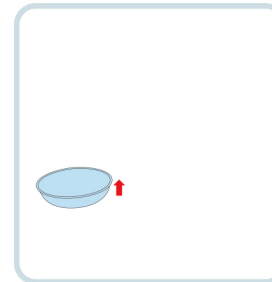

   
2. Lift the lid and take out the desiccant.
3. Pull out the food hopper upward.

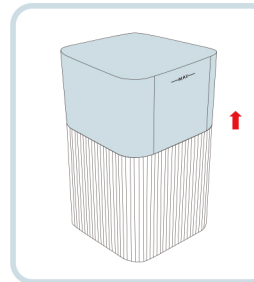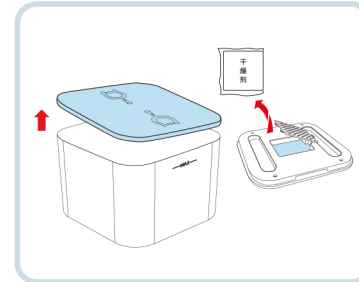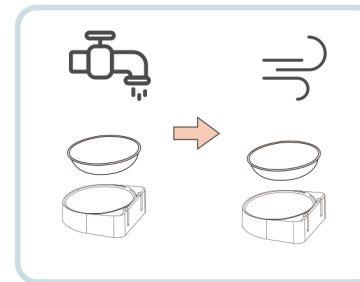

 4. Rotate counterclockwise to remove the food distribution turntable.

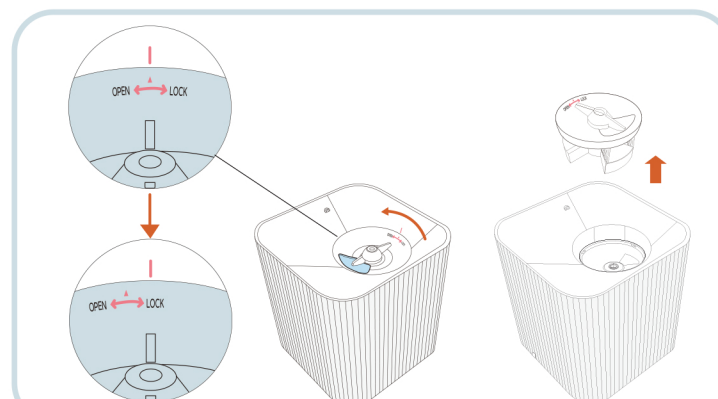

 
5. Clean all components. Dry thoroughly and reassemble.

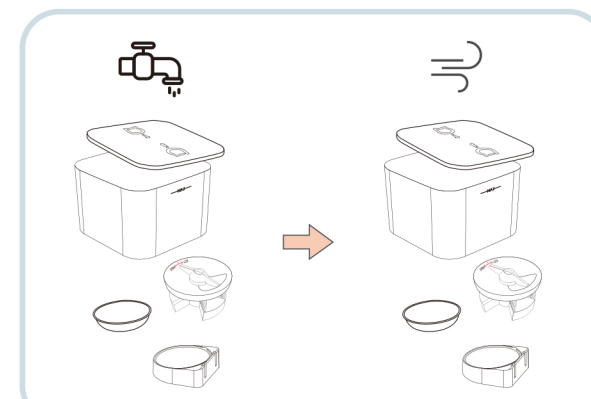

Connect App

- Long press the feed button to unlock it when the battery is powered for the first time (the screen will light up).
- Make sure the Bluetooth function on the smart device is open.

 1.

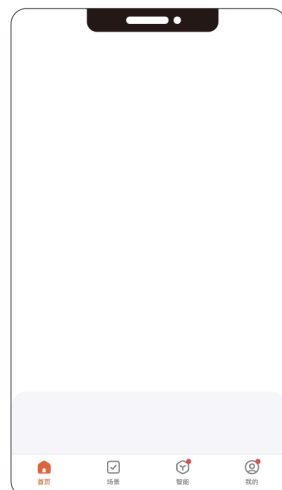


Download the "Tuya Smart" APP, then register or log in account. Click "Add Device" and the app will automatically search for the device.

2.




Click "Add".

 3.

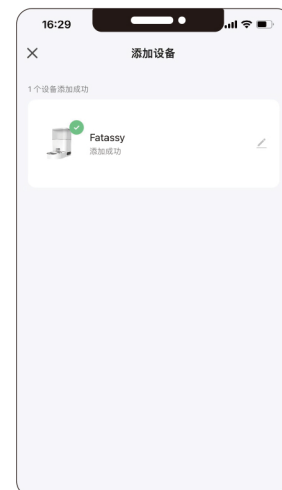

Click "Done". If failed to connect, then press the Control Button for 10s to restore settings and reconnect. Note: If the connection state more than 3 minutes, the device is not ready for connect. Hold the Control Button for 10 seconds to restore and reconnect.

 4.

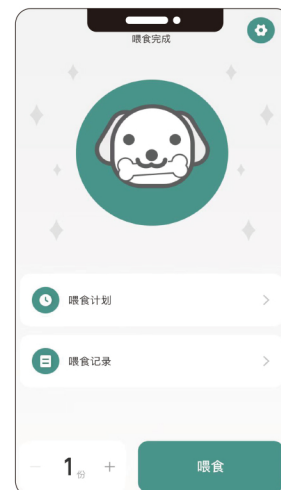

Click "Feeding Schedule" to set the ideal feeding times and portions.

Troubleshooting

Q: Cannot connect the pet feeder with my smart device

- A:**
- Make sure Bluetooth on your device is enabled and your device is connected to a secure network.
 - Place the pet feeder close to your device.
 - Check if the pet feeder is connected to another device. Reset by holding the Setting button for 10s and try again.

Q: Connection failure prompted when already connected

- A:** If App is exited during use, the indicator will turn off indicating a disconnection. Open App and wait for a few seconds, it will reconnect automatically.

Q: Food does not come out

- A:**
- Be sure to fill in dry food with size of 2-12mm / 0.08-0.6in in diameter.
 - Remove the food tank to check if the dispensing rotor is properly installed.
 - Check if the food is stuck or food outlet is blocked.
 - Check if the pet feeder is properly connected to a powered electrical outlet or if outage occurs with no back-up batteries installed.
 - If fed with APP, check if the pet feeder is connected to your device (indicator light up on screen).

Q: LED display OFF

- A:**
- Make sure the pet feeder is properly connected to a powered electrical outlet with the included cable and power adapter.
 - Check if Auto Display OFF is enabled. Press any button to wake up the screen. To enable or disable the feature, press the **-** button twice.
 - When using with back-up battery only, the Auto Display OFF feature will be activated automatically. Press any button to wake up the screen.

Q: Cannot hear any voice recordings when feeding

- A:**
- Make sure you have recorded successfully. Press Record button once to record (Max. 10s) with loud voice towards microphone.
 - To save battery power, the voice recordings are not available when using with back-up battery only.

Q: Can I use my pet feeder without APP

- A:** Yes, you can control your pet feeder with buttons.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.