

Shower Speaker

INSTRUCTIONS

Set Contains:

splash proof speaker* with PVC sucker, micro USB charging cable, and instructions.

*2.4 GHz frequency, connection distance of 0-33 feet and contains a 3.7V 400mAh re-chargeable Li-ion battery.

Specifications

- Supports: 5.1 + EDR
- Wireless range: 10m/ 33 ft
- Transmitting frequency: 2.4G Hz
- Power supply: DC5V
- Battery: 3.7V 400mAh polymer lithium battery
- Charging time: approx 2.5 hours
- Play time: up to 6 hours
- Water resistance: IPX4 Splash Waterproof
- Unit weight: approx. 0.12kg

Button Functions:

- ▶ Turning ON: Press for 2 seconds to turn the speaker ON.
The speaker will emit a sound and a blue LED light will flash constantly.
- ▶ Turning OFF: Press again for 2 seconds to turn the speaker OFF.
The speaker will emit a sound and the LED light will turn OFF.
- ▶▶ Press to play music and again to pause it.
- ◀◀ Short press for the previous song, long press to turn down the volume.
- ▶▶ Short press for the next song, long press to turn up the volume.
- 📞 Press once to answer a phone call and again to hang up.
Press twice to redial the last phone call.

Note:

The speaker can be mounted to any smooth flat non-porous surface, using the sucker on the base – always ensure that the speaker is firmly attached before use. The speaker is splashproof, it is not designed to be immersed in water.




Connecting to wireless:

- Turn the speaker ON.
- Turn on your device and make sure the wireless function is activated.
- Search for 'SPLSPKMOR' and select it to pair. The speaker will emit a sound to indicate that it has connected.
- You can now play music from your device and listen to it through the speaker.
- Once you turn your device's wireless OFF, the speaker will emit a sound to indicate that it has disconnected.

Charging:

- Plug the USB charging cable (supplied) into the speaker and connect to a USB charging port.
- A red LED light will come on to indicate the speaker is charging.
- Once charging is complete, the red light will turn OFF.

Note: Once the speaker is paired with a device, it will recognize that device whenever they are in range.

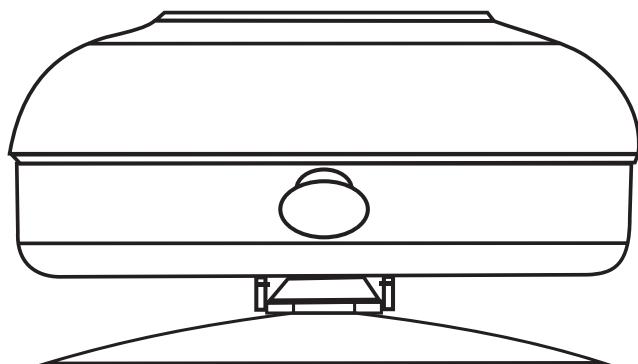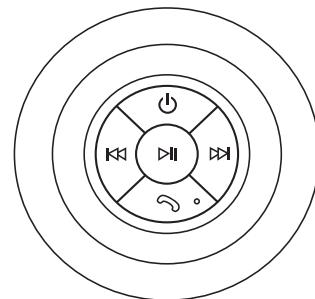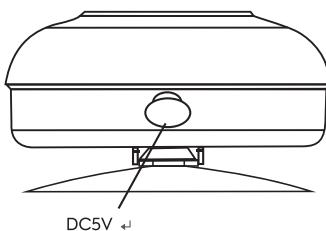

Troubleshooting

Symptoms	Cannot switch the speaker ON	Unable to pair the speaker
Causes	Battery empty	Speaker is already switched on, and it is not in pairing mode
Solutions	Charge the battery	Refer to 'connecting to wireless' section

BATTERIES ARE NOT REPLACEABLE

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- and (2) this device must accept any interference received, including interference that may cause undesired operation.



Important Battery Information

Contains a 3.7V 400mAh re-chargeable Li-ion battery.

- Rechargeable battery is only to be charged under adult supervision.
Do not attempt to replace the rechargeable battery.
- Do not throw battery into a fire.

Battery Disposal:

This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling.