80g书纸,单黑正反面印刷,绿色虚线为说明书的折法,不要印刷出来

FRONT



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

Distributed by Quest USA Corp. 495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved Quest USA Corp.

Made in China.

•FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY ROGUE" wireless blue-tooth® speaker. This product can provide a high quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

IJOY ROGUE Bluetooth Speaker X 1 USB Charging Cable X 1 User Manual X1

SPECIFICATIONS

- •Bluetooth version: 5.0
- •Material: ABS+PC+Fabric
- •Rechargeable battery: 800mAh
- •Speaker power: 2x3W
- •Function: BT/FM/TF/AUX/USB/RGB light/TWS
- Charging port: Micro-USB
- •With a hanging strap, portable carry.
- •Dimension: 68*68*172mm

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Alway confirm the temperature is 41°Fahrenheit before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children


BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal places dispose of the daying in a waste bin for

batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BACK

• FUNCTIONAL BUTTONS

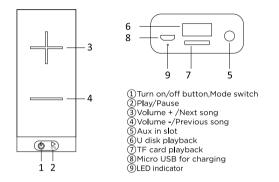

• CHARGING

Connect the small end of the Micro USB charging cable (included) to the Micro USB port located on the back of the speaker.

Connect the larger end of the cable to your computer's USB port or an AC adaptor(not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

•FM MODE

When switch to FM mode, a sound will indicate "di". Long press "Play&pause" button to scan available FM stations and short press to stop scanning, then go to two volume buttons to choose the channel you want.

If the FM signal is not very strong, you can insert the charging cable to strengthen the signal.(no need real charging under this situation)

•NEXT MUSIC/INCREASE VOLUME BUTTON

Short press to change to next music Long press to increase the volume

•PREVIOUS MUSIC/DECREASE VOLUME BUTTON

Short press to change to previous music Long press to decrease the volume

•U DISK READING/TF CARD READING

Insert the USB drive /TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

AUX IN MODE

Plug the Aux cable (not included) into this hole to play, if it doesn't work, you can short press the on/off button to change to the AUX mode.

ON/OFF BUTTON

Long press to turn on/off the speaker.

When you turn on the device, a sound will indicate Bluetooth mode. Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device "IJDY ROGUE".

Short press to switch between available modes: BT /FM/ U disk/ TF card/Aux mode.

•PLAY&PAUSE BUTTON

Short press to pause or play music.

For incoming calls, short press to answer the call, short press again to hang up the call. Long press to reject the phone call. Double click in short time to redial the last number.

Long press for TWS function.

Before entering TWS mode, make sure both speakers are powered on and should be in Bluetooth mode none of them should be connected to the mobile phone or any other devices. In any one speaker long press "Play&pause" button, you will hear the sound which means that the two speakers begin to enter the paired state. After connection, both speakers will automatically pair and play at the same time.

Long press "Play&pause" button again to disconnect TWS.

NOTICE FOR USE

- 1. For the first use, please charge the battery first. Do not play music while charging. 2. Please use certified DC 5V cable for charging.
- When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.5. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting
- of a battery, that can result in an explosion.
- 6. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- 7. A battery subjected to extremely low air pressure that may result man explosion or the leakage of fiammable liquid or gas.
- 8. The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the usage time becomes significantly shorter even after the battery has been fully charged.

•OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy, Do not treat this product as household waste. Dispose of this device properly by handing over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handing. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item

TIP: Must use a formal manufactured certified charger. If the power bank has not been used for a significant amount of time, please make sure to charge before using the product.





IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/ USB ports only. Quick charging devices over 5V may cause heat and fire.

FCC STATEMENT:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.