
 
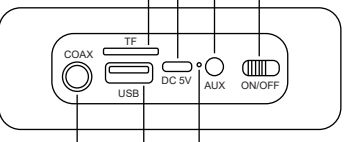



<p>PROSCAN</p> <h1>BLUETOOTH TV SOUNDBAR SPEAKER</h1> <h2>User Manual</h2> <h3>PSB3205</h3>  <p>This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD.</p> <p>PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD.- further information at www.proscan-brand.com.</p> <p>All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.</p>	<p>DEAR CUSTOMER: In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.</p> <p>NOTE This unit may be submitted to changes in specifications, characteristics and/or its technology. Operation without prior notice to the user, in' order to continue improving and developing its technology.</p> <p>DO'S AND DON'TS Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.</p> <p>PACKING LIST Upon opening the package, please check for the following items: 1x Speaker 1x Instruction manual 1 x USB charging cable 1 x AUX cable 1 x Wireless remote(without AAA battery)</p> <p>Specifications: ● Rechargeable battery:1200mAh ● Speaker:2x5W ● Charging time: 1-2H ● Function:BT/TF/USB/AUX//FM/COAX/TWS ● Charging port: Type-C ● Dimension:813x79x60mm ● N.W.:981g</p>	<p>Product Overview:</p>    <p>① On/Off/Light Switch Button Toggle left/right button to turn on/off the speaker. Pairing name: Pro PSB3205</p> <p>② Play/Pause Button Short press to pause or play a song. Long press to disconnect Bluetooth. In FM mode, long press this button to complete a frequency auto search. When you find the station that you want press one more time to save the station in the speaker. Then long press the > or < button to choose the channel you want. Then short press the > or < button to adjust the volume you want.</p> <p>③ Volume Down/Previous Track Button Short press to decrease the volume. Long press to change to the previous track.</p> <p>④ Volume Up/Next Track Button Short press to increase the volume. Long press to change to the next track.</p> <p>⑤ Mode Button Short press to switch between available modes: BT/TF/USB/AUX/FM/COAX. Long press to turn on/off the TWS function.</p> <p>⑥ AUX Port Insert AUX device to play compatible audio.</p> <p>⑦ TF Card Port Insert TF card to play compatible audio.</p> <p>⑧ USB Port Insert U disk to play compatible audio.</p> <p>⑨ COAX Port Plug COAX cable to play compatible audio.</p> <p>⑩ Charging Port & ⑪ Charging indicator Turn off the unit before charging. Connect the small end of the Type-C charging cable (included) to the Micro USB port and connect the larger end of the cable to your computer's USB port or an AC adaptor (not included) to charge the speaker. The red light will be on while charging. Once it is fully charged the red light will be off.</p>	<p>Note: Only MP3 format files are compatible. Maximum size of the USB/ TF device that can be connected is 32GB.</p> <p>TWS function (Optional, requires two speakers) If you have two speakers (Model: PSB3205), you can use them together for a more immersive audio experience. 1. Place the two speakers in the same room and turn them on in Bluetooth mode. Do not connect them to your audio source device at this stage. 2. Long press the 'M' button on either speaker. The two speakers will now connect in TWS mode. 3. Enable Bluetooth function on your audio source device like a smartphone or tablet; navigate to the Bluetooth setting menu and search for the Bluetooth name 'Pro PSB3205'. In TWS mode, only one Bluetooth name will be displayed. Note: To disconnect TWS mode, long press the 'M' button again.</p> <p>FCC STATEMENT NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reason- able protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interfer- ence to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</p>	<p>-Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation. To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.</p> <p>90 DAY WARRANTY This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original delivery to the consumer. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label [e.g., 120V~60Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. For faster service, locate the model, type, and serial numbers on your appliance.</p>	<p>ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support Team: .Name, address and telephone number. .Model number and serial number. .A clear, detailed description of the problem. .Proof of purchase including dealer or retailer name, address and date of purchase. For service assistance and product information, please call: 1-800-968-9853. Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com</p>
---	--	--	--	---	--