

160 mm

80 mm

53 mm

160 mm

01 Appearance




SH60 SMARTWATCH QUICK START

G'FIND

02 Charging and starting

Charging: Align the charging base with the charging area on the back of the device, connect the charger at the other end and switch on the power until the charging quantity indication appears on the screen of the device.
 Power on: charging can automatically power on, or long press the confirm button to power on.

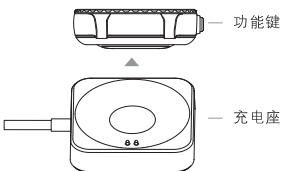

The charging base and charging cable are not waterproof. Please ensure that the charging cable, charging base and equipment are dry when charging.
 Please use a charger with rated output voltage of 5V and rated output current of 2A or USB port of computer to charge the device.

Scan the QR code
 Android users click "Android Download";
 For IOS users, click "App Store" to download;



II · pairing
 Android pairing steps:
 1. Connect to the network and enable Bluetooth and GPS.
 2. Click "RaceFitPro" App;
 3. Complete registration and login.
 4. Click "Device".
 5. Click "Add Device".
 6. In the displayed watch device, click "Connect" on the right;
 7. Match the pair according to the pop-up prompts.

IOS pairing steps:
 1. Connect to the network and enable Bluetooth and GPS.
 2. Click "RaceFitPro" App;
 3. Complete registration and login.
 4. Click "Device".
 5. Click "Add Device".
 6. In the displayed watch device, click "Connect" on the right;
 7. Match the pair according to the pop-up prompts.

03 Download and pairing

I 、 Download

Android download steps:

1. Huawei, Xiaomi, VIVO, OPPO and Meizu phones open their own app markets (app stores).
2. Enter "RaceFitPro" on the search screen and click "Installation Options" on the right;
3. Back to the desktop, you can see the download progress and wait for the automatic installation.

IOS download steps:

1. Find the "App Store" option on the home screen.
2. Enter "RaceFitPro" in the search interface and click "Get" on the right;
3. Return to the desktop and view the download progress. Wait for the automatic installation.

operating environment

- Do not use the device in the damp or near the magnetic field, in order to avoid the internal circuit failure of the device.
- Do not use the device during thunderstorms, which may lead to device failure or electric shock.
- Please use the equipment within the temperature range of -20°C ~ +45°C. When the ambient temperature is too high or too low, device faults may occur.
- Do not place the device in direct sunlight, such as car dashboard or window sill.
- Do not place the device near heat sources or exposed fire sources, such as electric heaters, microwave ovens, ovens, water heaters, fires, candles, or other places that may generate high temperatures.
- Do not allow children or pets to swallow or bite the equipment or its accessories, in order to avoid injury or equipment failure or explosion.

Waterproof and dustproof

The equipment has been tested and shown to be waterproof and dustproof in specific environments.

Children's health

The device and its accessories may contain some small parts. Please keep the device and its accessories out of the reach of children. Children may unintentionally damage the equipment and its accessories, or swallow small parts resulting in empty air or other hazards.

Accessories Requirements

Use of unapproved or incompatible power sources, chargers, or batteries may result in fire, explosion, or other hazards.

Please do not place metal foreign objects on the surface of the charging base for a long time, which may cause the device to malfunction or heat up.

Please use the charging base to charge the device within the range of 0°C - 45°C.

The charging base stops running when the ambient temperature is too high. If the ambient temperature is too high, please stop charging. To ensure that the charging base can work properly, please do not use it in the car.

Battery safety

- The device is equipped with a built-in battery that cannot be removed. Do not replace the battery by yourself to avoid damaging the battery or the device.

- Do not drop, squeeze or puncture the battery. Avoid exposing the battery to excessive external pressure, which may lead to internal short circuit and overheating.

- Do not use damaged batteries.

- If the screen is partially broken due to collision with hard objects or strong impact from outside, do not touch or attempt to remove the broken part. Please stop using the screen immediately and contact The Customer Service center of Shihan.

- Please keep the equipment and accessories clean and dry. Do not wear it too loose or too tight during exercise. Wash your wrist and equipment after exercise, clean and dry them before wearing.

- If the device supports swimming, bathing, etc., please clean the residue attached to the device in time, and dry the wrist and device before wearing.

- Slightly relax the watch band or wristband for daily wear to ensure that the part of

the skin in contact with the device is dry and breathable. Please take off the device and let your wrist rest for a period of time or wear it with another hand if you feel uncomfortable after wearing it continuously for a long time. If there is still an uncomfortable reaction, it is recommended that you stop wearing and consult a doctor in time. You can also buy other material watchband or wristband through the official website of ShiHan.

ventilated place until dry. Do not use microwave oven, blower and other external heating equipment to dry the wet leather watchband, otherwise the leather surface may shrink or expand.

- If the product is equipped with a light-colored watchband, please do not touch dark clothing to prevent staining.

- Before cleaning and maintenance, stop using the device and disconnect all connections or cables from other devices.

- Do not use strong chemicals, cleaning agents or strong detergents to clean the equipment or its accessories. Use a clean and dry soft cloth to wipe the device or its accessories.

- Do not touch the device with magnetic stripe cards (such as bank cards and phone cards) for a long time. Otherwise, the magnetic stripe cards may be damaged by the magnetic field.

- Please do not disassemble or modify the equipment and accessories without authorization, otherwise the equipment and accessories will not be within the scope of our warranty. Please contact The Customer service center of Shihan Technology when the equipment fails.

- Do not butt the metal conductor with the battery poles or touch the battery endpoints to avoid short circuit of the battery and burns and other bodily injuries caused by battery overheating.

- Do not expose the battery to high temperature or near heating equipment, such as sunlight, heaters, microwave ovens, ovens, or water heaters. Overheating of the battery may cause explosion.

- Do not disassemble or modify the battery, insert foreign objects, or immerse the battery in water or other liquids to avoid battery leakage, overheating, fire or explosion.

- If the battery leaks, do not expose skin or eyes to the leaking fluid. In case of contact with skin or eyes, rinse immediately with water and go to hospital for medical treatment.

- Do not throw the battery into the fire, otherwise the battery will catch fire and explode.

- Please dispose of the battery according to local regulations, and do not dispose of the battery as household garbage. Batteries may explode if improperly disposed of.

- Do not allow children or pets to swallow or bite the battery. Otherwise, the battery may be hurt or explode.

- Not recommended for snorkeling, hot showers, hot springs, saunas (steam rooms), diving, diving, water skiing, other wading activities facing high speed currents and deep water activities.

- Can prevent dust conditions such as living room, office, laboratory, light industry studio, storage room, etc., not suitable for special dust environment.

Environmental protection

- Please do not treat the device and its accessories as ordinary household garbage.

- Please comply with local laws and regulations regarding the disposal of this equipment and its accessories and support recovery actions.

Maintenance and maintenance

- Keep the equipment and accessories dry. Do not use external heating devices such as microwave ovens or hair dryers to dry them.

- Do not place the device or its accessories in an area where the temperature is too high or too low. Otherwise, the device may malfunction, catch fire or explode.

- If the product is equipped with leather watchband, please avoid using in the sun exposure, direct sunlight, high temperature, humid environment. If accidentally stained with water or sweat, please wipe it as soon as possible and place it in a cool and

Specification data

Project name	Describe	Project name	Describe
MCU	GR5515IOND	Normal operating current	34mA
Battery specification	165mAH	Standby current	120uA
Screen	1.09TFT	Waterproof level	IP67
Charging time	2H	Touch type	All touch

IV 、 Notes

1. When using the device for the first time, you should use it up before charging it

2. Before connecting the APP, open the authorization for the APP from the mobile phone system.

3. Make sure that bluetooth is turned on without interference.

4. This is IP67 life waterproof, not suitable for swimming and other sports.

5. Prevent the use of high temperature above 60° environment.

说明书折页 160 mmx160 mm

亚粉120-125g 正反面单色印

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.