

WD-200英文折页说明书：单页尺寸 71x99mm(双面印刷)

时间20220527

WD-200



Wireless Charging Clock Speaker

USER GUIDE

Hello! Let's get started!

Notice to User

- Please make sure to use a fast charging plug to power the device. (Charging plug not included).
- This device can only charge mobile phones that have standard wireless charging function.
- Wearing a metal phone case or a phone case that is too thick will block the wireless charging transmission. Please remove the phone case when wireless charging your mobile phone.
- There may be signal interference and an increase in noise in FM radio mode when wireless charge function is being used at the same time.
- When using FM radio mode, please plug in the provided AUX cable to the AUX Jack on the device. The cable acts as an external antenna for radio reception. You can adjust the position of the cable to maximize the radio reception.
- When the device is in clock mode, the **M** button will not function. Press the **O** button to fully wake the device first then press the **M** button to switch modes.
- For safety reasons, the device wireless charging function may temporarily stop when overheating is detected during the wireless charging process.
- If you want to use Bluetooth and wireless charging at the same time, please make sure the device is fully turned on and switched to Bluetooth mode.

Safety Instructions

Please read the following instructions. Failure to follow all the instructions listed below may damage the device and/or may result in electric shock, fire and/or personal injury.

- Do not expose the device to direct sunlight
- Do not remove screws from or open the device casing by yourself
- To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.
- The unit shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the unit.
- Never charge the device with a damaged power cable.
- Never put the device or charging cable near heat registers, radiators, stoves or heaters.
- Always put the device where it is not easily knocked over by persons in household or business.
- Never touch the device with wet hands.
- This device is only for the intended household or in-door use.
- Never use any detergents to clean any part of the unit.


Welcome

We would like to congratulate you on the purchase of your WD-200 Wireless Charge Clock Speaker. Please read this manual carefully before use.

What's Included

WD-200 device x1, USB Type-C power cable x1, Aux Cable x1, User guide x1


Overview

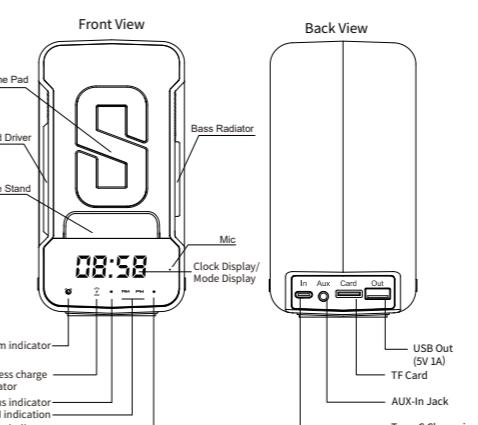

Front View labels: Silicone Pad, Sound Driver, Phone Stand, Mic, Clock Display/ Mode Display (08:58), Alarm indicator, Wireless charge indicator, BT status indicator, AM/PM indication, Power indicator.

Back View labels: In, Aux, Card, Out, USB Out (5V 1A), TF Card, AUX-In Jack, Type-C Charge in.

Button Functions

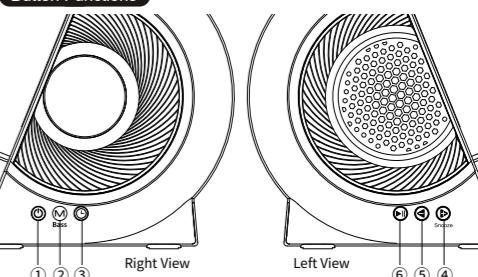

- ① Power Button:** Press & Hold: Power On/Off. Short Press after device turned on: Switch between Clock Mode & Working Mode.
- ② M Mode/Bass Button:** Short press: Switch modes. Press & Hold: Bass Adjust (BT/ FM/ Card Mode).
- ③ Clock Button:** Short Press: Set Alarm/Confirm. Press & Hold: Alarm On/Off. Press Twice: Set Time.
- ④ ▶/◀ Button:** Short press: Next Track(BT/TF Card mode)/ Next Channel (FM Radio)/ Add Hours/Minutes (Clock Mode)/ 5 minutes SNOOZE(When alarm buzzes). Press & Hold: Reject an incoming call (incoming call) / Disconnect devices(BT pairing mode).
- ⑤ ◀ Previous Button:** Short press: Previous Track(BT/TF Card mode)/ Previous Channel(FM Radio)/ Minus Hours/Minutes (Clock Mode)/ Alarm Dismiss (When alarm buzzes).
- ⑥ ▶/◀ Button:** Short press: Play/Pause(BT pairing mode, TF mode)/ Answer/End a call(Incoming Call)/ Mute(FM Radio/Aux in mode)/ Confirm (Clock Mode)/ Alarm Dismiss (When alarm buzzes). Press & Hold: Volume /Bass down.

Operation

Charging the device

This device has a built-in rechargeable battery. To charge the device, use the provided USB Type-C Cable, connect the Type-C connector to the Type-C Input on the device, and the Standard USB-A Connector to a fast charging plug/Adaptor (Not Included)*. The red charging led indicator illuminates when charging and turns off when charging is complete.

Note: Wireless charge function requires power connection to the charging plug.

Wireless Charge your mobile device

Connection to a fast charging plug is required to power the wireless charging function. The connection procedures are the same as how the device is connected for charging (Please see the steps above).

After the power is connected, Place your mobile phone on the phone stand of the powered WD-200 to wireless charge your phone. If charging is not stable, adjust the phone to make sure its back is touching the wireless charge area on the device. The wireless charge indicator lights up when charging.

Note 1: Some phone cases may affect or block the wireless charging transmission, remove the case if necessary.

Note 2: The wireless charge led indicator blinks if metals are detected indicating there is an abnormal situation. Remove any metals on the device to prevent overheating.

Note 3: 10W/7.5W wireless charge output require the device to be connected to a 9V-2A QC 3.0/PD fast charging plug. Connecting the device to a 5V-3A charging plug can only provide 5W wireless charging output. Using a non qualified power plug may result in malfunctioning of the device.

Note 4: The charging plug may not provide sufficient power if the wireless charging function, speaker function and USB charge out function are all used at the same time. In such situation, remove the USB connection is recommended.

Power On/Off & Switch modes

Press and hold the **O** button to turn on the speaker. Short press the **M** button to switch modes. Short press the **O** button to enter clock mode. Short press the **O** button in clock mode to switch on the device for other modes.

Bluetooth Pairing

Press the **M** button repeatedly to enter Pairing mode. The word "BLUE" will start blinking on the speaker indicating that it is waiting for device to pair. On your Bluetooth device, find and select "WD-200 / WD-200A" under your bluetooth device listing to pair. A successful connection via bluetooth will be followed by an audible notification. For help with Bluetooth Settings, please consult your device's user manual.

Handsfree Speakerphone

The handsfree speakerphone function is enabled when the device is paired with your mobile device. Press the **▶/◀** button to answer an incoming call. To decline a call without answering, press and hold the **▶/◀** button during an incoming call. To end a call, press the **▶/◀** button during a call. For the best conversation experience, make sure the WD-200 unit is placed near (within 40cm) the user.

FM Radio

Press the **M** button repeatedly to enter FM radio mode. Press and hold the **▶/◀** button to initial automatic channel search. Searched channels will be saved automatically. Press the **◀** or **▶** button to switch channels. Short press the **▶/◀** button to mute the speaker when listening to the radio and short press the button again to unmute.

Note 1: When using FM Radio mode, please plug in the provided AUX cable to the AUX Jack on the device. The cable acts as an external antenna for radio reception. You can adjust the position of the cable for better radio reception.

Note 2: Please note that FM signal can be weaken MUCH depending on the type of building you are in. (For example, It can be hard to catch proper signal when being in a concrete building or basements.)

Note 3: There may be signal interference and an increase in noise in FM radio mode when wireless charge function is being used at the same time.

TF Card

Insert a TF card to enter TF card mode or press the **M** button to switch to TF card mode if card is already inserted. Press the **◀** or **▶** button to select music from the card. Press the **▶/◀** knob to play/pause music.

Auxiliary Connectin (AUX)

Use the provided AUX cable, connect one end to the AUX Out jack of your audio source device and the other end to the AUX In jack on the WD-200 device. Press the **M** button to switch AUX mode. Press the **▶/◀** button to mute/unmute the speaker.

Setting the clock

This device can automatically synchronize the time on some mobile phone models after it is connected with the phone through bluetooth. It requires your phone to support this function in order to synchronize the time. If the time on the device is not updated after it is connected to the phone through bluetooth, then you may need to set the time manually through the following procedures:

Press the **O** button twice quickly to set the time. Press the **◀** or **▶** button to set the hour then press the **O** button or the **▶/◀** button to confirm. Now press the **◀** or **▶** button to set the minute and press the **O** button the **▶/◀** button to confirm.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: (Use in Bluetooth mode)

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RF warning for Mobile device: (Use in WPT mode)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Specifications

BT version:	V5.1	Charging output:	5W/7.5W/10W
Wireless Distance:	≤10m	Input voltage:	5V-3A / 9V-2A
Speaker Power:	3W	Size:	75.7x121.5x144 mm
Speaker impedance:	4Ω	Battery Capacity:	1200mAh

We produce quality products with our heart for our customers. If you encounter any difficulty in using our product please feel free to contact us and we will sincerely serve every customer. Contact information can be found from the online/offline store that you purchased this item.