

 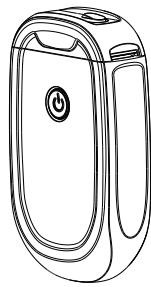


OPERATION INSTRUCTIONS

L11

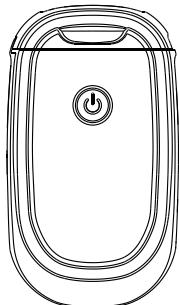

 
Device (1)




Data line (1)

03 BASIC USE


Slide left to lift the lid




① Opening method

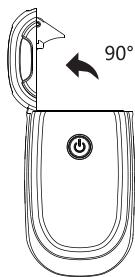


② Opening size

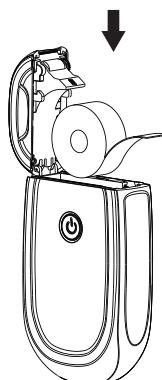

 ③ Consumable installation
Load paper with sticker face down



④ Correct closure

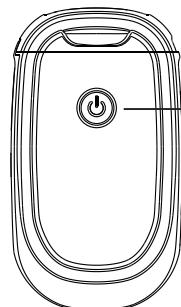

Press and hold the On/Off button to turn on the machine.

Connect the machine with the APP to set the specifications of consumables. Edit the print content and confirm the print.

- **Green light:** fully charged/in normal use
- **Red light:** charging/ paper shortage/overheating/cover opening
- **Red light flashing:** low power will cause the printed handwriting to be weak, please charge it in time
- **Orange light is on:** debugging mode has been entered. Press and hold the power button to shut down to exit debugging mode

04 WARNINGS

1. Make sure that the paper bin is clean before using the printer. If there is any debris in the paper bin, the print head may be damaged during printing. In case of any debris, use a special cleaning device or alcohol to clean the paper bin and print head.
2. Turn off the power immediately when the printer malfunctions.
3. There are complex circuits and devices inside the printer, please do not disassemble the printer without authorization.
4. Charge the battery in a cool and airy room. Do not expose the printer and power adapter to high-temperature and high-humidity environments, or water to avoid short circuits that can cause the battery to heat up, smoke, deform, damage, or even explode. If the power adapter comes into contact with water or other liquid, cut off the power immediately. When you notice smoke or an odor from your printer or power adapter, unplug the power adapter immediately and take care to avoid burns.
5. Please do not squeeze, mechanical vibration, shake the printer and power adapter, remove or modify the power adapter. It is forbidden to use the power adapter when the power cord is damaged, otherwise it will cause electric shock, fire and damage to the power adapter.
6. When unplugging the printer, grab the power adapter. Pulling the power cable will damage the cable.
7. Do not use the printer near flammable products such as gas stations and fuel warehouses.

05

WARRANTY

1. From the date of purchase, the print head of this product shall be guaranteed for 3 months or the print distance shall not exceed 30 km (whichever comes first), and the rest parts shall be guaranteed for 12 months.
2. You need to send the product to the sales service center for repair.
3. Products beyond the warranty period need to be repaired, Please contact the after-sales service center to provide repair parts for paid.
4. Warranty services are not available during the warranty period if:
 - (1). The damage is caused by accidents, overuse, misuse, or use of other companies' consumables.
 - (2). The warranty period has expired.
 - (3). You disassemble, repair or modify the printer without authorization.
 - (4). Missing prints are caused by the scratches on the print head.
 - (5). The purchase record is inconsistent with the serial number of the machine under warranty.
 - (6). The damage is caused by man-made or other force majeure.

WARRANTY CARD

Since purchasing this product, normal operation and have not been disassembled and repaired, and the warranty personnel confirmed that it is a product quality problem, all maintenance services are provided according to the warranty terms.

This card is the only certificate of product warranty. Please fill in and keep it properly when you buy it.

User:
Phone No.:
Purchase date:
Type:
Serial number:
Inspection: <input checked="" type="checkbox"/> Qualified



01 PACKING LIST

Start a brand-new marking experience in just two steps

1. Scan the QR code to download APP
2. Open the cover and put in the consumables

Scan the QR code below to download the APP



Google play or App Store

Search

Le Minyun

02 QUICK SETUP

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.