


Product Number: C95  
160401-24081304 V10  
Wireless Bluetooth Adapter

## Product Details

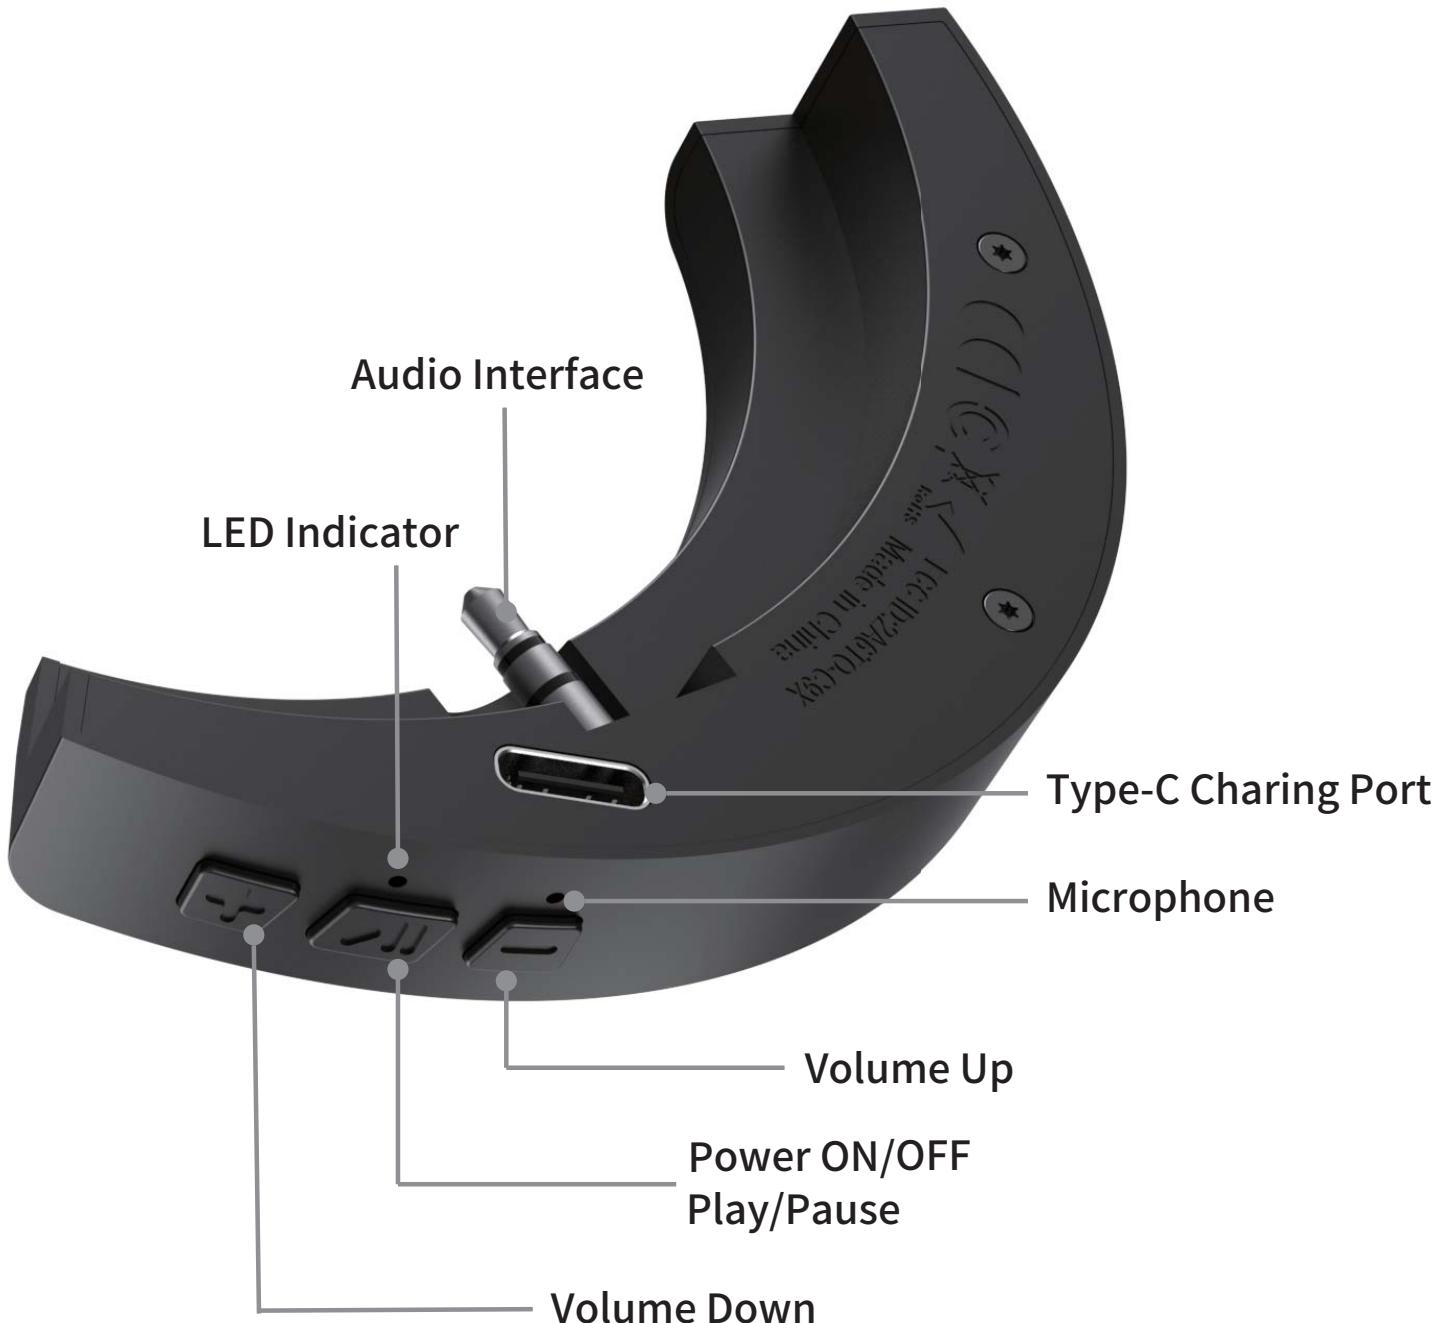

# Using Way



As show in the picture, put the adapter into your headphone.

## Pairing Method

- Long press the power button for 3 seconds to power on the adapter.
- Please keep the adapter and the cellphone in the range of 1 meters if it's the first pairing.
- The red and blue lights flash alternately when entering the pairing mode after adapter power on ( if it doesn't enter pairing mode, please long press the Vol "+" and Vol "-" button at the same time for 3 seconds until the red and blue lights flash alternately)  
\*Please refer to the “Enter pairing mode” in “Basic Operation” table on page 4.
- Open the BT set on your cell phone or the devices with BT function. Then search the BT devices and choose pairing name “ C95 ”. Enter “0000” pin code if needed.
- The blue LED flash slowly when it's paired successfully.

Note:

1. When the distance between the adapter and the BT devices is far than 10 meters or 33 feet, the adapter will disconnect from the devices. After that, once the they are in the range of 33 feet, they will automatically reconnect.
2. If the headphones has paired, you can force the adapter “Enter pairing mode” again which other cellphone can find the adapter and connect it.

## Connect Two Devices

- Follow the pairing method, pair the first cellphone and then “Enter pairing mode” again to pairing the second cellphone.
- Enter the cellphone setting interface of the first cellphone, and connect the device C95 again.

## Charging Method

With a Type-C cable(attach with the package)to connect the adapter and the USB port of your PC or charging source, the adapter will be charged. it takes 2 hours for full charging. When charging, the LED indicator is RED, after charging finished , the LED indicator will turn to BLUE.

Note:

- 1.Because the battery may lose some power in the storage, here kindly suggest charging your adapter full before the first time you use it.
- 2.When charging, the adapter can not be used.
- 3.If not use adapter for a long time, suggest charging it once a month to keep battery life.

## LED Indicator

Red led flash quickly: low power

Keeping red led light: charging

Keeping blue led light: charging complete

Blue led and red led flashing alternately: pairing mode

Blue led flashing slowly: connected/calling/playing music

Blue led flashing quickly: incoming call

Blue led double flashing slowly: the adapter doesn't connect the cellphone

## Product Accessories



## Specification

Play time: 15 hours+(depending on the actual volume and the sound source)

Charging time: 2 hours

Standby time: Up to 10 days

Effective range: 10 meters(33 feet)

## Basic Operation

Opeation	Adapter button controller	Warning tone
Power on	Long press Power button for 3 seconds	Power on
Power off	Long press Power button for 3 seconds	Power off
Answer a call	Click the Play/Pause button	No Buzzing
End a call	Click the Play/Pause button	No Buzzing
Reject a call	Double press Play/Pause button fast within 0.5 seconds	No Buzzing
Volume control	Click the Vol "+" / "-" button	No Buzzing
Play or pause the music play(*)	Click the Play/Pause button	No Buzzing
Next song	Long press the Vol "+" button for 2 seconds	
Previous song	Long press the Vol "-" button for 2 seconds	
BT paired		Paired
BT disconnected		Dingdong
Enter pairing mode	Long press the Vol "+" and Vol "-" button at the same time for 3 seconds	Ready to pair
Low battery		Dudu more times
Reset Paired List	Long press the Vol "+" and Vol "-" button at the same time for 10 seconds	

\*Because of the different operation system and music player, this feature may be different.

## Fault Diagnosis and Solution

Fault	Possible reasons	Solution
Can not power on	Check whether the battery is low	Charging it
Can not automatic connection	Check if enters standby mode	Double click on the Play/Pause button to reconnect or power on once again
Can not discover adapter	Not enter pairing mode	Long press the Vol "+" and Vol "-" button at the same time for 3 seconds

## Storage & Maintenance

- Please store the wireless adapter in a cool, dry place. The working temperature is -10~45 C(14~113 F). In cold or hot highly humid place will reduce the battery life.
- When long time storage, please charge it before using.
- Adapter resistance to water, but not waterproof, please don't put the adapter into water. If there is water on it, please use soft cloth to wipe clean.
- Use soft dry cloth to clean adapter.
- Do not use any sharp objects in connect with adapters.
- Do not put adapter at a higher or lower temperature.
- Do not charge the adapter in the moist environment.

## Product Warranty

Product Name:

Product Model Number: C95

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Customer Name: \_\_\_\_\_

Customer Phone: \_\_\_\_\_

Customer Address: \_\_\_\_\_

## Warranty Terms

1. There is a manual and warranty card in the package. User fill out the warranty card as the warranty certificate.
2. When adapter quality problems occur in normal use and not more than a year sine the date of purchased, users can enjoy free repair services.
3. Which of the following don't belong to the scope of warranty:
  - A. Warranty card without dealer signature or seal.
  - B. Artificial or force majeure cause damage.
  - C. Machine to normal wear and tear.
4. Such as the failure of human, more than the warranty period and irresistible reasons, we will collect repair costs.
5. If the product be send back to factory for repair, please contact us, and fill the warranty cards with your name, address, telephone and fault phenomena.

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.