

55MM



POWERXCEL™
AFM-2124AS, 620636
SMART FINDER
(KEEP LOCATE YOUR VALUABLE ITEMS)

70MM

Works with
Apple Find My

INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Getting Started

- Remove the product from the packaging.
- Please retain all packaging after you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Smart Finder
- CR2032 battery (preinstalled in the product)
- Instruction Manual

Key Features

- Smart Finder
- Uses Apple Find My App to locate your device
- Locate from iPhone, iPad, or Mac computer
- Simply attach the device to your keys, wallet, purse and you can start locating it remotely from your App
- Replaceable battery (button cell battery included)
- Siri compatible


Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Specifications

- Size (without the chain): Length 1.60 inch x Width 1.60 inch x Thickness 0.34 inch
- Suitable for: Keys, Wallet, Purse or other belongings
- Battery: CR2032 battery
- Standby time: About 6-8 months
- Net weight (with the chain and battery inside): **~0.42 oz (~12g)**

Description of Parts

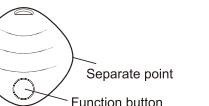

Battery Replacement

Smart Finder includes the battery (1 CR2032 Lithium battery); when battery is drained, replace battery as below:

- Use a small flat screwdriver to separate the front and back covers through the separate point.
- Replace the battery inside with a new CR2032 button cell battery as per the indicated polarity.
- Put back the back cover and secure both covers with its internal plastic locks.

⚠️ WARNING

This product contains a Button Cell Battery. A swallowed Button Cell Battery can cause internal chemical burns leading to death as little as 2 hours. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Do not mix with used or other types of batteries.

Instructions for Use

Switch on/off the unit


Switch on: Short press the button once and you'd hear a ring chime, indicating it is powered on and will be in pairing status.

Switch off: Long press the function button for three seconds. It should beep twice, indicating it is powered off.

Add your Smart Finder to the Find My App

- Open "Find My" App on your supported iPhone, iPad or Mac computer.
- Allow notifications from the App.
- Select "Items" at the bottom, then tap "Add Item", or tap on "+" icon directly.


4. Select "Other Supported Item"

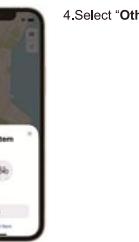

5. It will pop-up "Searching Items"



6. Make sure your Smart Finder is close to your phone. Wait ... until you see "PX SMART FINDER", then, tap "Connect".

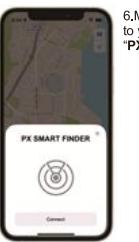

8. When "This Item Is Linked to Your Apple ID" is pop-up, tap "Agree"



7. Follow the pop-up fill name, and select an emoji, then tap "Continue".



9. Tap "Finish" to finish your Smart Finder set-up.



Function Introduction

- Find Items - Tap "Play Sound" to make your Smart Finder beep when it is nearby.
- Find your Item's location - Your Smart Finder's last known location will appear on the map as emoji you chose during set-up, tap "Directions" to navigate to the last known location.

Notifications

- Enable the "Notify When Found" toggle, when your Smart Finder's location is seen by another "Find My" enabled device, you will receive a notification of its updated location.
- Enable the "Notify When Left Behind" toggle, you will receive a notification when you leave your Smart Finder behind and it is no longer in range of your device.

Note: "Notify When Found" can only be activated when your Smart Finder is out of range.

Lost Mode

- When your Smart Finder is lost under "Lost Mode", tap the "Enable" tab, a screen calling "Lost Mode" will pop up, tab "Continue". You can enter your phone number or email address and tap "Next".
- You may enter a message that will be shared with the person that finds your Smart Finder.
- Tap "Activate" to enable "Lost Mode".

Note:

- When "Lost Mode" is enabled, "Notification When Found" is automatically enabled.
- When "Lost Mode" is enabled, your Smart Finder is locked and cannot be paired to a new device.

Learn More

- Smart Finder can be located by its owner using the Find my app. For more information, follow the instructions below.
- Locate the button on the front of the device.
- Press the button twice, you will hear a confirmation sound.
- Tap "Continue On Website" for more information including any Lost Mode message from the owner.

How to Disable

- Locate the button on the front of the device.
- Long press the function button three seconds until two beeps are heard. This will stop sharing the location of this Smart Finder.

Factory Reset

- Press the button 4 times rapidly and then hold it a fifth time until you hear a ringing chime.
- A reset operation is required to enable the device to enter the pairing state again (synchronization of Find My also requires simultaneous unbinding) and rebind the new Apple ID account.

System Requirements and Compatibility

- Apple ID
- iPhone and models with iOS 14.5 or later.
- iPad models with iPadOS 14.5 or later.

To use the Apple Find My app to locate this Smart Finder, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

About the Find My App

The Apple Find My network provides an easy, secure way to locate Smart Finder using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

Learn More

- Smart Finder can be located by its owner using the Find my app. For more information, follow the instructions below.
- Locate the button on the front of the device.
- Press the button twice, you will hear a confirmation sound.
- Tap "Continue On Website" for more information including any Lost Mode message from the owner.

How to Disable

- Locate the button on the front of the device.
- Long press the function button three seconds until two beeps are heard. This will stop sharing the location of this Smart Finder.

Factory Reset

- Press the button 4 times rapidly and then hold it a fifth time until you hear a ringing chime.
- A reset operation is required to enable the device to enter the pairing state again (synchronization of Find My also requires simultaneous unbinding) and rebind the new Apple ID account.

How can I prevent my device from being used for malicious tracking

Read the following recommendations before using the unit. Following these you will be able to enjoy the product for many years.

- Don't expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Don't expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

Important tips:

When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended.

- Change the phone's network, such as switching between WiFi and mobile. The first pairing may take a long time, please wait patiently.
- Reset your Smart Finder.
- When "Lost Mode" is enabled, DO NOT REMOVE ITEM in the APP. Your Smart Finder will be locked and cannot be paired to a new device.

Care and maintenance

Read the following recommendations before using the unit. Following these you will be able to enjoy the product for many years.

- Don't expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Don't expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product complies with the Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at: info@midtradngroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.