

Rechargeable Disco Speaker with Wired Microphone

Package Contents

- Wireless Speaker
- AUX Cable
- USB Type-C Cable
- Wired mic
- Remote control
- User Manual

Specifications

RMS:2X10W

Input:DC 5V

Battery Capacity:3.7V 2400mAh

Driver unit:6.5''*2

With light

Play Time:(80%VOLUME):2-3 Hrs

Charging Time:4-5H


Charging the Battery

- 1.The speaker is fitted with a 3.7v 2400 mAh rechargeable lithium battery(non-removable).It is recommended that the battery is fully charged before first use.
- 2.To do this connect the provided charging cable in to the USB charging port of the speaker.Connect the other end to a compatible USB port.
- 3.Once fully charged (up to 5 hours)the carefully disconnect both ends of the USB cable and store it carefully for future use.

Wireless Connection

- 1.Place the speaker within 10m of your Bluetooth enabled device(such as your phone).Switch the On/Off button to power on the speaker.
- 2.Open mobile devices (Cell phones,computers etc.)and turn on Bluetooth.
- 4.Search for the pairing name is **BT SPEAKER** to pair and connect to your speaker.
- 5.After the speaker has been paired successfully to your Bluetooth device (such as your phone)for the first time,thereafter it will connect automatically in around 10 seconds.

Instructions For Use

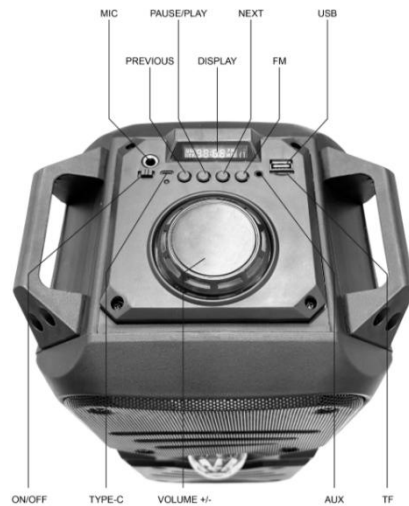

·**OFF/ON Switch**

-Activates power on and power off.

·**The MODE button:**

·Short press to switch between available modes (AUX / FM / BT/ USB / microSD)

Press and hold the Mode Button to turn ON/Off the lights.

·**PREVIOUS Switch:**

·Play the previous track or music when in Bluetooth,
TF card,USBmode.

·**Next Switch:**

·Play the next track or music when in Bluetooth,
TF card,USBmode.

·**pause/play**- This is the PLAY/PAUSE button:

·Short press to play or pause music,scan FM radio stations (only in FM radio mode)

·Double press this button to enter TWS mode.

·Long press to turn off TWS interconnection.

·**USB Port:**

·Supports USB

·**TF Card Port :**

·Supports TF Card and can play MP3
and WAV format music from the card.

·**MIC Port:**

·Plug in a microphone.


·**AUX Port:**

·Supports AUX

·**TYPE-C Port:**

·Supports type-c

Remote:It needs to be used facing the top of the speaker.

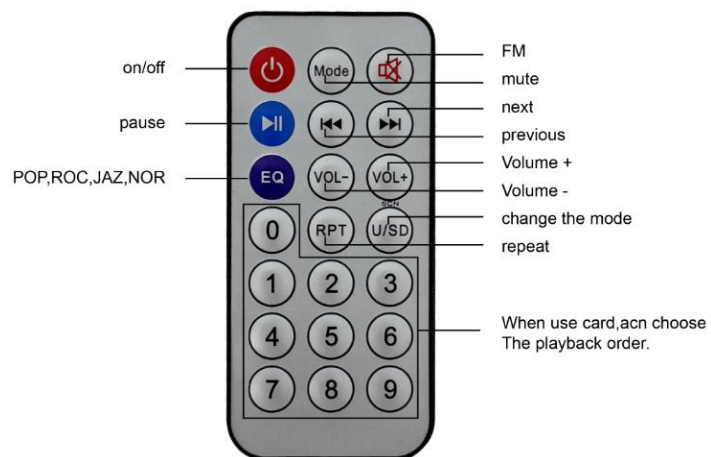

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.