

POR TABLE BLUETOOTH SPEAKER USER MANUAL TONEMAC B1

Welcome!

TONEMAC offers 12 months of global manufacturer's warranty and 90 days refund policy to make sure that every customer can buy without worry.

If you have any questions about our products or services, please feel free to contact us via the following email: Supports@TONEMAC.com.cn (Please send in your buying details, including shop name, order ID, your address, etc.)

@2022 TONEMAC Tech. Co., Ltd. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Printed in China

WARNING FOR SPEAKER

For safe and correct use of the speaker, read this manual before use. Keep the manual and safety information in a convenient place for future reference.

- The carabiner of the TONEMAC B1 speaker is for fixed position only, DO NOT use it to climb.
- To ensure that the speaker is waterproof, please remove all cable connections and tightly close the cap; exposing the speaker to liquids without doing so may result in permanent damage to the speaker. IPX7 waterproof is defined as a speaker that can be immersed in water up to 1m for up to 30 minutes.
- DO NOT expose the speaker to liquids without removing the cable connection. DO NOT expose the speaker to water while charging. It may result in permanent damage to the speaker or power source.
- After a liquid spill, DO NOT charge your speaker until it's completely dry and clean. Charging when wet might damage your speaker.
- DO NOT place any naked flame sources on or near the speaker, such as lighted candles.
- DO NOT make unauthorized alterations to this product.
- Use this product only with an agency approved power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).

INTRODUCING TONEMAC B1

Bluetooth Speaker *1

Micro-USB Charging Cable *1

Carabiner *1

Multi-Function Button (As MFB)

Volume + Button (As VOL+)

Volume – Button (As VOL-)

Indicator Light

Hook

WATER RESISTANCE

Your speaker is dustproof and waterproof. It is rated IP67. You can immerse the speaker in water for up to 30 minutes at a depth of 3.2 ft. (1 m). It can also be used while showering and in the rain or snow.

CAUTION: DO NOT submerge this speaker in any pool of water deeper than 3.2 ft. (1 m).

QUICK START

1. press and hold the MFB until you hear “Power on,” and the indicator blinks blue and red.
2. Enable the Bluetooth feature on your devices, the Bluetooth feature is usually found in the Settings menu. Then select "TONEMAC B1" from the device list.
3. Waiting for the pairing until you hear “Connected,” and the indicator blinks blue.

SPEAKER FUNCTIONS

Media Functions	Button Control
Play / Pause:	Click the MFB once
Skip Forward:	Press the VOL- 2 seconds
Skip Backward:	Press the VOL+ 2 seconds
Volume Up / Down:	Click VOL + / - once
Device Actions	Button Control
Power On / Off:	Press and hold the MFB 2-4 seconds

AUX connected	Insert the 3.5mm plug and the Bluetooth will automatically be disconnected.
---------------	---

CHARGE THE SPEAKER

1. Plug the small end of the USB cable into the USB jack on the speaker.

2. Plug the other end of the USB cable into a charger or computer that is powered on.

* *"Low battery" indicator sound means you need to charge the speaker, the indicator light blinks red at the same time.*

* *While charging, the indicator light solid red.*

* *When the battery is fully charged, the indicator light solid blue.*

COMMON SOLUTIONS

Problem	Solution
No power	The battery may be discharged. Connect your speaker to a wall charger or computer that is powered on.
Speaker does not connect with your mobile device	<ul style="list-style-type: none"> Disable and then enable the Bluetooth feature on your devices. Delete your speaker from the Bluetooth list on your device then connect again. Try to Connect to a different device.
No sound	<ul style="list-style-type: none"> Make sure you are using the correct device. Use a different music source. Connect a different mobile device. Move the devices within range of the speaker (30 ft. or 9 m).
Poor sound quality	<ul style="list-style-type: none"> Use a different music source. Connect a different device. Disable any audio enhancement features on the device or music app.
Speaker does not charge	<ul style="list-style-type: none"> Make sure the connector on the cable is correctly aligned with the connector on the speaker.

	<ul style="list-style-type: none"> Try another charging source. Secure both ends of the USB cable. If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.
Mobile device not responding to button presses	<ul style="list-style-type: none"> For multi-press functions using the Multi-function button, vary the speed of presses. Full controls may not be available for some models. Try another compatible device.

If you could not resolve your issue, feel free to reach TONEMAC Customer Services:

1. E-mail: supports@tangmai.com.cn
2. Online Shop where you purchase.

SPECIFICATIONS

Match Name	TONEMAC B1
Bluetooth Version	5.0
Bluetooth Profiles	HFP / A2DP / AVRCP
Stereo Audio Codecs	SBC
Bluetooth Range	Up to 10 m (33 ft)
Driver Size	40 mm
Frequency Response	20Hz – 20kHz
Playtime	10 hours @50%VOL
Charging Time	2 hours
Capacity	400mAh
Input	5V400mA
AUX	3.5 mm jack
Waterproof Level	IP67
Weight	115g

Limited Warranty

TONEMAC Technology Co., Ltd (“TONEMAC”) warrants this product against defects in material or workmanship for the periods and as set forth below when purchased directly from TONEMAC or TONEMAC Retailer. Under this Limited Warranty, TONEMAC will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, “refurbished” means a product or part

that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

For 1 year from the original date of purchase of the product (“Labor Warranty”), TONEMAC will, at its option, repair or replace with a new or refurbished product, the product determined to be defective.

This warranty is not transferable. This warranty does not apply in cases of abuse or misuse of the product, use contrary to TONEMAC’s instruction, ordinary wear, and tear, an act of God, negligent use, or purchase from a party other than TONEMAC or a TONEMAC-authorized reseller, unauthorized repair, or modification of the product.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED TO THE EXTENT PERMITTED UNDER APPLICABLE LAWS AND, TO THE EXTENT NOT PERMITTED, ARE HEREBY LIMITED TO THE DURATION AND TERMS OF THIS WARRANTY. TONEMAC ALSO HEREBY DISCLAIMS ALL LIABILITY FOR INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty does not restrict the rights of the consumer mandated under applicable laws.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

CE

TONEMAC hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

15.21 Information to user

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user ' s authority to poerate the equipment.In cases where the manual is provided only in a form other than paper,such as on a computer disk or over the internet,the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access inofrmation in that form.

[54 FR 17714,Apr.25,1989,as amended at 68 FR 68545,Dec.9,2003]