


SKU	
型号+产品名称+文件名称	C40 蓝牙UV长条灯 说明书 Atfoyer
尺寸(长x宽x高)mm	展开尺寸: 770 X 130mm 折后尺寸110 X 130mm
材质	80G书罩纸 四色印刷 正反面印刷 风琴折
料号	A330C402Z01
版本号	Z01

包装	电子	结构	确认人	审核人
林利斌				
日期: 2022.9.19	日期:	日期:	日期:	日期:

Atfoyer®




LED LIGHT


Product Manual

MODEL: ATC40CTBL

SAFETY INFORMATIONSDisconnect the power supply before attempting any work on the unit!WARNING: These units involve work on the main wiring supply. Installation must therefore be carried out professionally in accordance with the applicable national wiring regulations and electrical operating conditions.*The product must be installed by a licensed professional electrician.*Check all components for damage, do not use the product if it is damaged.*To ensure the product can work normally, please use it in the voltage within the range on the lamp label.*The floodlight enclosure heats up when the light is on. Please adjust the angle of the light after the power-off for 10-15 minutes. Do not look into the LED light as a direct range or any prolonged period (>5 min).*Do not install the unit on flammable/combustible surfaces.*Do not alter or change parts of the light at all, in case of the accidents such as breakage, fall, electric shock, fire, etc.*To reduce the risk of strangulation the flexible wiring connected to this luminaire shall be effectively fixed to the wall if the wiring is within reach.*The light source of this luminaire is not replaceable when the light source reaches its end or if the whole luminaire shall be replaced.*Never plug the light in with wet hands in case of electric shock.*This light is a non-flammable product. To avoid failure, please don't connect it with the dimming controller.*Do not connect this light future to an ungrounded electrical system.*WARNING: Heating the light in an ungrounded electrical system may cause the metal parts of the light to carry current if any wires or wire connections are damaged or loose. In this case, anyone who touches the light will receive an electric shock, resulting in injury or death. Be careful not to damage or cut the wire insulation (covering) during installation. Do not let the wires touch any sharp edges.*For type 2 earthed systems: The external flexible cable or cord of this luminaire cannot be replaced if the cord is damaged, the luminaire must be destroyed.

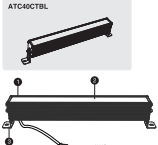COMPONENTS AND STRUCTUREATC40CTBL

1. Tempered Glass Lid
2. LED Light Source
3. Lamp Bracket

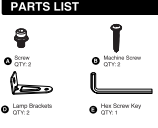PARTS LIST

- 1 Screw QTY: 2
- 1 Machine Screw QTY: 2
- 1 Expansion Rubber Plug QTY: 2
- 1 Lamp Brackets QTY: 2
- 1 Hex Screw Key QTY: 1

SPECIFICATIONSLED FLOODLIGHT


Model	ATC40CTBL
Input Voltage	VOL: 100V-60Hz
Input Current	0.32A
Rated Power	40W
Wavelength	380-650nm
Power Factor	>0.9
Chromaticity coordinate	x:0.193 y:0.0317
CRI	>93
Beam Angle	100°
T _a	20-40°C at P=104W
Luminaire Location	


DIMENSIONS ONLY LOCATIONS ONLY


Model	ATC40CTBL
Dimensions (LxHxW)	384 x 40 x 56 mm / 15.11 x 1.57 x 2.2 in
Weight	0.55 kg / 1.23 lb
Max Projected Area	0.0255 m² / 0.2744 sq.ft

Note:


The intended purpose of this special purpose product. This light is used to create atmosphere. It is not suitable for hospital room illumination, the light source is not intended for use in other applications.

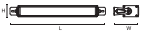

APP INSTALLATIONSSTEP 1

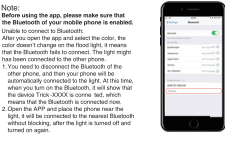
STEP 2

APP OPERATING INSTRUCTIONS




Brightness Selection Interface:

You could adjust the brightness.

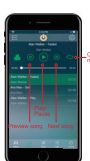


Music Mode Interface:

You could control the brightness and dynamic changes of the light by playing local music in the phone.

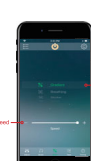

Dynamic Mode Interface:


The light has 5 dynamic modes (Smart, Bouncing, Strobo, Jump, Auto), and speed can be adjusted.

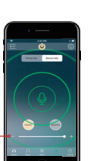

Mobile Speaker:

The dynamic modes can change with the sound inside the phone or other external sounds.


APP OPERATING INSTRUCTIONS




Scroll to select a device. Set all settings.

Timing Interface:

You can turn on or turn off the light regularly.




If you use the app to connect 2 or more lights, the app will default 1 these lights as a group, and you can control these lights at the same time.




If you want to control one of the lights separately, select the light first and then control it.

PREPARATIONCheck all components for damage, do not use the product if it is damaged.
Estimated Assembly Time:10-30 minutes

TOOLS REQUIRED (not included)

WARNING: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. RISK OF SHOCK- BEFORE BEGINNING INSTALLATION,TURN OFF ELECTRICITY AT THE CIRCUIT BREAKER BOX OR THE MAIN FUSE BOX.

INSTALLATION STEPS

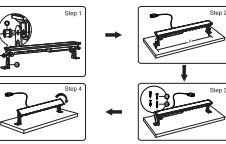

STEP 1:

Fix the bracket on the lamp with the combination screw. (as shown in the image)

STEP 2:

According to the spacing (see the "F" part of the picture) of two holes on the lamp brackets, drill two mounting holes. (as shown in the image)

STEP 3:

Put the brackets onto the prepared mounting holes and then screw them on.

STEP 4:

Adjust the beam direction as you like, and then plug into the main socket.

FCC ID: 2A6YR-ATC40CTBL

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide maximum protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Manufacturer/Reseller: Brightech Lighting Inc. 80 COMMERCIAL ST. PLAINFIELD, NJ 07050 www.brightechlls.com Made in China

