 


Elibom BC Lite

User Guide

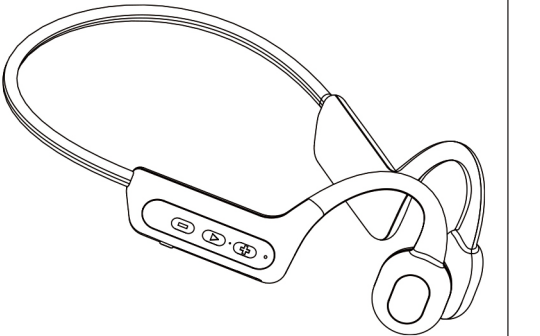

English

Warranty

All Elibom product carries a 12-month warranty from purchase date.

 
Please contact our official mailbox to activate the extra 2-year warranty.

Elibom customer service email:
elibomservice@outlook.com



Email QR code

Product information

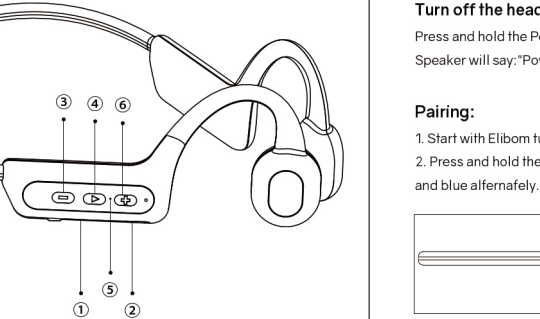

- ① USB-C Charging Port
- ② TF Card
- ③ Volume - Button
- ④ Multifunction/Power Button
- ⑤ LED Indicator
- ⑥ Volume + Button

Instructions

Turn on the headphones:

Press and hold the Power Button until the LED Indicator flashes blue and red alternately. Speaker will say: "Power on".

Turn off the headphones:

 
Press and hold the Power Button until the LED Indicator flashes red. Speaker will say: "Power off".

Pairing:

1. Start with Elibom turned off.
2. Press and hold the power button until the LED Indicator flashes red and blue alternately.




3. Open your device's Bluetooth settings and select "Elibom BC Lite". Speaker will say "Connected".

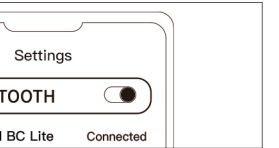


Wear

Pick up the headphones, bring them behind the back of the base of your neck, position the earhooks on your ears, then enjoy your music!

 Wearing your headphones the wrong way could cause discomfort. The transducers should rest in front of your ears.

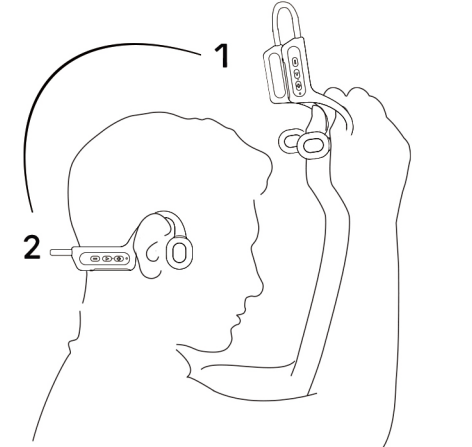

Multifunction Button

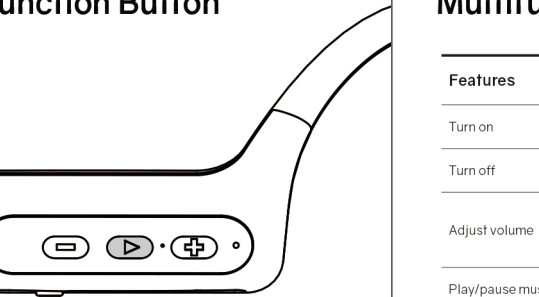 

- ▶ Play/pause music ●
Click once
- ☎ Answer call ●
Click once
- ⏻ Power On/ Off ●
Long press
- 📞 Decline the call ●
Long press while call coming
- 📶 Switch devices ●
Long press while during a call
- 📞 End call ●
Click once

Multifunction Button

Features

Operating

Voice reminder

Turn on

Long press the power button for 3 seconds

Turn off

Long press the power button for 3 seconds

Adjust volume

Volume+: Click the Volume + button once
Volume-: Click the Volume - button once

Play/pause music

Click the multifunction button once

Previous song

Long press the Volume- button while music is playing

Next song

Long press the Volume+ button while music is playing

Answer call

Click the multifunction button once during a call

End call

Click the multifunction button once during a call

Specifications

Model

BC Lite

Speaker frequency range

20Hz-20KHz

Microphone

-42±3dB

Bluetooth connection distance

10M

Battery

Polymer battery

Standby

150H

Weight

26.5g

Microphone impedance

200Ω (@1KHz (0dB=1V/Pa)

Speaker Sensitivity

90.98±3dB

Speaker Impedance

8Ω±10%

Bluetooth version

Bluetooth V5.3

Keep playing

Up to 7 hours

Charging time

1.5 hours

Microphone frequency range

50Hz-10kHz

Water resistance

IPX4

Battery capacity

170 mAh

*Only applicable for phone calls, not online calls.

Mirco SD Card mode

Operate controls with headphones powered on.

1. Double click on the multifunction button to switch between Bluetooth mode and Mirco SD card mode.

2. Mirco SD card support up to 128GB of music storage.

*Mirco SD card is not included.

Speaker will say "Bluetooth mode" / "Card mode"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Charging tips

When the headphones are at low battery, there will be a "battery low" prompt and the red light will flash intermittently. Use the corresponding cable for charging.

The LED indicator will turn red during the charging process and the headphones will automatically turn off. The LED indicator will turn from red to blue when charging is complete.

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Charging

Finished charging

Restore Factory Settings

Operate controls with headphones powered off.

1. Start with your headphones powered off.

2. Press and hold multifunction button 8 seconds until Speaker will "Beep" and the LED indicator flashes red alternately.

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Speaker will "Beep"

Storage and Maintenance

Store the headphones in a cool, dry place. The working temperature should be 0-45°C (32-113°F). Working in a cold/hot temperature, highly humid area, or low air pressure environment may reduce the battery life.

Keep the product away from heat sources, direct sunlight, combustible gas or other liquids.

Keeping the charging port dry before connecting to the charger will reduce the risk of damage.

These headphones are water-resistant, but are not waterproof. Please do not submerge the headphones in water.

Clean the headphones with a soft dry cloth.

Do not charge right after exercising, in case there's sweat inside the charging port, which could lead to circuit burning while charging.

After storage for a long period, please charge the headphones before using again.

Note:

Design and specification are subject to change without notice.

For the most up-to-date product information, please contact

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

elibomservice@outlook.com

Packing list

If any part of your product is damaged or missing, do not use it. Contact authorized Elibom dealer or Elibom customer service.

Box*1

Elibom Earphone*1

Charging Cable*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Earphone Storage bag*1

Foam Earplug*1

User Guide*1

Warning

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

 
Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

Small parts not for children under 3 years or any individuals who have a tendency to inedible objects in their mouths.

ELIBOM

Elibom BC Lite

ユーザガイド

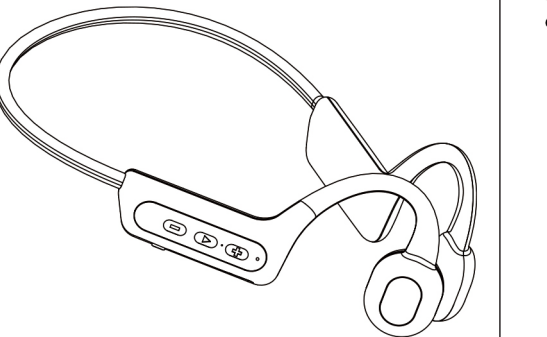

日本語

保証

 
すべてのElibom製品には、購入日から12か月の品質を保証する。
2年間の追加保証を有効にするには、公式メールでお問い合わせください。

Elibomカスタマーサービスの電子メールアドレス:
elibomservice@outlook.com



Email QR code

製品情報

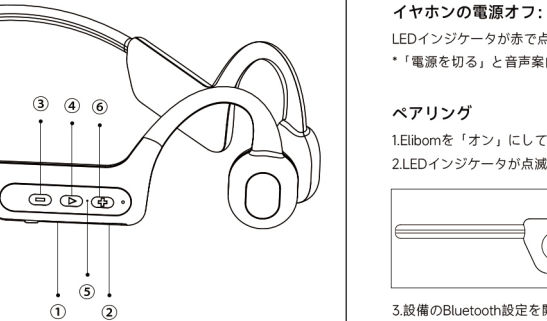

- ① USB-C充電ポート
- ② TFカード
- ③ 音量 - ボタン
- ④ 電源/マルチファンクションボタン
- ⑤ LEDインジケータ
- ⑥ 音量 + ボタン

使用説明

イヤホンの電源オン:
LEDインジケータが青く点灯するまで、電源ボタンを押し続けてください。
*「電源オン」と音声案内が聞こえます。

 
イヤホンの電源オフ:
LEDインジケータが赤で点灯するまで、電源ボタンを押し続けてください。
*「電源を切る」と音声案内が聞こえます。

ペアリング

- 1.Elibomを「オン」にして開始します。
- 2.LEDインジケータが点滅するまで電源ボタンを押し続けます。




3.設備のBluetooth設定を開き、[ELIBOM BC Lite)を選択します。「接続済み」と言います。

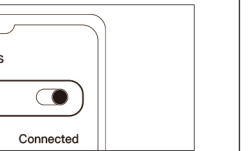

装着方法

 イヤホンを手に取り、首の付け根の後ろにまわしてください。
イヤフックを耳にかけて装着します。あとは音楽をお楽しみください。

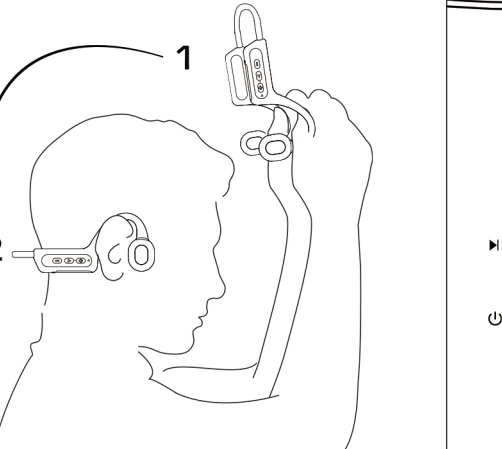

マルチファンクションボタン



- ▶ 音楽の再生/停止 1回クリック
- ☎ 通話の応答 1回クリック
- ⏻ 電源オン/オフ 長押し
- 📞 通話の終了 1回クリック

ボタン操作一覧

特徴	オペレーティング	音声リマインダー
電源オン	電源ボタンを3秒間長押しします	「電源オン」
電源オフ	3Sの電源ボタンを長押しをします	「電源を切る」
音量を調整する	音量+: 音量+ボタンを1回クリックします 音量-: 音量-ボタンを1回クリックします	音量が最大になると「ピープ音」が鳴ります
音楽の再生/一時停止	多機能ボタンを1回クリックします	
前の曲	音楽再生中に音量-ボタンを長押しする	
次の曲	音楽再生中に音量+ボタンを長押しする	
通話の応答	多機能ボタンを1回クリックします	
通話終了	通話中に多機能ボタンを1回クリックする	
英語と日本語を切り替える	音量+と音量-を同時に押し、2秒間長押しする	


*オンライン通話ではなく、電話の受信にのみ適用されます

ヘッドホン仕様

モデル	BC Lite	スピーカ感度	90.98±3dB
ラウドスピーカー周波数範囲	20Hz-20KHz	スピーカーインピーダンス	8Q±10%
マイクロフォン	-42±3dB	Bluetoothバージョン	Bluetooth v5.3
Bluetooth接続距離	10M	再生し続けま	最大7時間
バッテリー	ポリマー電池	充電時間	1.5時間
待機する	150H	ラウドスピーカー周波数範囲	50Hz - 10kHz
重さ	26.5g	耐水性	IPX4
マイクロホンインピーダンス	200Q(①1KHz (0dB=1V/Pa)	バッテリー容量	170 mAh

Mirco SD Cardモード

 ON イヤホンの電源を入れた状態で操作してください。

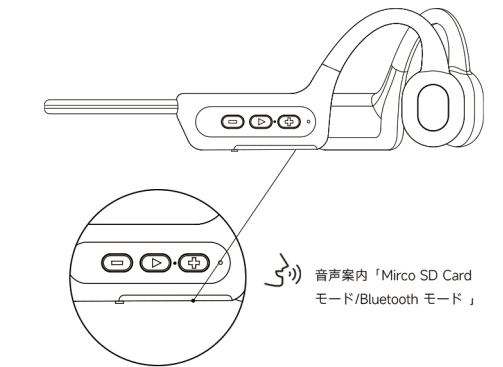


- 1.多機能ボタンをダブルクリックして、BluetoothモードとMirco SDカードモードを切り替えます。
- 2.Mirco SDカードは最大128GBの音楽ストレージをサポートします。


*Mirco SDカードは含まれていません。

充電のヒント

 イヤホンのバッテリー残量が少なくなると、「充電してください」と音声案内があり、LEDが赤く断続的に点滅します。対応するType-Cケーブルを使って充電してください。

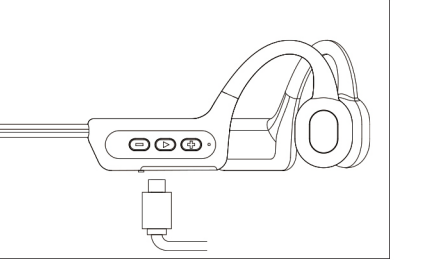


 充電の時、LEDインジケータが赤く点灯し、イヤホンの電源は自動的にオフになります。充電が完了すると、LEDインジケータは赤から青に変わります。

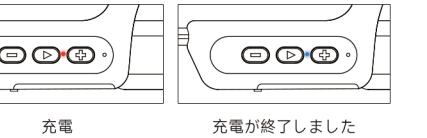

工場出荷時の設定に戻す

 OFF イヤホンの電源を切った状態で操作してください。

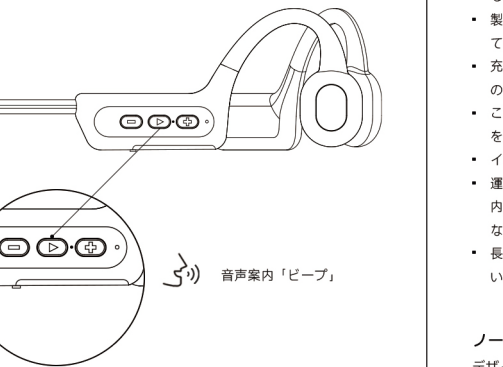

1. イヤホンの電源を切った状態から操作をはじめます。
2. スピーカーが「ピープ」音を発し、LEDインジケータが交互に赤く点滅するまで、多機能ボタンを8秒間長押しします。

保管とメンテナンス

 
 
- イヤホンは乾くて涼しい場所に保管してください。動作温度は0~45℃(32~113°F)とし、この温度を超える低温、高温、多湿の場所、または極端に低い気圧の場所での使用はバッテリーや製品の寿命を短くする原因となります。
- 製品は、熱源、日差し、可燃性ガス、およびその他の液体から遠ざけてください。
- 充電器に接続する前に、充電ポートを乾いた状態にしておくと、破損のリスクを減らすことができます。
- このイヤホンは耐水性がありますが、防水ではありません。イヤホンを水の中に置かないでください。
- イヤホンは柔らかくて乾いた布で拭き、常に清潔を保ってください。
- 運動をした後、すぐに充電しないでください。念のため、充電ポート内に汗などの水分が残っていると、充電中に回路が焼け故障の原因となります。
- 長期間保管した後は、再び使用する前にイヤホンを充電してください。

ノート:

デザインや仕様は予告なく変更されることがあります。
最新の製品情報については公式サイトをご覧ください。
elibomservice@outlook.com

同梱物

製品の一部が損傷または欠落している場合は、使用しないでください。
Elibomの正規販売店またはElibomカスタマーサービスに連絡してください。

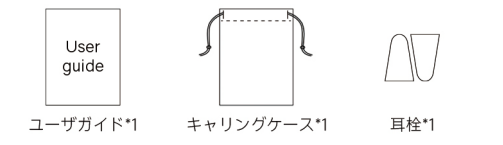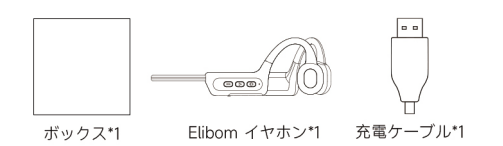

*販売地によってパッケージが異なります。

⚠ 警告: 3歳未満の子供や口の中で食べられないものになりがちな個人向けではない小さな部品。

ELIBOM

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.