

EN

USER MANUAL

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①Volume Knob/Power

②Tuning Indicator

③Tuning Knob

④Play/Pause

⑤Fast backward button

⑥Fast-forward button

⑦Modes Switch

⑧Loudspeaker

⑨TF card socket

⑩USB port

⑪AUX port

⑫Band selector

⑬Type-C charging port

⑭Telescopic Antenna

⑮Indicator light

DE

Gebrauchsanweisung

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①Lautstärkeregler/Ein-/Ausschalter

②Frequenzanzeige

③Senderwahlknopf

④Wiedergabe/Pause

⑤Rückspul-Taste

⑥Vorspul-Taste

⑦Moduswechsel

⑧Lautsprecher

⑨TF-Kartensteckplatz

⑩USB-Anschluss

⑪AUX-Anschluss

⑫Wellenbereichswähler

⑬Type-C Ladeanschluss

⑭Teleskopantenne

⑮Licht

IT

Manuale Utente

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①Manopola/Interruttore Volume

②Righello della stazione

③Manopola di selezione della stazione

④Riproduci/Pausa

⑤Pulsante indietro veloce

⑥Pulsante avanti veloce

⑦Commutatore di modalità

⑧Altoparlante

⑨Presa scheda TF

⑩Connettore USB

⑪Pres a AUX

⑫Selettore di banda

⑬Jack di ricarica Tipo-C

⑭Antenna del carrello

⑮Luce

FR

Manuel d'utilisation

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①Bouton de volume/interrupteur

②Règle de position de table

③Bouton de sélection de station

④Lecture/Pause

⑤Touche de retour rapide

⑥Touche d'avance rapide

⑦Changement de mode

⑧Haut-parleur

⑨Fente pour carte TF

⑩Fente USB

⑪Prise AUX

⑫Sélecteur de bande

⑬Fente de chargement Type-C

⑭Antenne télescopique

⑮Lumière

JP

取扱説明書

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①音量ノブ / スイッチ

②ステーション定規

③ステーション選択ノブ

④再生 / 一時停止

⑤早戻しボタン

⑥早送りボタン

⑦モード切替

⑧スピーカー

⑨TF カード端子

⑩USB 端子

⑪AUX 端子

⑫バンドセクター

⑬Type-C 充電端子

⑭プルアップアンテナ

⑮ライト

ES

Manual de Instrucciones

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①Perilla/interruptor de volumen

②Regla de emisora

③Perilla de selección

④Reproducir/Pausa

⑤Botón de retroceso rápido

⑥Botón de avance rápido

⑦Conmutador de modo

⑧Altavoz

⑨Toma de Tarjeta TF

⑩Toma USB

⑪Toma AUX

⑫Selector de banda

⑬Toma de carga de Tipo C

⑭Antena de látigo

⑮Iluminación

中文

说明书

1 2 15 3

9 10 11 12 13 14

8 4 5 6 7 8

①音量旋钮/开关

②台位尺

③选台旋钮

④播放/暂停

⑤快退键

⑥快进键

⑦模式切换

⑧扬声器

⑨TF 卡插孔

⑩USB 插孔

⑪AUX 插孔

⑫波段选择器

⑬Type-C 充电插孔

⑭拉杆天线

⑮灯光

I、Radio:

1. Turn the volume knob to turn on the radio and adjust to the appropriate volume. Use the band selector to choose MP3/FM/AM/SW mode.For better reception, please adjust the direction of the fuselage when listen to AM radio, pull out the tie rod antenna and adjusted to the appropriate position when listen to FM radio. Rotate the frequency selector knob, check the position of the tuning pointer in the indicator window, and select the station you want to listen to.

II、MP3 player:

1. Turn the band selector knob to MP3 mode, MP3 mode have 3 ways to play: Bluetooth / U-Disk / TF card. The “⑦” button can switch between this 3 modes, every time you switch mode will have voice prompts. (Note: TF card / U disk mode needs to insert the device before using).

2. Bluetooth name: MG001, you can search and connect it on your Bluetooth enabled device.

3. U-Disk / TF card support MP3/WMA/WAV format file.

4. The radio will automatically play the first inserted audio device (USB disk/TF card) in MP3 mode.

III、Pre-cautions

1. The radio is built-in lithium battery, please charge in time when the radio signal and music playback jam.

2. It's recommended to use DC/5V power supply charging, charging time is about 5 hours.

IV. Technical Parameters

Frequency Range	FM: 87-108MHZ	Sensitivity	FM: 10dB
	AM: 520-1710KHZ		AM: 80dB
	SW: 5.9-18.0MHZ		SW: 10dB
Battery	3.7V/1200mAh	Product Weight	About 646g
Charging Input	DC 5V	Product Size	190*130*77mm

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.