 
 
 




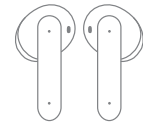

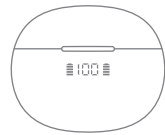 


 

 

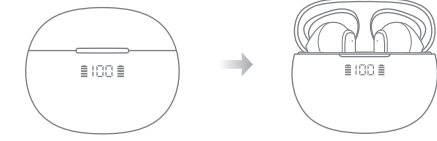 

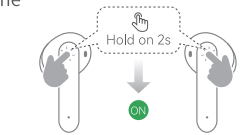 
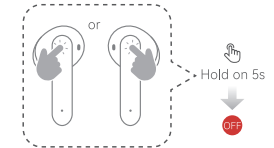 
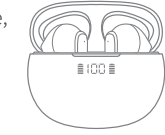 

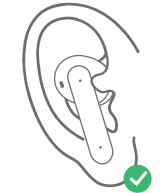 
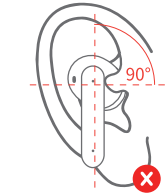 








| | |
|---|--|
| <div>T69 User Manual</div> <div>TRUE WIRELESS EARBUDS</div> | <div><div>PACKING LIST</div><div><div><div>Earbuds X2</div></div><div><div>Charging Case X1</div></div><div><div>USB-C Charging Cable X1</div></div><div><div>User Manual X1</div></div></div><div><div>Note:</div>Please Remove Protective Films On Earbuds Before Using It.</div><div>01</div></div> |
| <div><div>OVERVIEW</div><div><div><div>Main Sound Output</div></div><div><div>Vice Sound Output</div></div><div><div>L/R Logo</div></div><div><div>Touch Control Area</div></div><div><div>Charging Contacts</div></div><div><div>Microphone</div></div><div><div>LED Indicator</div></div><div><div>Left Earbud Charging Slot</div></div><div><div>Right Earbud Charging Slot</div></div><div><div>Earbuds Charging Status Display</div></div><div><div>Charging Case Power Display</div></div><div><div>Type-C Charging Port</div></div></div><div>02</div></div> | |
| <div><div>POWER ON/ OFF</div><div><div>Auto Power On</div><div>When opening the lid of charging case, the earbuds will automatically turn on and start pairing.</div><div></div><div>Note: If the charging case is in low battery states, the earbuds won't turn on automatically when you open the charging case.</div></div><div>03</div></div> | |
| <div><div>POWER ON/ OFF</div><div><div>Auto Power Off</div><div>Put the earbuds back in the charging case and close the case to turn them off.</div><div></div><div>Note: If the charging case is in low battery status, the earbuds won't power off automatically after you close the case.</div></div><div>04</div></div> | |
| <div><div>POWER ON/ OFF</div><div><div>Manual Power On</div><div>If the earbuds are not in the charging case, press and hold the MFB of each earbud for 2 seconds to power them on.</div><div></div></div><div><div>Manual Power Off</div><div>If the earbuds are not in the charging case, just press and hold the MFB of either earbud for 5 seconds to power them off.</div><div></div><div>Note: Can't be conducted during music playing or calling. The earbuds will automatically power off in 5 mins when there is no device connected.</div></div><div>05</div></div> | |
| <div><div>BLUETOOTH CONNECTION</div><div><div>1.Open the lid of the Charging Case, two earbuds will automatically power on and enter pairing mode. (At this time, the LED indicator of the master earbud flashes red and blue alternately, and the LED indicator of vice earbud flashes blue slowly.)</div><div></div></div><div><div>2. Activate the Bluetooth setting on your phone, search and connect "T69". (Once connected, you will hear a voice prompt "connected" and the LED indicators of both earbuds go off.)</div><div></div></div><div>Note: The earbud will reconnect to the last paired device by priority. If you want to pair to the second smartphone, please disconnect bluetooth on the previous device.</div><div>06</div></div> | |
| <div><div>RESET</div><div><div>When should I reset?</div><div><ul style="list-style-type: none">When only one side play music.When you can't use the two earbuds together.When both earbuds fail to pair with each other or occur connection related issues, etc.</div></div><div><div>How to reset?</div><div><div>1 Delete all "T69" from the Bluetooth menu on your phone and deactivate the Bluetooth setting.</div><div>2 Take out both earbuds from charging case, wait still one earbud flashes red and blue alternately and another earbud flashes blue slowly.</div><div>3 Tap either earbud 6 times quickly, earbuds will turn off with voice prompt "power off". Reset done.</div><div>4 Put earbuds back into the charging case, and take earbuds out again, now turn on the phone's Bluetooth and choose T69.</div></div><div>Note: After resetting, the previous pairing record between the earbuds and all your devices will be cleared. In case there is any unsuccessful message in your devices, please consider to delete historical record of T69, and try the pairing process again.</div><div>07</div></div></div> | |
| <div><div>HOW TO WEAR?</div><div><div>For earbuds to effectively transmit sound, they need to be lodged in your ear. Please place the earbuds snugly into your ear correctly in a comfortable way.</div><div></div><div>08</div></div></div> | |

MUSIC



 Tap once (L/R)
 


 → Double-tap (L) → 





Next Track → Double-tap (R) → 

Volume Up → Long-press (R) in play mode → 


 **Volume Down** → Long-press (L) in play mode → 

Note: Volume adjustment is only conducted in stereo mode (both ears mode) during playing music, can't be conducted in mono mode (single ear mode).





INCOMING CALL

  Tap once (L/R)  

Reject → Long-press (L/R) 2 sec → 

Hang Up → Double-tap (L/R) → 


Activate Siri or other voice assistants.

  Triple-tap (L/R)  

CHARGING

Charging the Earbuds

Put the earbuds into the charging case and close the case, they will power off & be charged automatically.

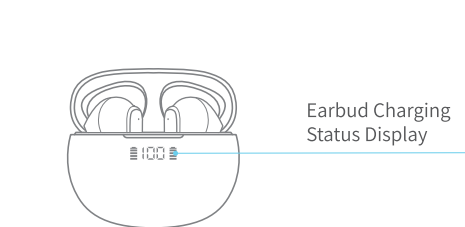


The earbud charging status display has 4 grids lights.
If the earbud is in charging state, flashes from 1st to 4th grid light repeatedly.
If the earbud is fully charged, 4 grids lights will turn on.

CHARGING

Charging the Charging Case

► **Method 1 : Wired Charging**
Please use 5V/1A adaptor to charge the charging case which can be charged with a computer USB OR other USB interface charger.

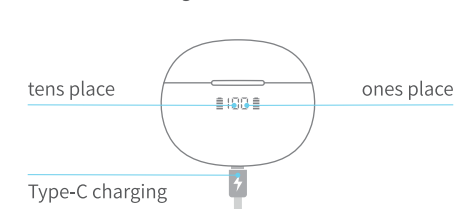


When the case is charging, the ones place of the digital power display flashes and tens place keeps on. Once the case is fully charged, the ones place keeps on together with the tens place, if we disconnect the external power supply of the case, the power display will go off after 10seconds.

CHARGING

►Method 2 : Wireless Charging

If the charging case doesn't start to charge, please try to reposition it. (Wireless Charging Pad Not Included)

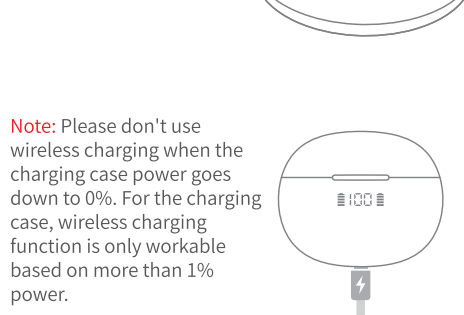

PRODUCT MAINTNANCE

| Earbud Status | Voice Prompt | Earbud Indicator |
|---|---------------------------|---|
| Turn on | Power on | Red & blue lights flash 1 second |
| Turn off | Power off | Red light flashes 1 second |
| L/R waits for sync | / | L/R flashes red and blue alternately |
| L&R synchronize successful (wait for pairing with device) | / | The master earbud flashes red and blue alternately, and the vice earbud flashes blue slowly. |
| Connected | Connected | The two earbuds indicator lights go out |
| Maximum volume | Maximum volume | / |
| Minimum volume | NA | / |
| Incoming call | You have an incoming call | / |
| Low battery | Please charging | / |
| Charging process | / | Red light on |
| Fully charged | / | Red light goes out |

SPECIFICATION

Earbud (Each)

1. Model Name: T69
2. Bluetooth Version: V5.3
3. Transmission Distance: 10m/33ft (without obstacles)
4. Supports: HSP/HFP/AVRCP/A2DP
5. Battery Capacity: 40 mAh
6. Music Playback Time: 7H(varies from volume level and song types)
7. Charging Time: 1.1H
8. Standby Time: 300H
9. Weight: approx 4g
10. Size: 35.25*18.40*10.43 mm

Charging Case

1. Battery Capacity: 400 mAh
2. Charging Time: 2H
3. Charging Port: Type-C
4. Weight: approx 38g
5. Size: 63.89*28.81*52.45 mm

PRODUCT MAINTANCE

- Never dismantle or refit the product to avoid malfunction or fire hazards.
- Keep away from corrosive liquids to avoid damage to the product.
- Keep away from extreme ambient temperatures below -10°C or above 60°C.
- Keep away from children and pets.
- Never touch the earphone with sharp objects, otherwise it will easily cause scratches.
- Don't use the product in thunderstorm weather to avoid malfunction or electric shock.
- If it has not been used for more than 1 week, please charge and maintain it in time to ensure that it is safe.

8. If the charging case is excessively discharged, the led display won't show immediately during charging. Please keep waiting for 15 minutes, the led display will show later.

9. After using a period time, the earbuds don't charge or even can't turn on, you can handle this problem by using an alcohol rag to clean charging contacts and charging pins.

10. If there is no sound from one earbud, you need to check if the phone & earbud volume is too low. If the phone & earbuds volume is normal, you need to reset the earbuds.

11. Please use the original charging cable provided by the earphone manufacturer for charging or choosing a Type-C cable.

Any questions, please feel free to contact us for assistance. Thanks.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.