 


使用说明书

Operating Instruction

43寸广告机
43 inch advertising machine

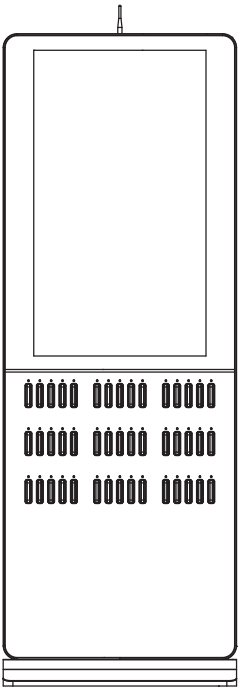 


注：机柜包装箱不含移动电源
Note: The cabinet packing case does not contain a power supply

产品特点product feature

本产品适合于公共场所及店铺中为客人提供共享充电服务的充电及控制机柜，产品正面43寸LCD显示屏幕。


This product issuitable for charging and control cabinets that provide shared charging services for guests inpublic places and stores .The front of the product has a 23.8-inch LCD displayscreen .

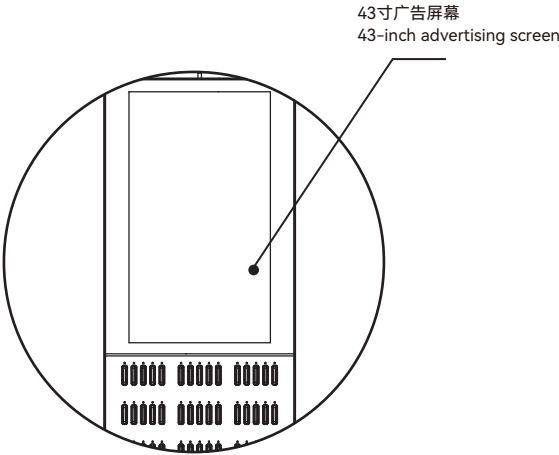

产品规格表Item Specification

产品名称 productname	43寸广告机 43 inch advertisingmachine
型号 model	YBT-001
尺寸 size	720mm (L) *545mm (W) *1930mm (H)
螢幕 screen	43英寸43 inch
支持通讯 communication support	4G WIFI 2G
机柜输入电压 stationinputvoltage	220V/50hz
机柜输入最大电流 Maximumstationinputcurrent	2.41A（满载状态fullload）/0.73A（待机状态standby）
机柜额定功率 Ratedcabinetpower	530W(充电宝充电状态 Charging status of the power bank)
AC电源适配器输入 ACpoweradapterinput	100Vac-240Vac（60Hz/60Hz）
机柜输出 power output	5V1.5A*45口

 
各部件名称Component Name

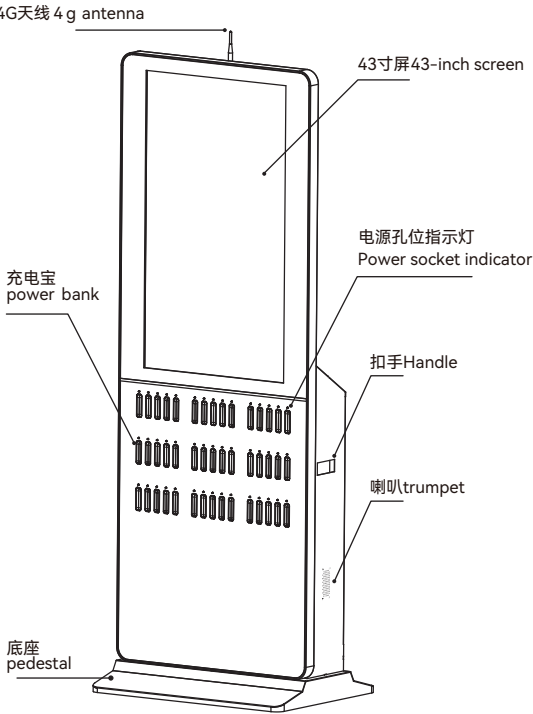

轴视图Axisview

主板型号 (Mainboard Model) : RK3288A
CPU: RK3288, 四核 (Quad-core), 主频(main frequency)1.8GHz , Android 5.1.1

 各部件名称 Component Name

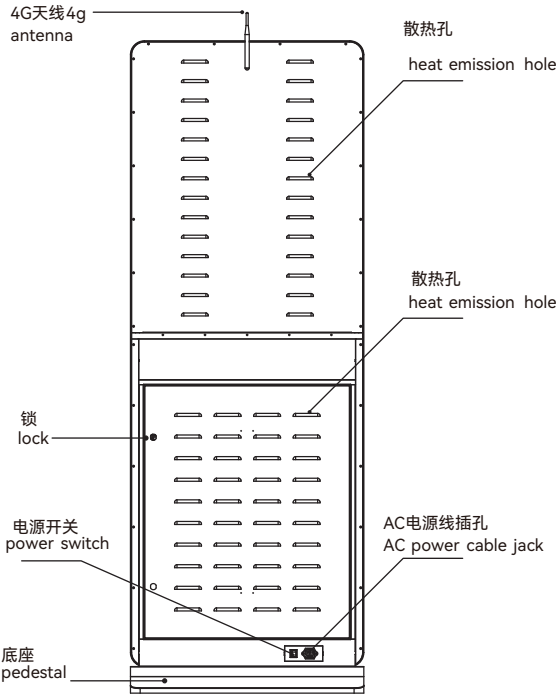

后视图 rear view

使用方法HOW TO USE

首次上电 First time to electricity

- 1.将AC电源线连接机柜背面的AC电源插口。开启电源 开关
- 2.接AC线接入电源插座。
- 3.43寸屏幕亮起启动安卓屏幕进入广告界面。
- 4.自动连接上网络后，有充电宝的孔位指示灯常亮，没有充电宝的孔位指示灯熄灭。

1. Connect the AC power cord to the AC power socket on the back of the cabinet. Turn on the power switch
2. Connect the AC cord to the power outlet.
- The 3.43-inch screen lights up to start the Android screen and enter the advertising interface.
4. After automatically connecting to the network, the indicator light of the hole position with the power bank is always on, and the indicator light of the hole position without the power bank is off.

借充电宝 Renting power bank

- 1.消费者机柜正面贴纸提示，下载APP。
- 2.安装APP后，扫码机柜正面二维码，根据提示注册与支付押金。
- 3.充电宝从机柜弹出，消费者取出充电宝开始使用。
- 4.租借充电宝时，系统将会随机弹出充电宝最高电量的充电宝。

1. There is a sticker prompt on the front of the consumer cabinet, and download the APP.
2. After installing the APP, scan the QR code on the front of the cabinet, and follow the prompts to register and pay the deposit.
3. The power bank pops up from the cabinet, and consumers take out the power bank and start using it.
4. When the charging treasure is in the concession, the system will randomly pop up the charging treasure with the highest power of the charging treasure.

还充电宝 Return power bank

- 1.消费者找到附近网点，将充电宝触点朝充电站孔位插入机柜中，并按到底。
- 2.充电宝正常归还后，机柜对应的孔位指示灯常亮。证明充电宝归还成功。
- 3.消费者APP提示归还成功，根据借出于归还时间计算租借费用与退押金。
4. 归还充电宝将建立与机柜主板串口通信，通信握手协议一致之后，将启动充电模组，给充电宝进行充电，直至充电宝电量充足100%，将停止充电。

1. Consumers find a nearby outlet, insert the charging treasure contacts into the cabinet towards the hole of the charging station, and press in the end.
2. After the power bank is returned normally, the indicator light of the corresponding hole in the cabinet is always on. Prove the successful return of the power bank 3. The consumer APP prompts that the return is successful, and calculates the rental fee and the refund of the deposit according to the return time of the loan.
4. Returning the power bank will establish serial communication with the main board of the cabinet. After the communication handshake protocol is consistent, the charging module will be activated to charge the power bank until the power of the power bank is 100%, and the charging will be stopped.

故障及处理方法Fault and handling methods

	故障现象 fault phenomenon	故障原因 fault cause	处理方法 handling method
1	插上电源线，显示屏及指示灯不亮 Plug in the power cord the display screen and indicat or light are not working	插头未插紧 plug is not firmly inserted	插紧或更换插头 Insert tightly or replace the plug
2	充电宝插入机柜立即又弹出 The power bank pops out immediately after being inserted into the cabinet	充电宝检测失败 Failed to detect the power bank	清理充电宝触点，再次尝试归还 Clean the charging pad and try to return it again
		网络异常 network anomaly	重新接插电源，重新联网 Re-plug the power supply and reconnect the network
3	充电宝归还后，APP未收到归还成功提示 After the power bank is returned,the APP does not receive a successful return message	网络异常 network anomaly	重新接插电源，重新联网或联系客服收到结束订单 Plug in the power again,reconnect the Internet or contact customer service to receive the end of the order

 
FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

各装箱明细 Packing details

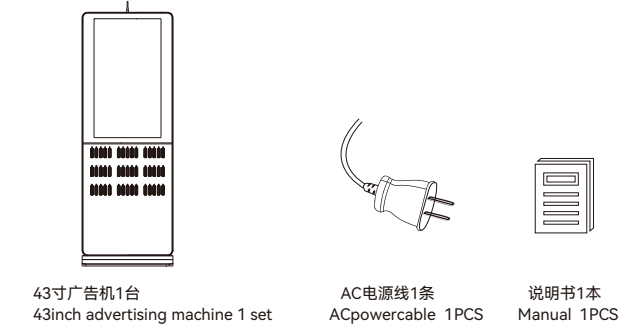

售后服务After-sales service

服务热线 servicehotline : _____

服务地址 serviceaddress : _____