



# Contents:

1.What's in the Box	2
2.Product Overview	3
3.Basic Operation	4,5
4.Charging with Type-C Cable	6
5.Charging with a Charging Case	7
6.Charging the Charging Case	8
7.Bluetooth Pairing and Connection	9
8.Basic Specification	9
9.Notice	10
10.Safety Instruction	11


# What's in the Box




Headset




Type-C  
Charge Cable



Eartip Covers \* 3  
[S / M / L]



Charging Case



User Manual

## Package Contents:

- A. Bluetooth Headset x 1
- B. Eartip Cover x3
- C. Type-C Charging Cable x 1
- D. Charging Case x 1
- E. User Manual x 1

# Product Overview

The diagram illustrates the components of the H100 headset and its charging case. The headset is shown from three perspectives: a side profile, a top-down view, and a front view. The charging case is shown open, revealing the internal battery and charging pins. The components are numbered 1 through 10.


- 1 MFB (Multi Function Button)
- 2 LED Indicator
- 3 Volume +
- 4 Volume -
- 5 Microphone
- 6 TYPE-C Charging port
- 7 Charging Pin
- 8 Battery Power Display
- 9 Charging Pin
- 10 TYPE-C Charging port

Basic Operation			
Function	Operation	LED	Beeper
Power on	In off status, touch and hold "MFB" button for 2s to power on.	Indicator light flashes blue 3 times.	Power on
Power off	In off status, touch and hold "MFB" button for 5s to power on.	Indicator light flashes red 3 times.	Power off
Enter into pairing mode	When you take it out of the charging case, it automatically enters pairing mode.	Indicator light flashes blue 10 times and then flashes red-blue alternately.	Pairing
Pairing completed	/	Indicator light off	Connected
Answer a call	Short touch "MFB" button(when call coming)	/	/
Hang up a call	Short touch "MFB" button( during a call )	/	/
Reject a call	Touch and hold "MFB" button for 2s ( when call coming)	/	/
Mute/ Unmute	Double touch "-" button(during a call)	/	Mute on/ Mute off
Redial a call	Double touch "MFB" button.	/	/

Play / Pause	Short touch "MFB" button when play music.	/	/
Siri	Touch and hold "MFB" button for 1 second to activate "Siri" in standby state.	Indicator light flashes blue.	/
Volume up	Short press "+" button.	/	/
Previous song	Press and hold "+" button.	/	/
Volume down	Short press "-" button.	/	/
Next song	Press and hold "-" button.	/	/
When charging the headset	/	Indicator light is red solid.	/
When the headset is full charged	/	Indicator light is blue solid.	/
Initialize	While charging, touch and hold "MFB" button.	Indicator light flashes red-blue alternately.	/

## Charging with Type-C Cable

When using the headset for the first time, please fully charge the battery. (Be sure to charge it with the included TYPE-C cable.)

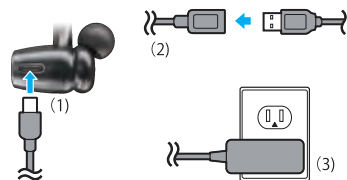

- (1). Connect the TYPE-C cable to the charging port on the headset.
- (2). Connect the TYPE-C cable to the AC adapter.
- (3). Plug the AC adapter into the outlet. The Indicator light is red solid.  
The Indicator light is blue solid when charging is complete.

### Charging with a Charging Case

(1). Put the headset in the charging case.

(2). Please attach the charging pin of the headset and charging case exactly.



(3). Closing the lid of the charging case to enter the charging state and the two utility poles beside the number will flash. The two poles will flash 3 times and then the lights will stay on when the headset is fully charged.




**NOTE:** The number displayed on the LED is the battery level of the charging case, not the battery level of the headset. The remaining battery level of the headset can be displayed on the connected device. In addition, when you take out the headset from the charging case and close the lid, the numbers LED light turns on and will turn off after about 30 seconds.

## Charging the Charging Case

Use the TYPE-C cable(included) and AC adapter (not included).

(1). When charging the case, if you open the lid, only the number on the right side of the battery display will flash.

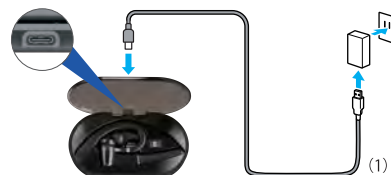

(2). When charging the case and the headset inside the case is fully charged, only the number on the right side of the battery display will flash and the light of two utility poles beside the number will stay on.



(3). When charging the case and the headset inside the case is not fully charged, the number on the right side of the battery display will flash and two utility poles beside the number will flash.



**NOTE:** When the case is fully charged, the LED light keeps on if you do not disconnect the charging cable. And when you disconnect the charging cable, the LED light will turn off after about 30 seconds.

In off status, shot touch the "MFB" button to power on and automatically enter into pairing mode with Indicator light flashes blue 10 times and then flashes red-blue alternately.

- A. Connect for the first time, Search and click to connect "G1" on your lists, LED light off after connected success.
- B. When there is a pairing record, press MFB to power on and enter into the auto-connect state.

Model	G1
Frequency Range	2402-2480MHz
Operating Range	33 feet/10 meters (No obstacles between)
Supporting Protocols	HFP 1.7/HSP 1.2/A2DP 1.3/ AVRCP 1.6
Charging Time(Headset)	1.5H
Talking Time(Headset)	12H
Music Time(Headset)	10H
Battery Capacity(Headset)	3.7-4.2V 105mAh
Battery Capacity(Charging Case )	400mAh
Charging Time(Charging Case )	1.5H
LED Indicator	Red/Blue LED light

## Notice

- Do not charge the battery for too long.
- The battery (built-in) can be recharged approximately 300 to 350 times, depending on the conditions of use.
- The battery (built-in) is a consumable item and is not covered by the warranty.
- The battery does not work or the usage time is significantly shortened when fully charged. The battery life may have expired. We do not replace batteries, so please purchase a new product.
- When the product is not used for a long period of time, the performance of the built-in battery may deteriorate. If you want to store the product for a long time, please charge it once a month.
- Do not charge the product near a wet source. It may cause fire or malfunction due to electric shock or short circuit.
- Be sure to disconnect the connection cable after charging. Please stop charging when charging is not completed after sufficient charging time. Charging the battery for longer than the specified time may cause the battery to heat up or catch fire.

## Safety Instruction

- When using the product while walking, please pay close attention to the surrounding traffic conditions. It may lead to traffic accidents.
- Please reduce the volume before use. Sudden loud noises will damage your hearing.
- To protect your ears, do not turn the volume up too loud.
- If the product is dropped into a flammable or liquid such as water, please stop using it and contact the store where you purchased it or us. If it continues to be used it may lead to fire, malfunction or electric shock.
- Do not touch the interior, and opening the interior may result in malfunction or electric shock. In addition, we do not guarantee performance if the interior has been modified.
- Do not charge with wet hands or touch the charging port. It may cause electric shock.
- If you feel uncomfortable while using this product, please stop using it immediately.
- If you are using a medical device such as a pacemaker, please consult your doctor before use.
- Do not allow children to use it.

- 11 -

折后尺寸: 65mm X 105mm  
材质: 105g双胶纸  
印刷颜色: 四色印刷  
折页折法: 风琴6折页

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.