

Mini Pocket Printer

User Manual

Scan to download the app



Download on the
App Store

Get it on
Google Play

Operational Video



Scan to watch the
instructional video

Scan the QR code for more language instructions.

English、Français、Deutsch、Italiano、Español、Português、
日本語、한국어、Bahasa Indonesia、Bahasa Melayu、
Türkçe、Русский、Dansk、Čeština、Nederlands、Svenska、
Ελληνικά、Polski、Magyar、简体中文、繁體中文、
Tiếng Việt、Filipino、Български、Hrvatski、Suomi、Latviešu、
Lietuvių、Română、Slovenčina、Slovenščina、Eesti、Bokmål

 


Model:	C2
Size:	95x83.5x42mm
Weight:	136.5g
Input:	5V $\equiv$ 1A
Connector:	USB-C
Battery capacity:	1200mAh(3.7V)
Consumable items:	15-50mm
Print:	Temperature-sensitive

EN

Product introduction

Power button Long press for 3 seconds to turn on/off

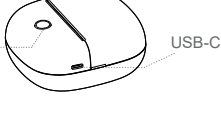

Power indicator status

Green light always on: fully charged; Power on and in normal condition;
Green light flashing: power on for charging;
Red light constantly on: abnormal state (paper shortage, lid opening, overheating, low power);
Red light flashing: power off and charge;
Blue light: The power on status is normal and Bluetooth has been connected;

In the startup state, click the power button six times to calibrate the label.

⚠ Please avoid direct contact with the print head to avoid damage, especially after printing, do not directly touch the print head immediately to prevent overheating

Replacement of consumables



- 1 Open the cover: see the direction of the arrow as shown in the figure. and pull the paper compartment cover up to open the cover.
- 2 Consumables: as the arrow shown, put the heat sensitive surface of the paper on the same side as the thermal print head

Safety and precautions

- 1 There is a built-in lithium battery, please do not use it in the environment with temperature higher than 40 °C; keep away from fire and other heat sources, and do not place it in the hot sun, such as closed car;
- 2 Children should be charged and used under the supervision of adults. After full charge, please make sure to pull out the charging line in time to prevent overheating, short circuit or fire;
- 3 Do not put the product in fire or water to avoid battery short circuit or fire or burn;

Troubleshooting Guide

When no content is printed: First check the paper loading direction. If the direction is correct but the problem persists, print a self-test page to troubleshoot. If the self-test page is normal, check the paper or application issues. Blurry printing: Check the print density settings, confirm if there are lines or partial printing such as clogged printhead, clean the printhead. If the result is still unsatisfactory, it is recommended to use original paper. Paper-out error message displayed: Check if the printer is out of paper; if not, ensure the cover is properly locked (loose pages may cause print misalignment or paper test failure). Unexpected printing stop: The printer has multiple protection mechanisms and will automatically stop working due to paper-out, data error, overheating or low battery to ensure reliability.

Warnings

- This product is a professional product, please use the original type of battery, if you replace the original type of battery or use the wrong type of battery, there will be explosion risk, be sure to follow the instructions to dispose of the used battery.
- Only one side of the printing paper can be printed. Please place the printing paper in the correct direction.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement

The device can be used in portable exposure condition without restriction.



www.luckjingle.com

Made in China