



Portable Thermal Printer User Manual

Scan the QR code for more language instructions.

 
English、Français、Deutsch、Italiano、Español、Português、
日本語、한국어、Bahasa Indonesia、Bahasa Melayu、
العربية、Türkçe、Русский、Dansk、Čeština、Nederlands、Svenska、
Ελληνικά、Polski、Magyar、简体中文、繁體中文、ภาษาไทย、
Tiếng Việt、Filipino、Български、Hrvatski、Suomi、Latviešu、
Lietuvių、Română、Slovenčina、Slovenščina、Eesti、Bokmål




APP downloads

Search "Luck Jingle" in the

App Store




ios

 

Android

Driver Download
 
<https://www.luckjingle.com/video?type=D82>



Product Information

Product model	D82
Printing mode	Row heat sensitive
Printing speed	20 mm/s(max)
Input power	5V=2A
Machine size	266x82x50 mm
Weight	680g
Paper type	Thermal Paper
Applicable paper size	56mm-216mm
Battery Capacity:	1800mAh(7.4v)
Communication interface:	USB 2.0/BT 4.2

 
EN

Product introduction

Power button
(Press and hold for 3 seconds to turn on/off)

USB interface
(It can be connected to a charging bank or a mobile phone charger)

Open key
(At the same time press the left and right to open the cover and change the paper)

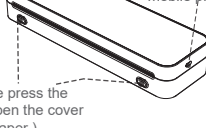

Connect device

Ios phone: please turn on the mobile phone BT;

Android phone: please turn on the mobile phone BT (Android6 - Android11 users need to turn on the phone's GPS) .

Windows driver installation steps - USB connection

 


1: Open the installation driver file and click "Install printer driver, Please connect your printer to the PC and turn it on.". Click to Next Step.

2:The next pop-up window selects the USB option and clicks Next.

3: After clicking "Next", find the list option with the name "D82_Printer" in the pop-up window, and continue to click "Next", etc. to connect the printer.

Windows driver installation steps - Bluetooth connection

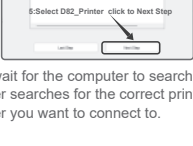



1: Select the Bluetooth option and wait for the computer to search for the printer device. Once the computer searches for the correct printer name, click on the name of the printer you want to connect to.

MAC driver installation steps

After downloading and opening the MAC driver file, click the 'Continue' button in the 'Introduction' section; in the 'Installation Type' section, click the 'Install' button; wait for the installation to be successful.



  Roll paper installation guide



Note: 1. The end of the paper needs to be exposed to the machine. 2. Rolls of different sizes can be fixed by pushing the paper limiter to the edge of the roll when installing different sizes of rolled paper.

Foldable paper installation guide



Note: 1. The side with the black label is the non-printing side. Insert the blank paper face up into the printer. 2. Make sure the printer is empty and the cover is closed tightly. Keep the paper parallel to the printer, face up, to avoid paper skewing or jamming during printing. 4. Tear off the paper along the tear line.

Safety and precautions

- There is a built-in lithium battery, please do not use it in the environment with temperature higher than 40 °C; keep away from fire and other heat sources, and do not place it in the hot sun, such as closed car;
- Children should be charged and used under the supervision of adults. After full charge, please make sure to pull out the charging line in time to prevent overheating, short circuit or fire;
- Do not put the product in fire or water to avoid battery short circuit or fire or burn;
- If you suspect that there is a problem with the battery please contact the after-sales service center for assistance

Warning

- In a residential environment, running this device may cause radio interference
- This is a professional product, please use the original battery. If you replace the original battery or use the wrong one Model batteries may explode.

Charging instructions

- It is recommended to use mobile phone charger to charge 5V/2A input charge
- It is recommended to charge the first time after purchase
- Charge once every three months, otherwise it is easy to cause lithium battery, long time natural loss, and can not charge the phenomenon

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation

 
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement

The device can be used in portable exposure condition without restriction.

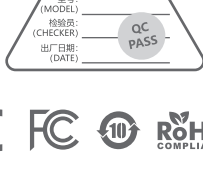

Address: Xiamen LuJiang Technology Co., Ltd.
Room 601-2, No.63-1, Wanghai Road Software
Park Phase I, Torch Hi-Tech Zone, Xiamen, China

www.luckjingle.com

Made in China