


Installation Guide


3-6 Power Adapter Connection Powering On the Device

1

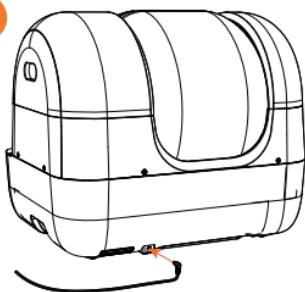

Connect the power cable.


2

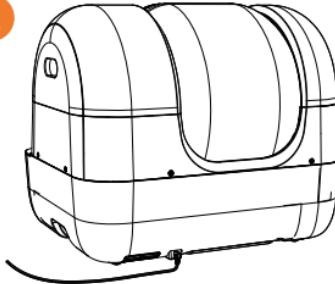


Cable connected.

*Note: Once powered on, the litter box will enter standby mode automatically.

3

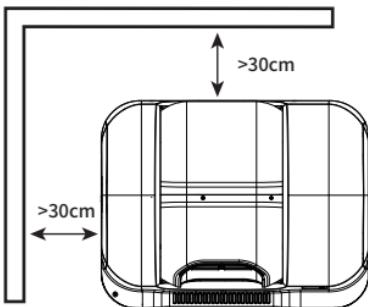

4

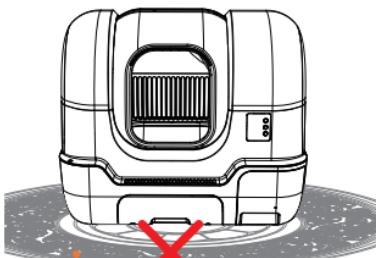

Carpet

Ensure the device is placed at least 0.3 meters away from the wall and positioned on a flat, hard floor. Do not place it on a carpet.

**Placing the device too close to the wall or on an uneven surface may result in inaccurate weight detection and operational errors.*



Funtion Instructions

4-1Funtional Descriptions

Icons	Function Description	Function Explanation
	Immediate Cleaning	Start the scooping process to clean urine clumps and feces.
	Immediate Flattening	Flatten the litter inside the roller after litter addition.
	Immediate Litter Replacement	Empty the litter in the roller and dispose of it in the litter tray.
	Immediate Packaging	Automatically package and seal the waste bag.
	Immediate Odor Control	Activate the odor eliminator and ozone generator for deodorizing.
	Opening Facing Up	Position the roller opening facing up to facilitate manual litter addition.
	Device Networking	Connect or reconnect the device to the network.
	Weighing Calibration	Recalibrate the weight measurement. <small>*Note: recalibrate if you change or add new litter, or if the weight measurement is inaccurate.</small>
	Language Settings	Switch the language.




Other Display Descriptions

Fault Alarm Display

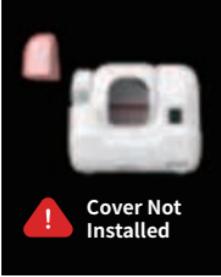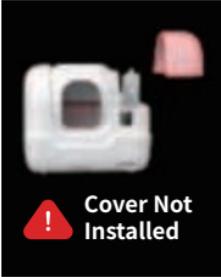Fault Display	Status/Handling Instructions	Fault Display	Status/Handling Instructions
	<p>Cover Not Installed</p> <p>Check if the side cover is properly installed and securely in place. Ensure there are no foreign objects blocking the installation.</p>		<p>Litter Tray Not Installed</p> <p>Check if the litter tray is pushed into position. Ensure there are no foreign objects blocking the interior.</p>
	<p>Cover Not Installed</p> <p>Check if the side cover is properly installed and securely in place. Ensure there are no foreign objects blocking the installation.</p>		<p>Roller Not Installed</p> <p>Check if the roller is properly installed. Ensure the rollers and gears are aligned and free from any foreign objects.</p>
	<p>Waste Bin Not Installed</p> <p>Check if the waste bin is pushed into position. Ensure there are no foreign objects inside that could obstruct it.</p>		<p>Litter Adding Fault</p> <p>Check if the litter bin is properly installed. Ensure there are no foreign objects blocking the installation slots, and check if the screw mechanism is obstructed by any objects inside the litter bin.</p>

Other Display Descriptions

Fault Alarm Display

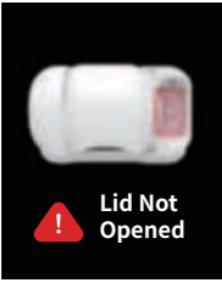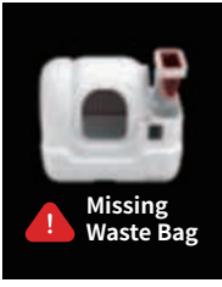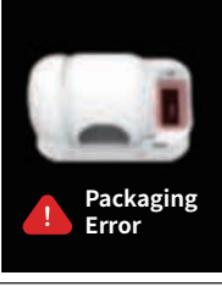
Fault Display	Status/Handling Instructions	Fault Display	Status/Handling Instructions
 Lid Not Opened	Check if there are any foreign objects obstructing the lid.	 Missing Waste Bag	Please place or replace the trash bag.
 Insufficient Litter	Check if there is enough litter in the litter bin and ensure it is properly installed.	 Waste Bin Full	The waste bin is full. Please pack and remove the waste bag.
 Packaging Error	Check if the waste bag is too full, and verify if there are any obstructions in the sealing area.	 Waste Bag Not Removed	The waste has been packed. Please remove the waste bag.

Other Display Descriptions

Fault Alarm Display

Fault Display	Status/Handling Instructions	Fault Display	Status/Handling Instructions
 Litter Bin Not Installed	Check if the litter bin is properly installed and ensure no foreign objects are obstructing it.		
 Pet Entered	A pet has entered the litter box.		
 Pet Nearby	A pet is nearby the device.		

Display Screen Instructions

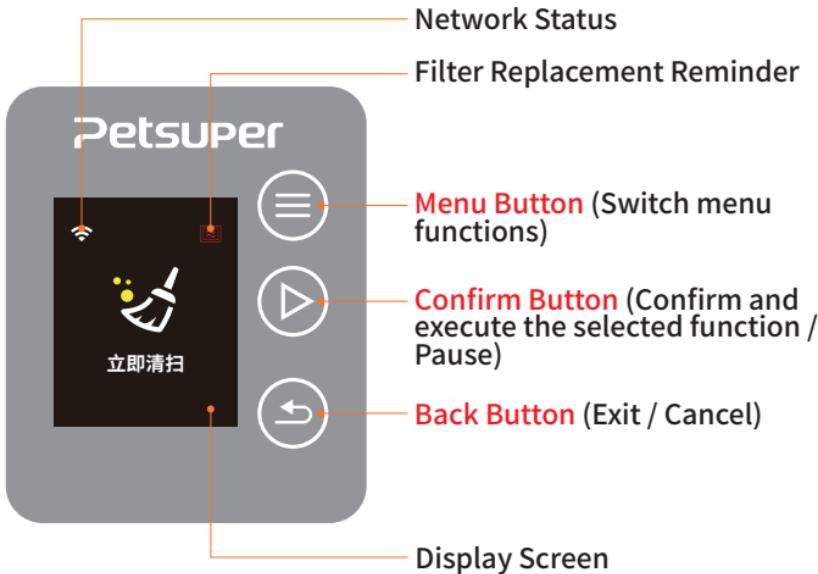


Status Description


Icon	Status	Description
	White	The device is successfully connected to the network.
	Red	The device is not connected or the network is offline.
	Red	The filter is not properly installed or has expired.

Automatic Litter Replacement

Note: Do not leave the device unattended during operation.

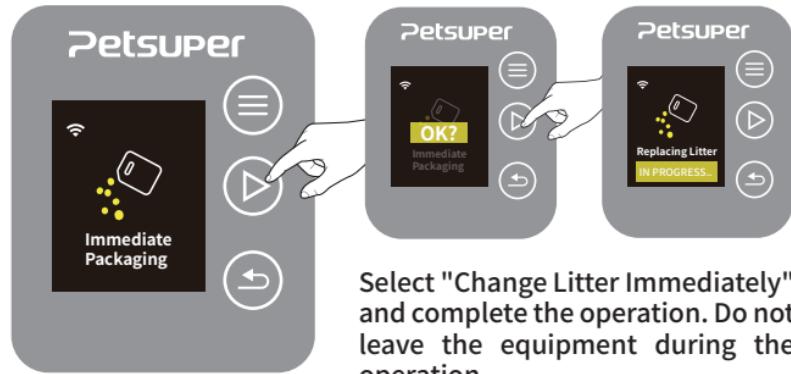


Select "Change Litter Immediately" and complete the operation. Do not leave the equipment during the operation.

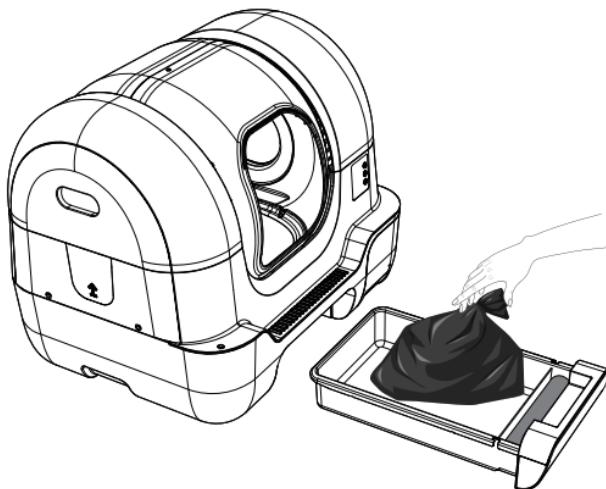


Remove the waste litter after the litter replacement is completed

Waste Packaging Function Instructions

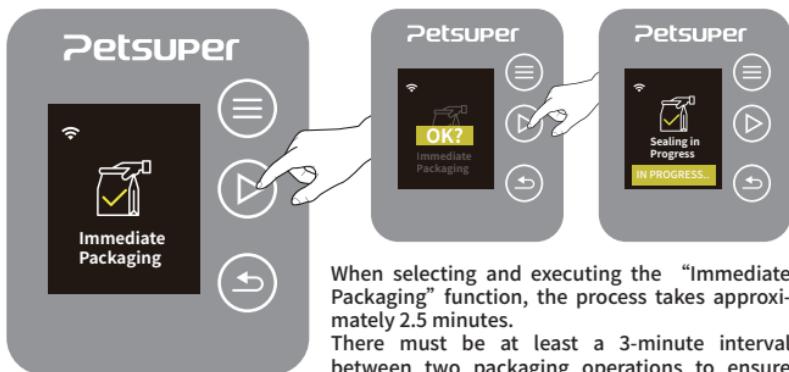

When selecting and executing the “Immediate Packaging” function, the process takes approximately 2.5 minutes.


There must be at least a 3-minute interval between two packaging operations to ensure proper sealing performance.

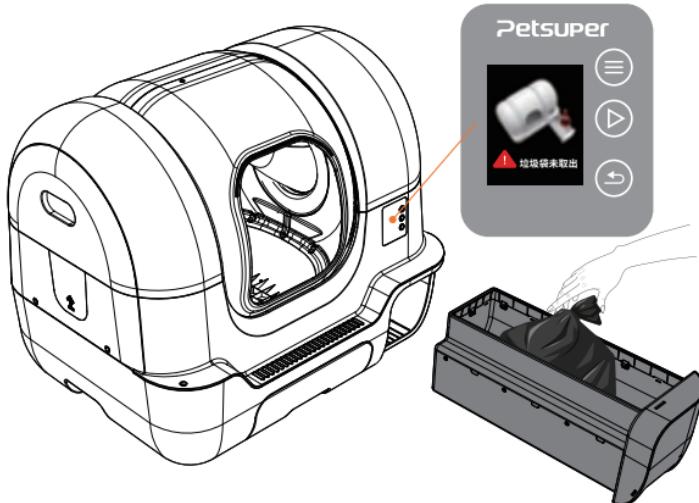


After sealing is complete, pull out the waste bin, remove the waste, and return the bin to its original position.

Replace the Waste Bag

1

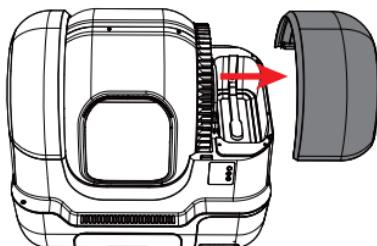


2

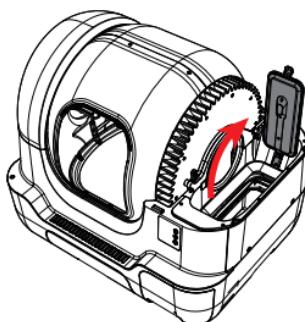

Remove the Right Side Cover.

Open the Lid.


3

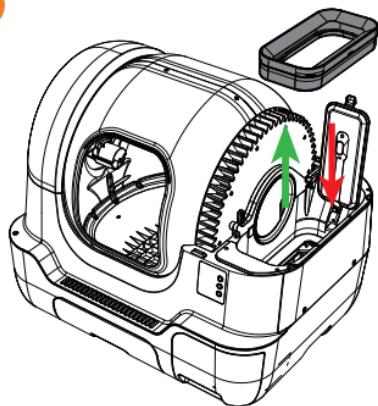

Remove the waste box and replace the waste bag. Press the waste bag down to the bottom of the bin to ensure it is properly installed and fully spread inside the waste bin.

Replace the Waste Bag

4

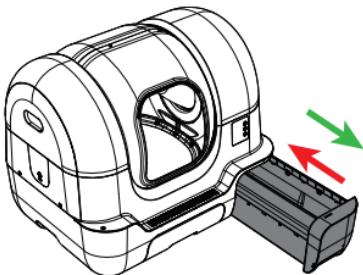

1. Pull out the waste bin, then push it back to activate the sensor.

2. Go to the “Waste bag can be sealed” section in the app and tap the “Reset” Button to reset the counter.

12:00

Replace the Waste Bag

The waste bag can be sealed approximately 30 times.

Due to variations in the size of waste clumps and each elimination, please adjust the setting according to actual usage. It's recommended to set the number of uses to be one or two fewer than the actual usage.

Reset

How to Replace the Waste Bag

Step 01

Remove the Right Side Cover. Open the Lid.



Right Side Cover

lid

Step 02

Replace the waste bag

Remove the waste box. Replace the waste bag. Press the bag down to the bottom of the bin to ensure it is properly installed and fully spread inside the waste bin.



Box for Waste Bag

Waste Bin

Step 03

Pull out the waste bin, then push it back to activate the sensor.


Go to the “Waste bag can be sealed” section in the app and tap the “Reset” Button to reset the counter.



Cleaning & Maintenance

For your cat's health, it is recommended to clean, maintain, or replace the following components regularly.

**[Warning] Do not immerse the main unit or the automatic litter packaging module in water. Only wipe them down to prevent damage to the device.*

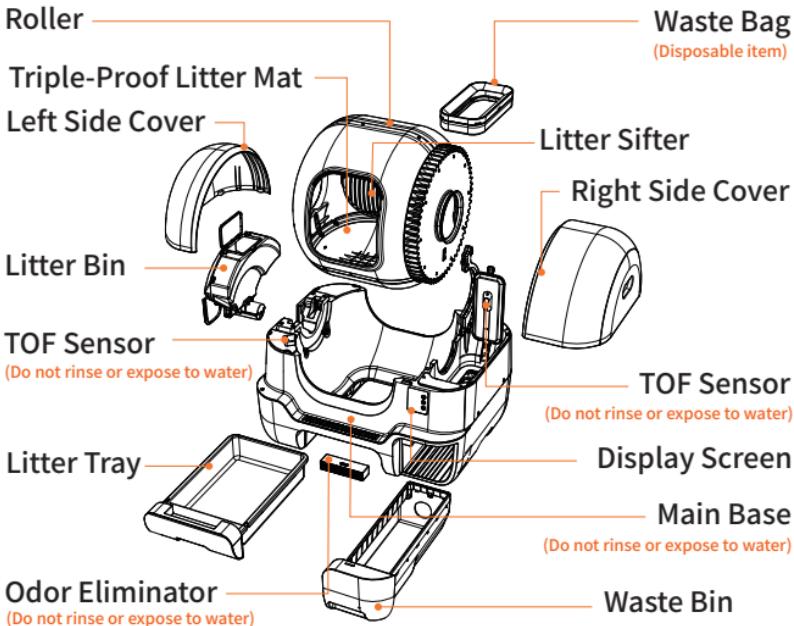


Cleaning and Disassembling the Roller

*[Note] Before disassembling and cleaning, please empty the litter.


*[Note] Always disconnect the power and turn off the device before disassembling.

1

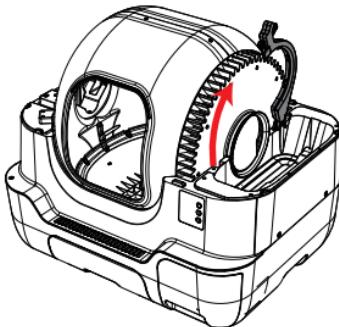

Lift the buckle to unlock.

2

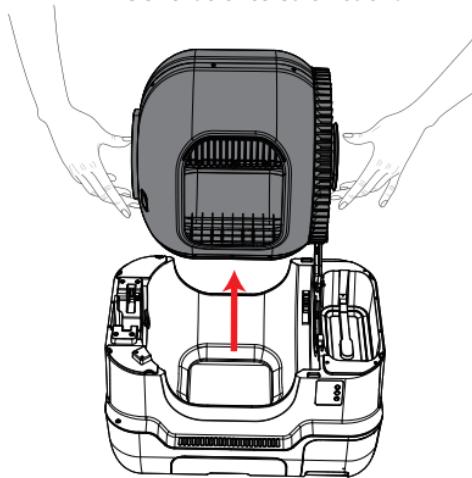

Lift upward to take out the roller.