

The product is divided into two parts, male massager and female massager.

Female massager, the flesh part can be clitoral stimulation; the core part can be placed in the vagina. The female massager can be worn, and there are ways to wear it outside the body (clitoral stimulation) and inside the body (vaginal placement). In vitro (clitoral stimulation) wear: the nucleus from the bottom of the host from back to front buckle stable in the hollow part and put on avocado panties finally long press the host button 1.5s into standby mode and put on newyogo panties. Put on (vaginal placement): put the nucleus through the hollow part of the main body, use lubricating fluid to make the vagina fully wet, then push upward into the vagina, finally long press the main body button for 1.5s to enter standby mode and put on the newyogo panties.

Start/off and lock

On: Press and hold the button for 1.5 seconds, the host turns on and enters standby mode, which can be remotely controlled.

Off: In standby mode, press and hold the button for 1.5 seconds, the host turns off.

Travel lock: In the off state, press the button three times in a row to enter the travel lock mode.

Repeat the action again to release the travel lock.

Short press :

Switching gears: Click the button after opening, the pulp + kernel vibrate at the same time, you can cycle through 8 vibration modes.

One-click orgasm: Double-click the button under any gear to make the pleasure go straight to the clouds, double-click again to exit the mode.

Male massager

Wearing way: after the penis is sufficiently hard, the button is placed facing upward, pull the resonance ring and set it to fix the value of the root, long press the host button 1.5s into standby mode.

Start and shutdown

Turn on: Press and hold the button for 1.5 seconds, the host turns on and enters the standby state can be remotely controlled.

Off: In standby mode, long press the button for 1.5 seconds, the host turns off. Note: Resonance ring without travel lock function, if not in use, please directly shut down.

Gear Description

Gear switching: single short press, you can enter the 5 vibration modes in order to cycle switching.

1-2 gears correspond to weak - strong 2 kinds of [intensity progressive] mode. 3-4-5 correspond to 3 kinds of [frequency vibration] mode respectively.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.