

2in1 Portable Computer

Quick Start & Service Guide

Robo&kala

TW220

Device Overview

1

2

3

4

5

6

7

8

9

10

11

1 Power Button

2 Volume Button

3 Microphone *2

4 Front Camera / Sensor

5 Left Speaker

6 USB Type-C*2

7 Kickstand

8 Smart Pen Charging Area

9 Right Speaker

10 Rear Camera/Indicator

11 Magnetic Keyboard Contact

All illustrations in this manual are for your reference only and may differ from the final product. Please refer to the actual product and read the manual carefully before use!

Initial Setup

Power on/off & Charging Instructions

Power on: When using your computer for the first time, connect the included power adapter and USB Type-C cable to charge the battery,press the power button to power on your computer. Once the battery is on, press the power button for 3 seconds to power on the computer.

Sleep Mode: When the computer is turned on, tap the power button or close the keyboard cover,and the computer will be in sleep mode.

Power off: Click > to power off, or hold down the power button until the power-off screen is displayed, and then swipe down.

To force your computer to power off, hold down the power button for 12 seconds at least. Note all unsaved data will be lost or damage!

Using an unapproved or incompatible power adapter or charger,may cause device damage or other safety hazards!

Operating Instruction

Adjusting the Kickstand

You can adjust the tablet angle using the back kickstand.Grasp either side of the kickstand and gently open it until you reach the desired angle.The maximum opening angle of the kickstand is 165 degrees, and use beyond 165 degree angle will cause damage.

30°-165°

To prevent damage kickstand hinge, do not apply excessive pressure to the kickstand!

Attaching Keyboard

Place the keyboard on a level surface, make the pogo pin upward. Grasp either side of the tablet, and align the keyboard golden pogo-pin with the tablet central.After the pogo pin positioner enters the tablet hole, it will click, and the keyboard is successfully connected.

1

2

3

4

5

6

1 Hinge

2 Pogo-Pin Positioner

3 Pogo-Pin

4 Keypad

5 Bluetooth Pairing / Backlight Adjustment Key / Battery Indicator

6 Touchpad

If the tablet and keyboard exceed the maximum acceptable opening and closing angle, they will fall off automatically. Beware of falling damage!

Attaching Accessories (Smart Pen)

Before using the smart pen, make sure the tablet is powered on. Once the smart pen is attached to the tablet, it will be charged automatically. The LED indicator flashes quickly, when the smart pen needs to be charged. Once it is charged, the LED indicator will stay on. The smart pen will automatically switch to power saving mode if the smart pen is not used for 1 minute. When its tip touches the tablet screen again, the smart pen will switch back to the using mode.

1

2

3

4

5

6

1 Stylus Tip

2 Erase Button

3 LED Indicator

4 Right-Click Button

5 Magnetic Charging Area

The smart pen is an optional accessory and is sold separately. It can only be charged while attached to the tablet. Please be cautious, the smart pen contains sensitive electronic components, dropping it may cause damage!

122mm x 100mm

Using and Activating

Before using the device, please read the Microsoft Software License Terms and the Robo&kala User Software License Agreement and Privacy Statement carefully.

To learn how we protect your personal privacy, please visit : www.robokala.com/privacy-policy.

Activate Windows:Computer activated automatically when connected to internet for the first time.

More Information

Please visit support.robokala.com.

Important Safety Information

To avoid personal injury, property damage, or accidental device damage, please read all the safety information in this manual before using your device.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Ideal operating temperatures are 0 °C to 35 °C. Ideal storage temperatures are -10 °C to +35 °C. Extreme heat or cold may damage your device.

Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.Please dispose of the used battery according to the instructions.

Certification information (SAR)

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit. The highest SAR value reported to the FCC for this device type when using in portable exposure conditions is 1.466 W/kg.

FCC statement

This device complies with Part 18 of the FCC Rules.

(a) Max. Electric Field Emissions: 13.10V/m

Max. Magnetic Field Emissions. 0.73V/m

(b) The maintenance of the system is the responsibility of the manufacturer.

(C) To prevent interference, the product should be as far away from devices operating at the same frequency as possible.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

Copyright Notice

The contents of the manual are protected by copyright laws. Without the prior written authorization of Shenzhen Ntmer Technology Co., Ltd. , nobody may copy or transcribe this manual in any way, or transmit this manual in any form in wired or wireless network.

Contact Us

Official Customer Service: please visit support.robokala.com and select "Online Service".

Service Email: support@ntmer.com

After-sales Service Policy

Dear customer, thank you for using our products. We will provide you with excellent after-sales service as follows:

The product may be returned if there are quality issues within 7 days of your purchase. Within 15 days of purchase, the product can be exchanged due to product quality issues. You may enjoy free warranty service during the whole 12 months of the warranty period.

To protect your legitimate rights and interests, please note the following:

1. A valid purchase certificate must be issued by the sales unit at the time of purchase.

2. The warranty card and proof of purchase should be properly kept by the user and will not be replaced if lost.

3. If the product fails due to non-human reasons, you can contact the merchant for free maintenance within the warranty period with the warranty card and purchase certificate.

Basic structure process:

横切线:

公差: ±0.2 mm

尺寸: mm

基本印刷工艺:

专色

Pantone cool gray 11C

Product Name: Portable Computer

Model: TW220

Input: 15V ==3A

Manufacturer: Shenzhen Ntmer Technology Co., Ltd.

N505001001

N1包装标准图纸

料号: XXXXXXXXXXXX 版本: 1.0

物料描述 (名称): N1 快速指南

图纸发布日期: 2022年10月09日

材料:

材质:80g双铜纸+双面单色印刷+风琴折页

基本结构工艺:

横切线:

公差: ±0.2 mm

尺寸: mm

基本印刷工艺:

专色

Pantone cool gray 11C

Product Name: Portable Computer

Model: TW220

Input: 15V ==3A

Manufacturer: Shenzhen Ntmer Technology Co., Ltd.

N505001001