

Troubleshooting

No power	Recharge your speaker using the included micro USB cable. Try using a different cable.
Music is not playing over Bluetooth	Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device.
Bluetooth device will not reconnect with the speaker	Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap "MERKURY S301B" and select "Forget." Now follow the steps to pair your device again.

Specs

Speaker Specifications: Output Power: 3W Driver Size: 57mm	Power Information: Input: DC 5V Battery Capacity: 500mAH Music playing time: Up to 3 Hours* Charging time: Approx 2 hours
Additional Connection Sources: Power Source: Built-in rechargeable battery or via Micro USB cable	
Bluetooth® Information: Bluetooth® Specification: V5.0 Operating Distance: 30 Ft. System Requirements: Bluetooth®-capable device	

*Depends on individual use and may be slightly more or less than the time specified.

Technical Support:
 If you are experiencing problems, do not attempt to fix the product by yourself or return it to the store you bought it from. Please refer to the user manual or just contact our helpful support team:

Merkury Innovations
 45 Broadway, 3rd Floor
 New York, New York 10006
www.merkuryinnovations.com
support@merkuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference received, including interference that may cause undesired operation.

©2022 Merkury Innovations, LLC.
 To explore our full selection of products, visit us at: www.merkuryinnovations.com

Bluetooth is a registered trademark of Bluetooth SIG, Inc. The illustrated product and specifications may differ slightly from those supplied. All other trademarks and trade names are those of their respective owners.
Made in China

Bluetooth®

User Manual for MI-S301B

Package Includes:
 SWANK Bluetooth® Speaker | Micro USB Cable | User Manual

Charge

- Plug the micro USB cable into the micro USB port on the back of the speaker, and connect the other end of the cable with any compatible charger or wall outlet.
- When charging, the small LED indicator will glow solid red. When fully charged, the LED indicator will turn off.
- Charging time is approximately 2 hours.

Turn On & Off

- Press and hold power button on bottom of the speaker to turn device ON and OFF

Pair & Connect

- Make sure the speaker is turned off and your device's Bluetooth® setting is activated.
- Turn the speaker on; after a few seconds it will automatically enter into pairing mode & the LED will flash.
- On your Bluetooth®-enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature, and search for new devices.
- Wait a few seconds & select "MERKURY S301B" The speaker will emit a tone when successfully paired.

NOTE: If your device's Bluetooth® version is below version 2.1, you may need to enter the password "0000."

Play

- Connect your device to the speaker via Bluetooth® (see "Pair & Connect").
- Open your favorite music app and press play.
- Change the track and volume, or control them from the controls on the speaker.
- Press the "+" or "-" button once to skip to the next/previous track. Press & hold to raise/lower the volume on the speaker.
- All audio, including music, games, videos, and notifications will be routed through the speaker.

Reconnect to Bluetooth®

- You only need to pair your Bluetooth® device with the speaker once.
- With your previously paired device's Bluetooth® turned on & in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth® device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device, turn on the Bluetooth® feature, and select "MI S301B" from your list of paired Bluetooth® devices.

Control

Bottom of Speaker

Press and Hold: Power On/Off • Reject Call
 Press: Play/Pause Audio • Answer call
 Press 2x: Switch between Wireless and TF Card

Press and Hold: Increase Volume
 Press: Next Track

Micro USB Charging Port

TF Card Slot

Press and Hold: Decrease Volume
 Press: Previous Track

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.