

FRONT

WIRELESS  
Karaoke  
MICROPHONE & SPEAKER  
WITH MINI USB DISCO BALL

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.


NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




Because of continuous improvements, the images and the specs on the packaging may differ slightly from the actual product

BACK

CONTROL PANEL

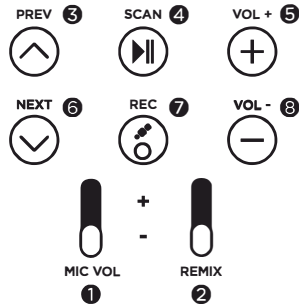

INPUTS

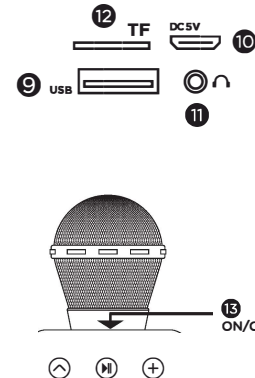

- 1 Mic volume Increase/Decrease slider
- 2 Reverb volume Increase/Decrease slider
- 3 Previous song \*Under selfie mode, press it to enable selfie function (only for ISO system mobilephone)
- 4 Play/Pause Long press: Automatic search
- 5 Volume increase
- 6 Next song
- 7 \*With use of TF Mode Replay/Record
- 8 Volume decrease
- 9 USB Slot \*Attach mini disco ball
- 10 DC5V / AUX / ANT DC5V: Power slot AUX: Audio line in
- 11 Headset connection
- 12 TF Power slot
- 13 Power buton Long press: ON/OFF

WIRELESS KARAOKE

- 1. Make sure the unit's battery is charged. Hold Power buton to start the product
- 2. Wireless connection: Enable Bluetooth from your mobile device, locate the microphone's pairing name: MVMТ\_SP3583 and connect to the microphone Prompt tone will notify you of a successful connection
- 3. Play your song selection from your device. Adjust sound: Using the Mic Volume / Reverb Volume slider to adjust the volumes to suitable level
- 4. Start singing Karaoke!

RECORDING WITH MOBILE PHONE

- 1. Connect the recording wire: Insert the MICRO USB plug of the recording wire into the MLCEI interface of the karaoke mic and 3.0mm interface into the earphone jack of the mobile phone
- 2. Open the Karaoke software in the mobile phone (or other recording Apps), select your favorite song, record the song using the method mentioned above
- 3. Test and save the song; Operate according to the instructions of Karaoke software

SELFIE FUCTION

- 1. Press the M/POWER button to switch from wireless mode to selfie mode
  - 2. Enable wireless from your mobile device and search "Shutter", click connect
  - 3. Open the photograph interface of your mobile device, press M/V+ or M/V- button to take photos.
- Note: 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system, It does NOT support other versions temporarily. It doesn't support the mobile phone which has the independent and physical photograph button

TECHNICAL PARAMETERS

FREQUENCY RANGE	2402 - 2480MHz
SPEAKER SENSITIVITY	50 dB
REVERBERATION MODE	SOUND EFFECT REVERBERATION
POWER SUPPLY	BUILT-IN Li-Battery 858 800mAh
BATTERY CAPACITY	800 mAh
CHARGING TIME	2 HOURS