

FANGOR

ULTRA THIN HEADREST DVD MONITOR

(User Manual)

Model: F-3018D



Read this use manual carefully before using this product and keep it for future reference. Please contact us via FANFOR Customer Service at:

us-dvd-3018@eitack.com

We will reply you within 24 hours and give you the best solution. If there may less happen short delay due to rest holidays, please help wait patiently and we will reply you asap once we see your emails.

Catalogue

Features.....	1
Package Content.....	2
Safety Precautions.....	3-4
Warm Tips and Care.....	5-7
Functional Review.....	7-9
Remote Control.....	10-12
Functional Use.....	12-18
System Setup.....	19-20
MENU.....	21
FAQ.....	22
Warranty Exclusion.....	23

Features

1. CD, DVD, CD-R/RW, DVD -R/+R, DVD+RW/-RW, VCD, SVCD (RW) (Except Blu-ray Disc)
2. Built-in 2.0 USB/SD/MMC/card slot (1920*1080 pixels and formats available), details see below picture.
3. AV Input & AV Output
4. Built-in FM Speaker (**Note:** when it turn on, the player will have no audio)
5. Built-in HDMI Input Port (It is not main function, if you'd like to use the function, please buy standard HDMI Cable and follow the instruction guide)

Note: 1. When use the player's audio or earphone, please make sure FM is off.
 2. This device support USB/SD card (1920*1080 pixels), please note it only supports playing formats within the corresponding pixel range. (As shown in the below sheet)

Supported Video Formats	AVI(.avi/.divx) ,MPG(.mpg/.mpeg), DAT(.dat),FLV(.flv),VPB(.vob) MP4/MOV(.mp4/.mov)		ASF(.asf)
Resolution	1920*1080(60fps)		WMA only supported WMA7, WMA8, WMA9(CBR, VBR) (only support 353 format)
Supported Audio Formats	MP3	WMA7 WMA8 WMA9(only support 353 format)	
Sampling Rate	8K-48KHZ		

Package Content



Headrest DVD Monitor



Remote Control



Button Cell




Headphone



RCA Cable



Car Charger

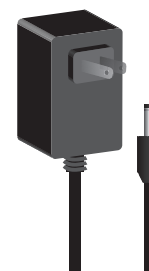


AC Adapter



1*Bracket + 1 Screw



* 5 Pairs of Plastic Adapters

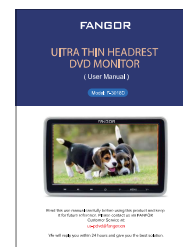

User Manual

- * 1. There are 5 pairs of 10mm/0.39", 12mm/0.47", 12.5mm/0.49", 14mm/0.55", 15mm/0.59" Plastic Adapters and the same sizes are placed on the diagonal. Choose the correct pair according to the size of the vehicle pole.
- 2. Not available for car seat without headrest poles or car pillar is curved.

Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-dvd-3018@eitack.com

Safety Precautions

- 1.Safe power: DC 12V/1.5A, please do not use it on vehicles with DC 24V or other unsafe power. The Primary power except the specific voltage may cause fire, electrical shock or malfunction.
2. The DVD monitor is intended for car or home use only, and not for commercial or industrial use.
3. In the installation and the wiring of the unit, must have the expertise and experience, please read the operation carefully. If any question, please contact customer service. Please connect the cable correctly, otherwise the unit will be damaged.
4. Do not repair the device by yourself. If you need ASSISTANCE when you install the product or other problems while using, CONTACT US FIRST PLEASE! If you want to return the item due to the product issues, CONTACT US FIRST PLEASE!
5. Please install the device firmly. When installing the unit, be sure to use the specified accessories.
- 6.Do not operate the monitor if it is not working normally or has been damaged in any way. Turn the unit off, unplug it from the power source and consult service personnel. Do not attempt to service this unit yourself.
7. We strongly recommend a qualified technician or maintenance engineer install this device. As this device is made of precise electronic components, unauthorized detachment or reassembly may damage it.
8. Do not listen to headphones at high volumes. The excessive sound pressure from headphones can cause hearing loss.
9. Do not block the driver's vision. If some place is dangerous to the people with the car, do not install there.
- 10.Please do not pull or damage the rope, may cause fire and accident.
11. Do not take apart, and do not remodel the unit. It causes a fire, the electric shock and malfunction.
12. Please do not use the ultra- high volume, can not hear the whistle and cause traffic accidents.
13. For your safety, driver please do not watch the Monitor while you are driving, may cause traffic accidents. Resulting in injure or death.
14. This DVD monitor shall not be exposed to dripping or splashing water and no object filled with liquids such as vases. Please place it on the appliance. Dry location uses only.
15. Do not expose the appliance, discs to extreme temperatures, excessive moisture, rain or sand. Never use this device in high temperature or in high humidity.

16. Don't put the device near magnetic field, e.g. speaker. The normal function of the product may be disturbed by strong Electronic Magnetic Interference. If so, simply reset the product to resume normal operation by switching it off from the mains outlet and then switching it back on after several minutes.

Attention

- 1.To ensure the proper operation, all the safety and operating instructions should be read carefully before connection and operation.
- 2.Retain instructions - Keep this manual in a safe place for further reference.
- 3.All warnings on the product and in the instruct manual should be adhered to.
- 4.All operating and use instructions should be followed.
- 5.To avoid damage to the unit, the use must be approached carefully. Do not drop, knock or shake the unit, rough handling can break internal circuit boards and fine mechanics.
- 6.Do not place the device in wet or damp environment to avoid electrical hazard and cause any damage to machine.
- 7.Please keep the device away from dampness, dust, smoke, oil and direct sunlight .
- 8.Please keep the device far from extremely hot or cold environment . The storage temperature for this machine is from -20℃ to 70℃ and the operating temperature for this machine is from -10℃ to 60℃.

★When environmental temperature declines dramatically, dew may occur inside the monitor, user need wait for a minute till moisture vapors, then the device will return to good condition.

★If you have any query or question about this device, please CONTACT US FIRST PLEASE!

Warm Tips and Care

Power Supply

1. Do not operate the product with wet hands, doing so may cause electric shock.
2. Always turn off the power and remove the car charger from the outlet when the appliance is not to be used for a long time and before cleaning.
3. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
4. Do not operate the appliance with damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, do not attempt to repair or disassemble the appliance by yourself. Contact qualified service personnel if you need help.
5. The monitor doesn't have battery, you must charge the player on your car with the provided Car Charger or your wall outlet at home with the provided AC Adapter. Besides, as any electronic will produce heat if it works too long, to protect your eyes and extend the device lifetime, we suggest the watching time do not over 4 hours each time.

Precaution of Cleaning

1. Never spray or pour liquids directly on the screen or plastic casing.
2. Do not allow residue or liquids to enter any part of the appliance as this may cause risk of electrocution.
3. Use a little wet soft cloth to clean the screen.
4. Do not use solvent such as gasoline, thinner, cleaner in the market or anti static sprat to clean the screen.
5. Do not use fluent or other chemical cleaner when cleaning the device.
6. Please clean the device by soft cloth with special cleaner.

Precaution of Remote Control

1. Please take off the small transparent thin card from the button of the remote for a fluent remote .
2. Do not place the remote control on dashboard, steering wheel or any other under direct sunlight especially in summer, where there is high temperature which may deform the remote control.
3. When parking the car in the sun, please place the remote control in toolkit or other safe places.
4. When exposed in direct sunlight, signal emitting from the remote control may not be properly received by the monitor. It should be placed nearer to the sensor of frontal panel of the host.

5. Kindly direct the remote control to the sensor area on the left corner of the monitor. It works best at a distance less than 9.8 feet and at an angle up to 30 degree in front of unit. Please make sure no obstacles stand between the remote control and infrared sensor.

Precaution of LCD monitor

1. Do not press the LCD screen, otherwise distortion or other fault may occur. The image may become unclear or LCD may be damaged. If you park your car in an extremely cold or hot place, the video may become unclear, it is not a fault, when the temperature in car returns to normal level, the video will become clear.
2. Static blue or red spot may be appear on the monitor, this is called light spot, it is common phenomenon for any kind of LCD, LCD is a very precise device, more than 99.99% segment is normal, but less than 0.01% segment may be flaw, however, this will affect your visual effects.

Device Caring

1. Do not connect accessories, which are not approved by the manufacturer.
2. Press the monitor buttons gently. Pressing them or the screen too hard can damage the monitor. Earphone cables may be hazardous to young children. Store the product carefully when it is not in use.
3. Keep "Ear bud" style earphones out of reach of small children. "Ear bud" earphones may be swallowed if they are placed in mouth.
4. Always turn the power off and unplug it from the outlet before cleaning.
5. Be sure to remove the disc from the player before packing for moving.
6. Please do not throw the button cell randomly, please dealing them in appropriate place.
7. Please took off the battery from the remote controller if a long time no need to use.


Service and Maintenance

1. Servicing- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards, refer all servicing to qualified service personnel.
 2. Damage Requiring Service- Unplug this product from the power source and refer servicing to qualified service personnel under the following conditions:
 - a. When the Car Charger or AC Adapter is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product. If the product has been exposed to moisture or water.
- If the product does not operate normally by following the operating instructions. Only adjust controls that are covered by the operating instructions as an improper adjustment of


other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

If the product has been dropped or damaged in any way, and when the product exhibits a distinct change in performance, service is needed.

Functional Review

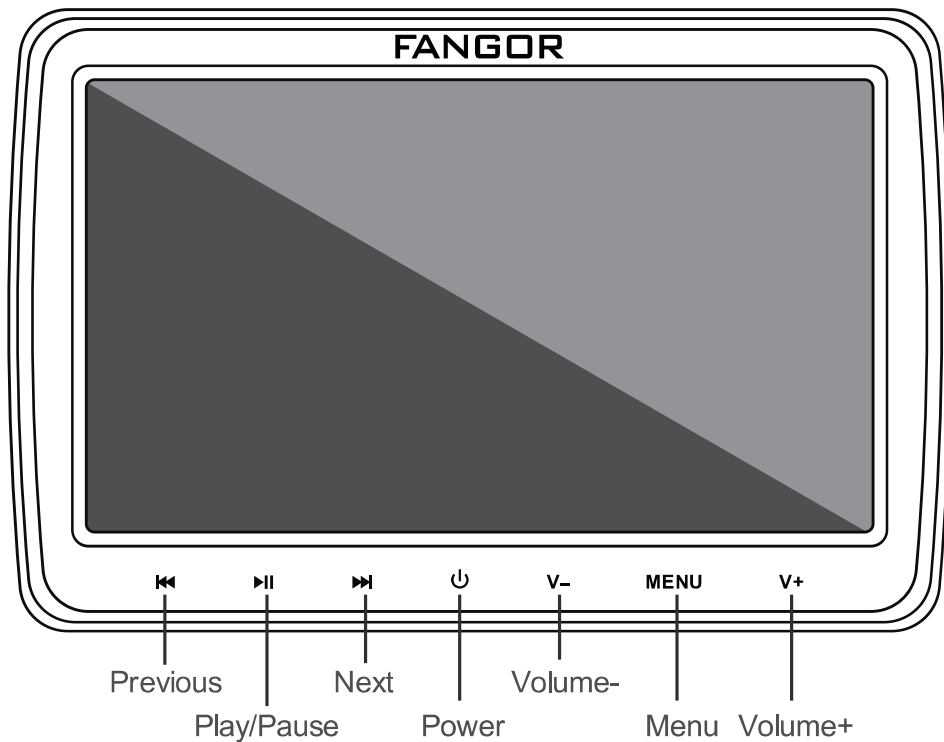

Touch Buttons	Function
⏮	Enter to previous title/ chapter/ track
⏸	Pause the current or continue playing
⏭	Enter to next title/ chapter/ track
⏻	Turn on or turn off the power
V-	Decrease the sound level
MENU	Press to set language & FM &buzzer & picture mode & brightness & contrast & sharpness & color & tint & volume & vcom, reset and software update. Function is same as the TFT/MENU button on the remote control.
V+	Increase the sound level

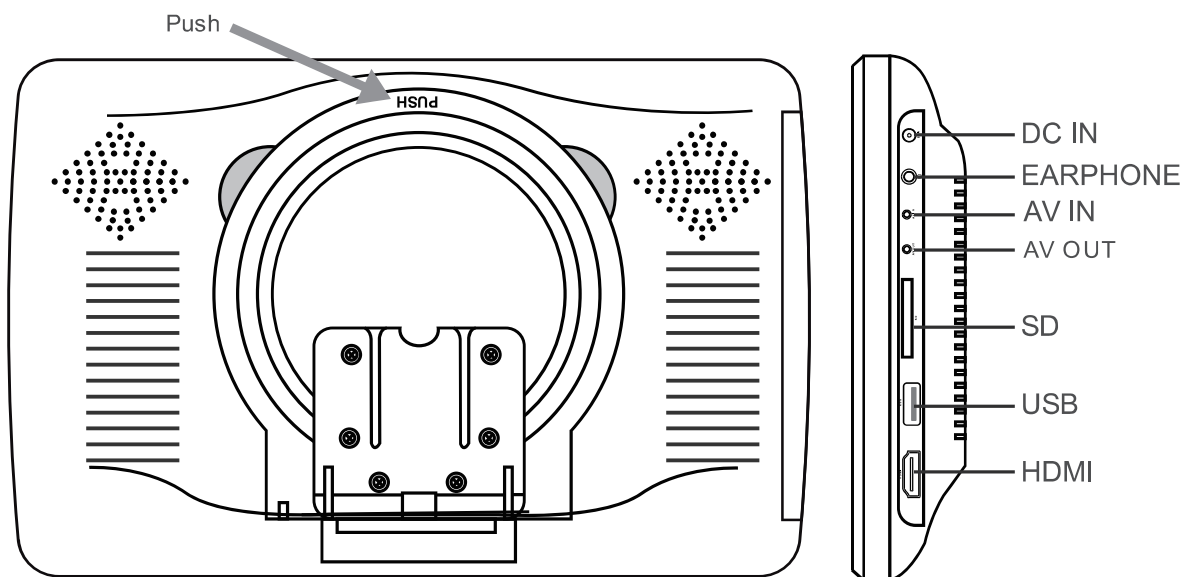

Quick Operation Guide

- 1) First charge the device via AC Adapter or Car Charger (included)
- 2) Open the disc cover via pressing the "PUSH" button on the back of the player, inset a disc into the slot, close the cover
- 3) Turn on the player via short pressing the  button for about 1-2 seconds
- 4) Operate the player
- 5) Long press the  button for about 2-3 seconds
- 6) Unplug the AC Adapter or Car Charger

Note :

1. When use the player's audio or earphone, please make sure FM is off.
2. The sound of the touch button at the bottom of the panel can be muted. If necessary, please press "TFT/MENU" on the remote control first, and then continue to click "↓" on the remote control, you will find the "BUZZER" option, choose "OFF" to mute the touch button sound.
3. When you don't use it in short time, you could turn off the player via pressing  on the player or remote control. When you don't use the player in long time, please unplug the AC Adapter or Car Charger.

Use it in the Car

1. First please confirm the size of pole and choose correct pair of Plastic Adapters. (**Note:** There are 5 pairs of 10mm/0.39", 12mm/0.47", 12.5mm/0.49", 14mm/0.55", 15mm/0.59" Plastic Adapters and the same sizes are placed on the diagonal. Choose the correct pair according to the size of the vehicle pole).
2. Mount it to the car via the bracket, see below mounting picture.
3. Charge it via the Car Charger and operate the player.

Ways to Mount it into Car

Step 1. Choose a pair of correct size's Plastic Adapters, and install them into the car headrest's posts.

Step 2. Adjust the best length of mounting bracket according to posts' distance, and fix it into headrest's post firmly.

Step 3. Insert the car DVD Player into the bracket and fix tightly with screw.

Step 4. Adjust the screen position and finished.



Below are Some Compatibility Notes and Installation Notes for Better and Quicker Mounting into Car Headrest.

Compatibility Notes:

Universal for most car headrests (Not available for car seat without headrest poles or car pillar is curved). The universal mounting bracket give you a hassle-free installation. Please check the distance between the 2 poles in the seat and the diameter of the 2 poles.

Adjustable bracket distance: 4.33 inch (110mm) – 6.42 inch (163mm)

Diameter of the poles: 0.39 inch (10mm) – 0.63 inch (16mm)

Installation Notes:

1) One mounting bracket is equipped with 5 pairs of Plastic Adapters (for covering the pole between car headrest, the sizes are 10mm/0.39", 12mm/0.47", 12.5mm/0.49", 14mm/0.55", 15mm/0.59" and the same sizes are placed on the diagonal). Choose the correct pair according to the size of the vehicle pole.

2) If your car headrest pole's diameter is larger than 15mm/0.59" but less than 16mm/0.63", then you can directly install it without any plastic adapter. If your car headrest's pole diameter is larger than 16mm/0.63", this mounting bracket is not applicable. (We've tested most car headrests' poles on the market, and most are less than 16mm/0.63" in diameter.)

Remote Control




	Press to turn on or turn off the power in short time. When you don't use the player in long time, please unplug the Car Charger or AC Adapter.
DVD/AV	Press to choose DVD,HDMI,AV,USB,SD mode
AUDIO	Press to choose sound track
	Press to make the sound off
	Press to choose different chapters and songs by the serial NO .
GOTO	Press this button to go desired numbered song and go to desired page
	Press to play the last chapter
	Press to play next chapter
	Press to Fast rewind playback by 2X,4X,8X,16X,32X
	Press to Fast forward playback by 2X,4X,8X,16X,32X
	Press to pause the current or continue playing
SETUP	Press to enter the system setting page, user can set TV type & brightness & contrast & sound effect & language & last memory & password etc

	Press arrows (direction keys) to make elections in setup page or disc menu
	Press to return to the previous page until return to the home page.
PBC	Press this key to return to the root menu during playing
	Press arrows (direction keys) to make selections in setup page or disc menu
ENTER	Press to enter to the selected in setup page or disc menu
VOL+/VOL-	Press to increase or decrease the sound
USB	Press to select the USB source
TFT/ MENU	Press to set OSD language & FM &buzzer & picture mode & brightness & contrast & sharpness & color & tint & vcom, reset and software update
TITLE	Return the beginning of the playing
SUB-T	Display the subtitle
OSD	Press to choose the sound track
PROG	Tracking programming play (songs playing sequence)
ANGLE	Angle switching key, press this key can view video in different angles
AMS/PRT	Repeat function, user can press this button to repeat title,repeat chapter, or repeat all. Press "OFF" if you do not use the repeat function
ZOOM	Zoom in 2/3/4 times, or zoom out 1/2, 1/3, 1/4


Remote Control Operation Instruction

Tips 1. When you are first using the remote control, you need to put the button cell to the remote control first. Kindly refer below steps and Installation of Button Cell to install the new button cell (3V) to the battery slot of the remote control.

 
- 1). Use the thumb to press the button to right, meanwhile use the index finger to pull out the battery card slot.
- 2). Put the button cell in the battery card slot.
- 3). Slightly push the battery card slot back to it's position and then you can use the remote control.

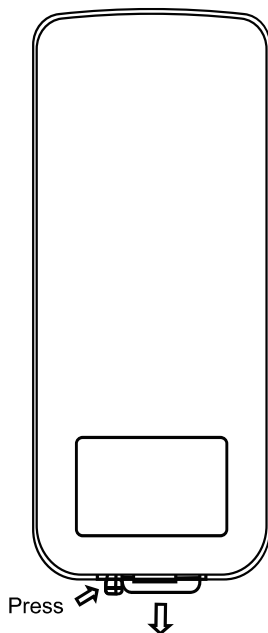

(Step 1: Pull out slot)

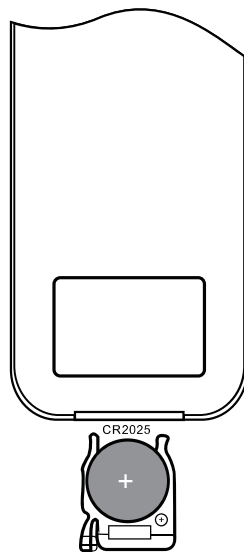 

(Step 2: Put battery to slot)

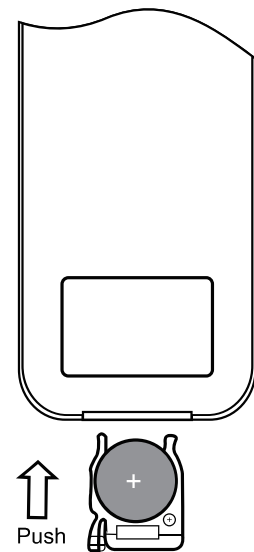

(Step 3: Push slot into remote control)

Installation of Button Cell

Tips 2.

- 1) After the battery runs out and need to change a new one, please kindly first take the battery out of the slot .
- 2) After installing battery well, just need push the plastic card with battery into the slot to fasten it.

Pay Attention

1. Before using the remote control, please make sure the battery installed correctly and no any defective, or the device do not have any reaction.
2. Kindly direct the remote control to the sensor area on the left corner of the monitor. It works best at a distance less than 9.8 feet and at an angle up to 30 degree in front of unit. Please make sure no obstacles stand between the remote control and infrared sensor.

3. The battery usually can be last work 1 year, for the safety and fluent using, it is better to change a new button cell inside after 1 year. If the device no any reaction after remote, please first try to change a new battery. If it still does not work, feel free to contact the supplier to solve.
4. If there is a long time that will not use the remote control, please remove off the battery and stock it in a safe place in case kids swallow accidentally.
5. Do not heat batteries or dispose of them in fires.
6. Do not dismantle, deform or modify batteries.

Functional Use

1.Playable Disc

1).This monitor will play CD, DVD, CD-R/RW, DVD -R/+R, DVD+RW/-RW, VCD, SVCD (RW)(Except Blu-ray Disc)

Note: If you have trouble with playing a certain disc, remove the disc and try a different one. Improperly formats' disc will not be played on the monitor.

2).Depending on the discs, some operations may be different or restricted.

Do not put any objects other than disc on the disc tray, doing so may cause the player to malfunction.

Note:

- If a “” mark appears on the screen when a button is pressed, it means the function is not available at the moment on the current disc or at the current station.
- Depending on the conditions of the recording equipment or the CD-R/RW(or DVD+R/RW, MP3, MP4, CD) disc itself, some discs can not be played on this monitor due to the configuration and characteristics of the disc, or due to the condition of recording and digital copyright software that was used.

Disc Error Messages

If there is a problems with the format of the loaded discs, then the disc can not be played correctly.

- The region code of the disc does not match the player's region code.
- The parental rating level of the disc is higher than the parental rating level setting of the monitor, the monitor will not play the disc.
- Bad/no disc: The monitor is equipped with automatic disc quality detection software. If the monitor detects a disc that damaged or has a format problem, it may play the disc at a lower quality or stop playing completely, depending on how serious the damage is.

Note: DVD disc production quality may vary and some discs may deviate from the industry standard. Some incorrectly formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

2.DVD Playback Function

- (1) You have to select DVD in the source.
- (2) When inserting disc into drive slot, keep the label toward back.
- (3) The disc will be automatically read and played.
- (4) Press ►|| on panel or remote control to pause /play.

Note:

If you do not select “DVD” in the source, the device maybe can not play disc. Besides, blu-ray disc do not support. If the disc was damaged or scratched by some unknown reasons, the disc won't be played.

3.Sync Playback to Play One Same Movie

3.1 Sync Playback on Two Monitors

If you have another monitor with AV OUTPUT/ INPUT and want two monitors to play a same movie, please purchase a 3.5mm AV cable (not included) which could transmit video and audio.

Two Monitors play a same movie via 3.5mm AV cable (Another monitor and 3.5mm AV cable don't include)

Please use your own 3.5mm AV cable and the following is the connection method:

- 1) Connect the two monitors to the power supply at the same time.
 - 2) One end connect AV OUTPUT of screen A, the other end connect AV INPUT of screen B.
 - 3) On screen A, select the corresponding playback media in the source.
 - 4) Then select DVD in the input source on screen A (As shown on the right).
 - 4) On screen B must select AV in the source.
 - 5) Finally, the two monitors will play the same movie.
- If necessary, please contact us after purchase, and we will provide you a detailed connection guide.


Input Source
DVD
HDMI
AV
USB
SD

3.2 Sync Playback to TV Screen

This device support connecting your TV with provided RCA cable. (Please see below Picture 3.2)

- 1) Insert a disc or other playback media and select DVD in the input source on the monitor .
- 2) Use the RCA cable, one end connect the AV OUT port of the DVD player, and the other end connect the Audio/video input port on the Television (Red to Red, White to White and Yellow to Yellow)
- 3) Change the television to correct audio/video input setting (select AV in the source on TV)
- 4) Share the screen.

Note: When the volume of the monitor is 10, the total volume of the TV is also 10 and you can just adjust TV sound separately. To avoid the sound of the player affect your TV playback, we suggest you can plug earphone into the monitor.

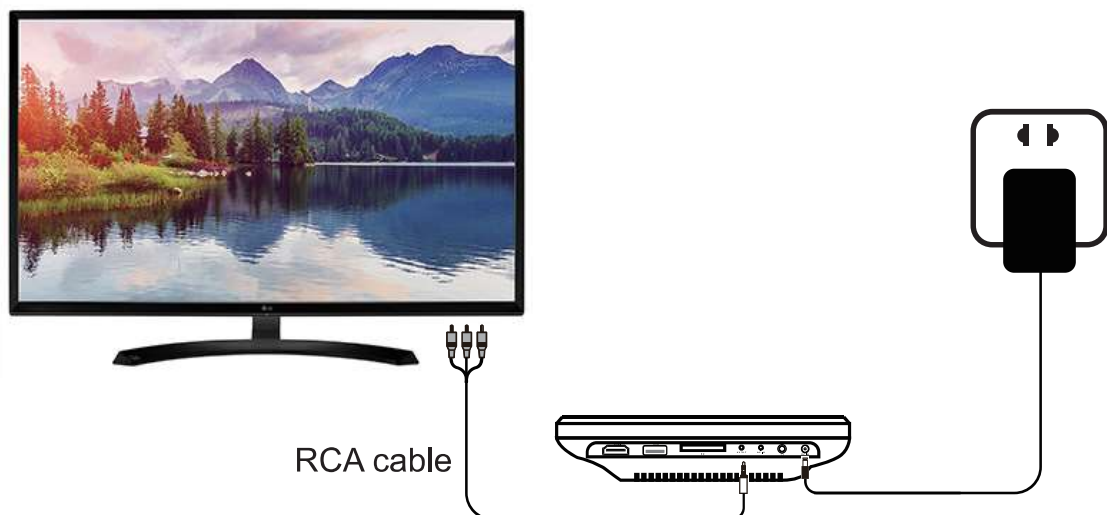

Picture 3.2

4.USB/SD Function

- 1) If you want to use the USB/SD card function, please insert the USB/SD card to the slot.
- 2) Then press “DVD/AV” button on the remote control or “” button on the panel choose corresponding source first.
- 3) Press “←” or “→” on remote control or press “” or “” on panel to check photo, music, movie or text.

Note:

- 1) Make sure you have choosed USB/SD mode in the source. If you put discs and insert the USB/SD to the monitor at the same time, the monitor will play discs firstly by default. If you want to use USB/SD card function, you need to change the source to USB or SD.
- 2) Make sure the memory is not larger than 32G and it is the file of supported formats and pixels.

USB/ SD/ MMC Card Storage Device Protection

- 1). The operating features described here might not be possible for some USB devices or SD/ MMC memory cards. Always refer to the instructions supplied with external devices.
- 2). Always insert the SD/MMC card in the correct direction. Failure to do so may result in damage to the memory cards and this monitor. Do not force the memory card into the slot.
- 3). Not all USB and SD/MMC cards can be recognized in this monitor. If you have trouble with playing a file, remove the SD/MMC card or USB device and try a different one. Improperly formatted files will not be played on this monitor.

Warm Tips: Electrical interference and electrostatic discharges may cause the USB device or SD/MMC card to malfunction and suffer damage, resulting in data loss. It is strongly recommended that any important data is backed up on a PC to protect against corruption, data loss or device malfunction.

5.FM Function

- 1) When you want to use the FM function, press "MENU" on panel or on the remote control to enter the menu option.
- 2) Press "↓" on the remote control or continue to press "Menu" on panel and then you will find the "FM" function.
- 3) Press ← /→ button on remote control or press ◀▶ on panel to choose the frequency on the DVD player, please kindly note that your radio or car audio system should choose the same frequency accordingly.
- 4) The radio or car audio system will automatically to play once you choose the same frequency.

Note:

- 1). When FM is on, the player will have no sound. If you do not use the FM function, please remember to turn it off.
- 2). When you use the FM function, please make sure your car speaker turns on and accept FM signal.

6.Last Memory Function

- 1) When you want to use "Last Memory" function, please press "SETUP" on the remote control first and you will see "Last Memory" function.
- 2) Then continue to press "↓" to enter the "Last Memory" function.
- 3) Press "→" to enter "ON/OFF" option, and then press "↑" or "↓" to choose turn on or off the last memory function.




Note: When user turn on the last memory function, DVD player will continue to play the video from where you left off last time, no worry about playing form the beginning.

7.HDMI IN Function-Sync up to 1080P Video from Your Smartphone

7.1 This DVD player built in HDMI IN function, support to connect your smartphone with standard HDMI Cable (not included and you need to purchase it, see Picture 7.1) to connect with a phone to share the same screen. Please refer to the following operation guide to connect.

Note:

- 1) The smartphone and standard HDMI Cable are not included.
- 2) Only support HDMI input (Does not support HDMI Output).

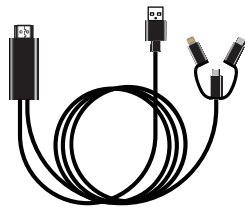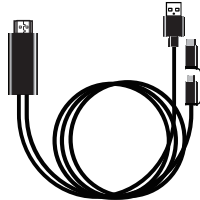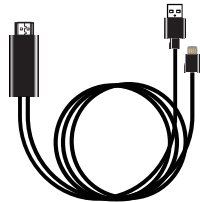Standard HDMI Cable	Cable Picture
3 in 1 HDMI Cable (For IOS and Android devices)	
Micro USB/Type C to HDMI Cable with USB plug (For Android devices)	
Lighting to HDMI Cable with USB plug (For IOS devices)	

Picture 7.1

7.2 The Guides to Connect with Your Phone

1) HDMI IN- Sync up to 1080P video from IOS Device

Below are details of correct way to connect your IOS phone, and see the Picture 7.2.1.


Step 1. Please use your 3 in 1 HDMI Cable or Lighting to HDMI Cable with USB plug.

Please use the connecting of Way 1. One end connect the player: one connect HDMI port of the player, the other connect Power Bank/ Adapter to charge the player. The other end connect the phone.

Step2. Short press  button and select HDMI.

Step3. Click "trust" and enter a password of your phone.

Step4. Share the same screen.

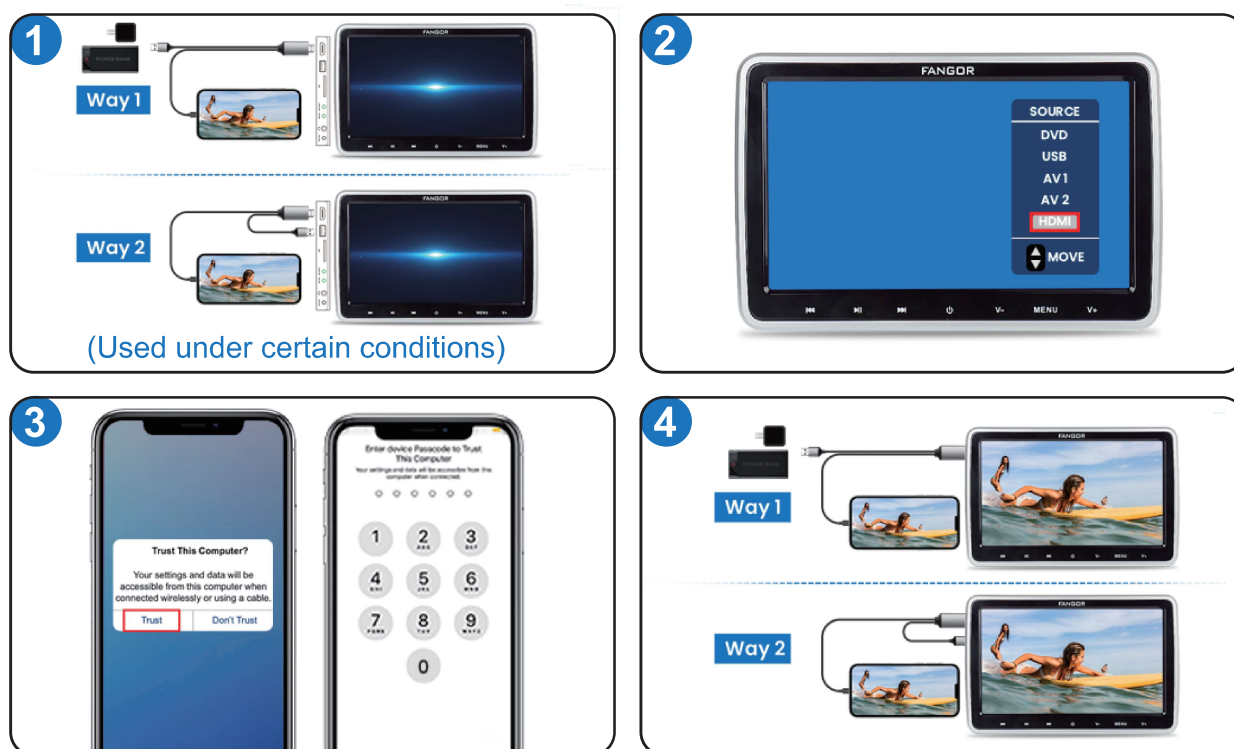

Picture 7.2.1

2) HDMI IN- Sync up to 1080P video from Android Device

Below are details of correct way to connect Android phone, and see the Picture 7.2.2.


Step1. Choose 3 in 1 HDMI Cable or Micro USB/Type C to HDMI Cable with USB plug.

Please use the connecting of Way 1. One end connect the player: one connect HDMI port of the player, the other connect Power Bank/ Adapter to charge the player. The other end connect the phone.

Step2. Short press  button and select HDMI.

Step3. Choose Transfer files Download the APP "Miraplug" and follow the guides to connect the device.

Step4. Share the same screen.

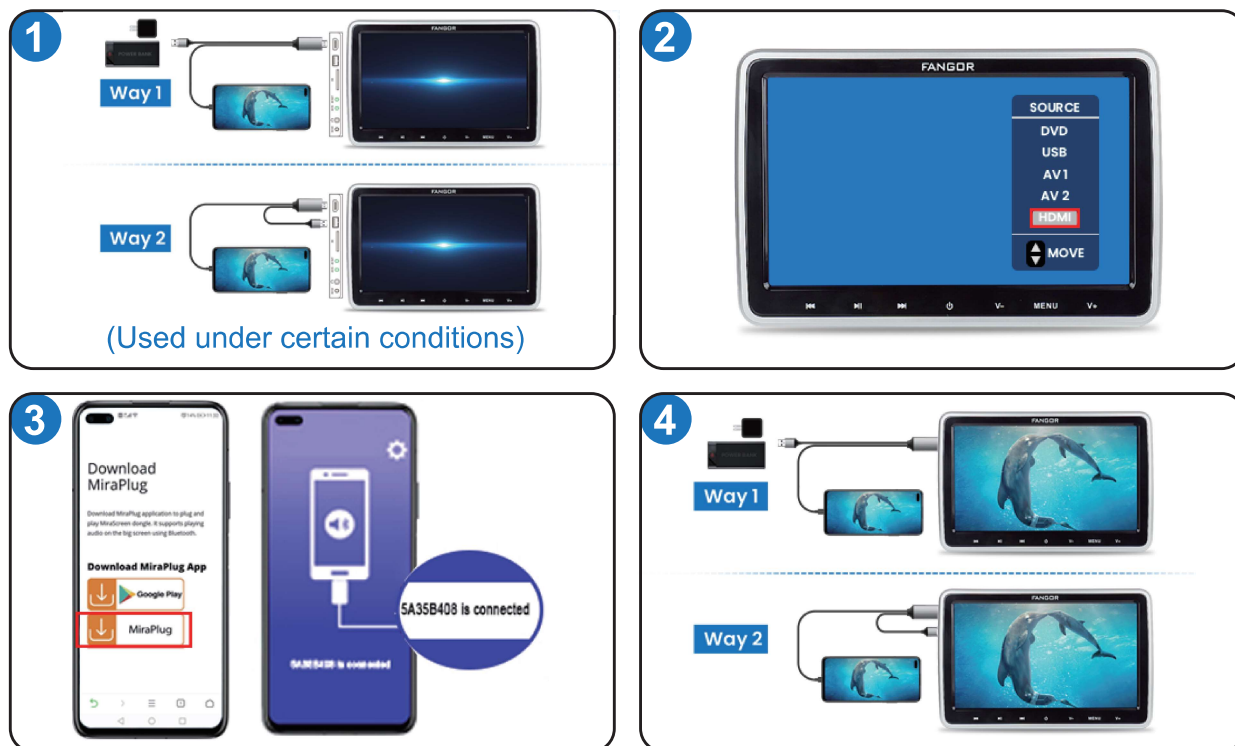

Picture 7.2.2

Way 2- How to do when use way 2 but it happened to not working correctly?

1) It works under certain situation, because the differences of standard HDMI Cable's compatibility and Power Supply, when you use way 2 and it happened to unstable situation, please change way 1.

2) How to make Way 2 work in stable situation?

One end connect the player: one connect HDMI port of the player, the other connect USB port of the player. The other end connect the phone.

Some Warm Tips When You Use the HDMI IN Function:

1) Please use your standard HDMI Cable. And please use way 1. When you use way 2 and it happened to unstable situation, please change way 1.

2) You can share or play the apps from your smartphone to the player via standard HDMI Cable's connecting. Due to copyright issues, some applications (such as Netflix) do not allow video stream through your phone. However, if you have a fire TV stick or similar, then you can stream the major online streaming platforms (Fire TV stick not included, you need to buy it yourself).

3) Only support HDMI input (Do not support HDMI output). So it will not mirror an HDMI source displayed from the monitor to the other screen.

4) The USB port of the monitor can only transmit data, not charging.

5) If you have any questions about cables or connections, please feel free to contact us for details.

System Setup

GENERAL SETUP PAGE

 
TV DISPLAY: 4:3 PS, 4:3 LB, 16:9

ANGLE MARK: ON/OFF. If the discs which you put support different angles, turn on the "Angle Mark" function, and press "angle" on the remote control, you can choose different angles as you like.

OSD LANGUAGE: Choose your preferred system language, there are 6 options. (ENGLISH, JAPANESE, FRENCH, GERMAN, ITALIAN, SPANISH). The default language is ENGLISH.

SCREEN SAVER: ON/OFF


LAST MEMORY: ON/OFF. If user turn on the "Last Memory" function, the monitor will continue to play the video from where you left off last time, no worry about playing from the beginning.

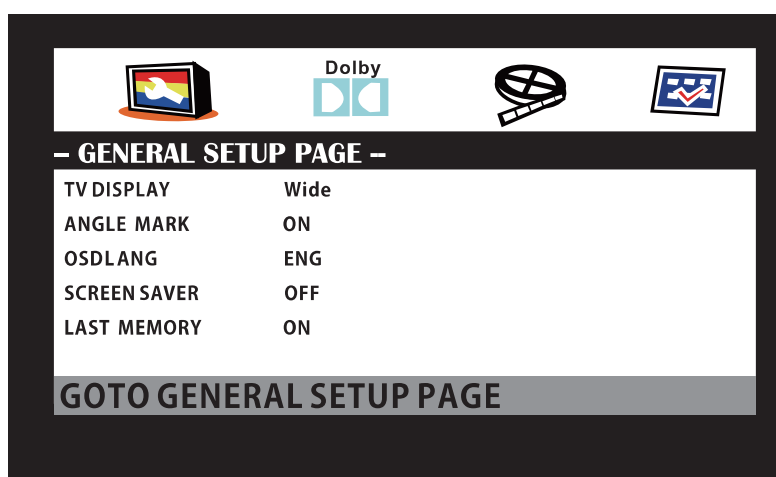

DOLBY DIGITAL SETUP

DUAL MONO: There are four sound modes "STEREO, L-MONO, R-MONO, MIX MONO", you can choose the sound effect as you like.

 DYNAMIC: Dynamic range from 1/4, 1/2, 3/4 to FULL, or you can just turn off dynamic.

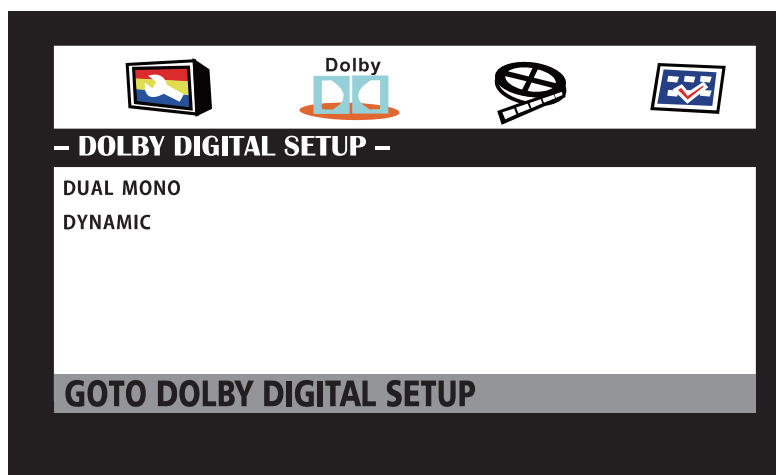

VIDEO SETUP PAGE

 
SHAPNESS: HIGH, MEDIUM, LOW

BRIGHTNESS: Screen brightness adjustment, the default value is 00.

CONTRAST: Screen contrast adjustment, the default value is 00.

HUE: Screen hue adjustment, the default value is 00.

SATURATION: Screen saturation adjustment, the default value is 00.

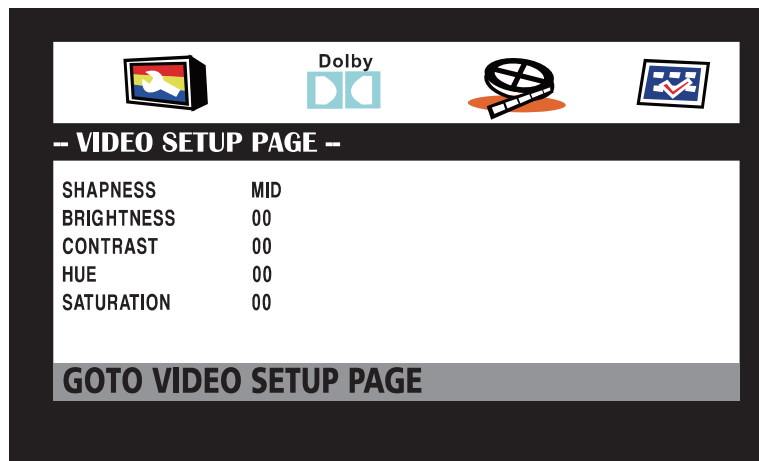

PREFERENCE PAGE

TV TYPE: PAL, AUTO, NTSC

AUDIO: Set the "AUDIO" language, there are 6 languages, "ENGLISH, JAPANESE, FRENCH, GERMAN, ITALIAN, SPANISH" for you to choose.

 
SUBTITLE: Set the "SUBTITLE" language, there are 6 languages, "ENGLISH, JAPANESE, FRENCH, GERMAN, ITALIAN, SPANISH" for you to choose.

DISC MENU: Set the "DISC MENU" language, there are 6 languages, "ENGLISH, JAPANESE, FRENCH, GERMAN, ITALIAN, SPANISH" for you to choose.

PARENTAL: There are 8 ratings for disc. 1. KID SAFE; 2. G; 3. PG; 4. PG 13; 5. PGR; 6. R; 7. NC 17; 8. ADULT. For example, if the discs which you put are not suitable for kids, then discs will not be played or you need to enter the password to play it.

PASSWORD: The initial password is 0000, you can set the new password.

DEFAULT: Factory reset (Please note it only works for "SETUP" Page).

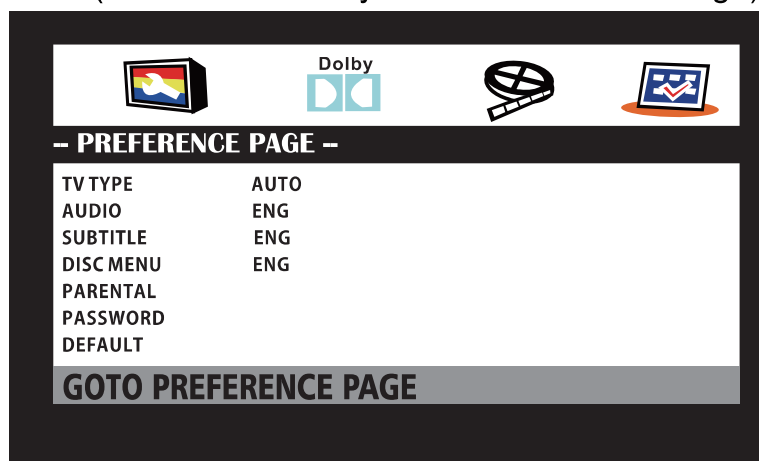

MENU

Press the “MENU” button on panel or “TFT/MENU” button on the remote control, you will find options of “OSD language, FM, Buzzer, Picture Mode, Brightness, Contrast, Sharpness, Color, Tint, Software Update, VCOM, Reset”.

“Menu” function is just similar to “SETUP function”, but they are independent and will not be influenced by each other. You can set them according to your needs.

1.OSD Language

There are six languages, English/Deutsch/France/Italiano/Español/日本語 for you to choose.

2.FM

There are five frequencies 87.7MHz/88.5MHz/95.5MHz/106.3Hz/107.5MHz for you to choose. Please turn off the “FM” function if you do not use it. Otherwise, there will be no sound from the DVD player.

3.Buzzer

Choose ON/OFF to turn on or off the click sound.

4.Picture Mode

There are “STANDARD/VIVID/USER/SOFT” four picture modes to choose, you can set the picture mode as you like. Continue to press “Menu” to adjust Brightness/Contrast/Sharpness/Color/Tint

5.Reset

Factory reset the monitor (Please note it only works for “Menu” Page).

FAQ

Questions	Possible Reasons or Solution
Can't connect to smartphone	1. Make sure you have used standard HDMI Cable. 2. Please use the connecting of Way 1. One end connect the player: one connect HDMI port of the player, the other connect Power Bank/ Adapter to charge the player. The other end connect the phone. 3. Due to copyright issues, some applications do not allow video stream through your phone. If you have any questions about the connections, please feel free to contact us.
Do not work for USB/SD	Make sure you have choosed USB/SD mode in the source/ Make sure the memory is not larger than 32G and it is the file of supported formats and pixels/ Make sure the file in USB/SD isn't broken or USB/SD itself isn't defective
No sound	Make sure the FM Function is off/ Make sure volume is not set too low or The product is not set to mute or Volume setup is workable
Not sensitive when touch the panel	Please make sure to touch buttons in the correct position with a little force. If touch issue still exist, please feel free to contact us any time.
No sound and image	Make sure power is connected/ The machine has turned on/ Make sure that the wires are not pressed or cut off
Remote control does not work	Battery is installed upside down/ Battery used up/ Remote direction is not within the remote area/ Remote control is broken
No image	Disc is scratched / Signal wire is disconnected
Black screen	Incorrect setup of image luminance and contrast/ Under voltage/ Incorrect display mode
Blurring and unstable image	Disc is scratched or damaged
Color cast	Function menu setup is incorrect/ weak signal
No power	Voltage is not accurate/ Check interconnect circuit
No image after loading the disc	Only audio frequency for the disc/ Disc is scratched/ Disc format is not supported/ Picture resolution or pixel is not supported
Unstable sound caused by vibration	Disc is dirty or scratched
Unstable sound even with no vibration	Disc is dirty or scratched/ Clean or replace the disc
Video signal weak	Please use the signal to increase the instrument and booster

Guarantee Regulations:

- A. Within guarantee our company free the products, which are not damaged by person.
- B. Within guarantee you can repair at the local dealer with the maintenance, which should be sealed.
- C. Within or after guarantee, you should pay for maintenance if damaged by removing or by person.

Warranty Exclusion

The warranty will not be valid if

1. The product has not been installed, operated or maintained in accordance with the manufactures operating instructions with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than car use.
4. The damage or malfunction of the product is caused by any of following conditions:
 - Incorrect voltage
 - Accidents (including liquid or moisture damage).
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Main supply problems including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorized service personnel
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Used with accessories not pre-approve

Please refer to and heed all warnings and precautions in the User Manual.

We provide 12 MONTHS warranty from the date of purchase, if you experience any problem about the product, please don't hesitate to email us at:

us-dvd-3018@eitack.com

We will reply you within 24 hours and give you the best solution.

If there may less happen short delay due to rest holidays, please help wait patiently and we will reply you asap once we see your emails.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FANGOR

ULTRA THIN HEADREST DVD MONITOR