

## 产品使用说明

 
### 参数配置

版 本： 5.3
方 案： 杰理低功耗
喇 叭： 13MM复合膜
信号距离： 10米
通话时长： 5小时
音量时长： 5小时
电池容量： 耳机30mAh，充电舱300mAh
充电时间： 耳机约30分钟，充电舱约1小时
频率特性： 2.40GHz-2.48GHz
支持协议： A2DP13/HFP1.6/HSP1.2AVRCP1.6/D11.3

### 使用说明

1. 使用注意打开包装后，从包装里面取出产品
2. 配对连接充电仓推开盖子，两边耳机自动配对好，然后在手机蓝牙搜索出 Game Pro 200 点击连接
3. 开机: 推开盖子，耳机自动配对，配对连接先前设备
4. 关机: 放回充电仓，关盖，自动关机充电
5. 左耳双击上一曲
6. 右耳双击下一曲
7. 左耳三击减音量
8. 右耳三击加音量
9. 左/右耳单击暂停播放
10. 左/右耳单击来电接听，通话挂断
11. 来电时长按左/右耳约2秒，拒接来电

### 产品外观

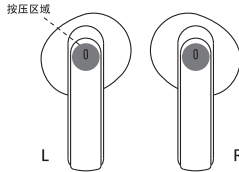


### 充电舱说明

充电舱滑盖音效：


1. 触摸长按5秒可开/关充电舱滑盖的音效（切换时会闪5下白灯）默认打开

充电舱指示灯：

 1. 开盖时需亮灯5秒选定灯效，播放指定音效
2. 合盖时需亮灯5秒选定灯效，播放指定音效
3. RGB灯显示电池电量（低电红灯闪，10-30%红灯，30-70%蓝灯，70-100%绿灯）
4. RGB灯充电电时显示对应电量颜色，充满灭灯
5. 开盖和关盖时显示对应电量灯色5秒后灭
6. 耳机入舱充电时充电舱呼吸灯渐变15秒后熄灭
7. 成识别到触摸就播报提示音，长按/短按都只播一次，且亮相应的灯效

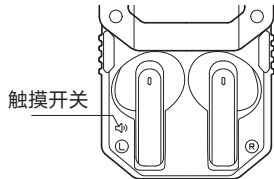

### 产品图示

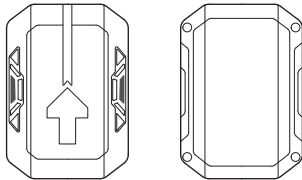 


提示灯



充电口

### 注意事项

 1. 请将耳机放在正确的位置进行充电；
2. 电池（电池包或组合电池不得暴露在诸如日照、火烤或类似过热境中；
3. 长时间大音量听音乐会造成听力损害，使用该设备时请调整到适当音量；
4. 请勿在雷暴天气下使用该设备，雷暴可导致设备工作不正常并增加触点危险；
5. 请勿以任何理由拆除或改装耳机，否则可能导致耳机发生故障或烧毁，这些都不在保修之列。

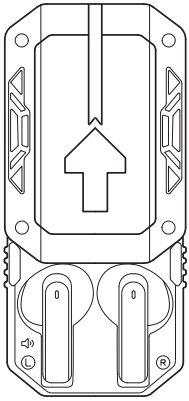

## Product instructions

 
### Parameter Configuration

Version： 5.3
Scheme： Jieli Low Power Consumption
Speaker： 13MM composite film
Signal Distance： 10M
Call Duration： 5 hour
Volume Duration： 5 hour
Battery Capacity： Headphones 30mAh, charging compartment 300mAh
Charging Time： Headphones take about 30 minutes, charging compartment takes about 1 hour
Frequency Characteristic： 2.40GHz-2.48GHz
support agreement： A2DP13/HFP1.6/HSP1.2AVRCP1.6/D11.3

### Instructions

1. After opening the packaging, take out the product from inside
2. Pair and connect the charging case by pushing open the cover, and the earphones on both sides will automatically pair. Then, search for them on your phone's BluetoothGame Pro 200 Click to Connect
3. Power on: Push open the cover, the earphones will automatically pair and connect to the previous device
4. Shutdown: Put it back into the charging compartment, close the cover, and it will automatically shut down for charging
5. Double click the previous song on the left ear6. Double click the next song on the right ear
7. Three strikes on the left ear to reduce volume
8. Three hits on the right ear to increase volume
9. Left/right ear click to pause playback
10. Click on the left/right ear to answer the call, hang up the call
11. Press and hold the left/right ear for about 2 seconds to reject the call

### Product appearance

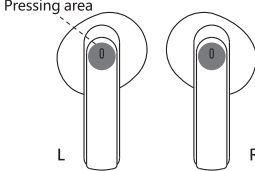


### Charging Cabin Instructions

Charging compartment sliding cover sound effect:


1. Touch and long press for 5 seconds to turn on/off the sound effect of the charging compartment slide cover (flashing white light 5 times when switching). It is turned on by default

Charging compartment indicator light:

 1. When opening the lid, the light should be on for 5 seconds to select the lighting effect and play the specified sound effect
2. When closing the lid, the light should be on for 5 seconds to select the lighting effect and play the specified sound effect
3. RGB lights display battery level (low battery red light flashing, 10-30% red light, 30-70% blue light, 70-100% green light)
4. RGB lights display the corresponding battery color when charging, and turn off the lights when fully charged
5. When opening and closing the lid, the corresponding battery level light color will be displayed and turn off after 5 seconds
6. When charging the earphones in the charging compartment, the breathing light gradually changes for 15 seconds before turning off
7. When a touch is recognized, a prompt sound will be played. Long press/short press will only play once, and the corresponding light effect will be on

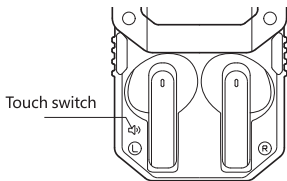

### Charging Cabin Instructions

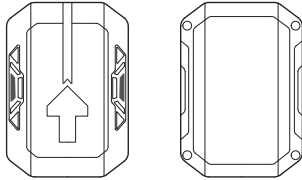 

Cue Light



Charging port

### Precautions

1. Please place the earphones in the correct position for charging;
2. Batteries (battery packs or combination batteries must not be exposed to environments such as sunlight, fire, or similar overheating conditions;
3. Listening to music at high volume for a long time can cause hearing damage. Please adjust the volume to an appropriate level when using this device;
4. Do not use this device during thunderstorms, as thunderstorms can cause the device to malfunction and increase the risk of contact;
5. Do not remove or modify the headphones for any reason, as it may cause the headphones to malfunction or burn out, which is not covered by the warranty.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.