







Puppy Training Collar User Guide DB61

 
BEFORE YOU GET STARTED


- * Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior.
- * If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.
- * Before using your dog training bark collar, please fully charge the collar and remote with approximately 2 hours.
- * Avoid leaving the collar on the dog for more than 12 hours per day.
- * If the collar is not in use for an extended period of time, make sure the collar is fully charged before it's left idle. This, and a monthly charge, will help extend the battery life.

MAIN FEATURES

	1300 ft Range		3 Levels Intensity For Shock Mode
	Waterproof		Enhanced Contact Points
	Ergonomic Slim Receiver Design		Medium Output
	Charge for 2 hours		For Dogs as Small as 5lbs

REMOTE CONTROL

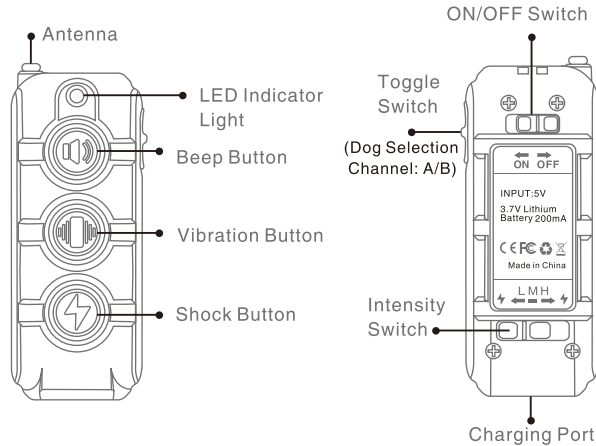


 The remote has 2 channels: A, B. you can train 2 dogs at the same time.

If you have one dog, you will need to pair Channel A or Channel B.

If you have two dogs and bought a second collar, you will need to pair the one collar to Channel A for one dog and you will need to pair the second collar to Channel B for the second dog.

 ON/OFF toggle switch.

 The Intensity toggle switch on the back of remote is used to adjust the level of shock for Channel A and Channel B. they're 3 levels for you to choose.



The three buttons on the remote for beep, vibrate, and shock can be used for Channel A, Channel B.

Remote LED Indicator Light

 
Red LED will blink when the remote is charging.

Red LED will stay on when the battery is fully charged.

Green LED will flash if you press buttons on the remote.

Green LED will blink every 3 seconds during standby mode until no operations have been completed for 20 minutes.

COLLAR RECEIVER

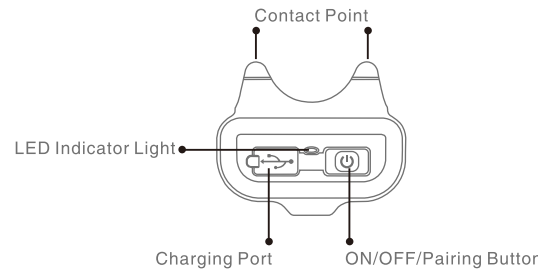

How to turn the collar off and on

Click the button on the collar once to turn it ON OR OFF.

When you hear one beep, that means the collar is turn on status.

When you hear two beeps, that means the collar has been turned off.

Collar Receiver LED Indicator Light

On when the collar is working or mode buttons on the remote are pressed.

It will blink during charging and stay on when the battery fully charged.

Flash quick during the 10 seconds pairing process.

 
Blink every 3 seconds during standby until no operations have been completed for 20 min.

How to Fit Collar on Your Dog

The collar size is adjustable to fit your dog's neck between 6" and 26". If your dog's neck circumference is smaller than 6" or larger than 26", this collar is not suitable.

The collar should not be worn by dogs under 5 pounds.

A well-fitted collar is essential for ensuring that the two contact points press firmly against the dog's skin, which will foster training efficiency and quality. When the collar is fitted and connected properly, there should be enough space to fit one or two fingers snugly in between the contact points on the receiver on the collar and the dog's skin.

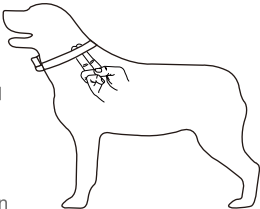

Note: The collar strap can be fit for all dogs, When you adjust the collar to fit your dog's neck there was an excessive amount hanging over. if you want to cut the excessive amount off, Please burn the end of the collar to prevent the whole thing frayed.

Proper fit of the collar is important because a loose collar may cause inconsistent performance. Check the fit to prevent excessive pressure, and it is okay to trim any excess strap length.

 
These steps will help your dog safe and comfortable.

- ✱ A collar worn for too long or made too tight on the dog's neck may cause skin damage, ranging from redness to pressure ulcers (commonly known as bed sores). Examine the contact area daily for signs of a rash or a sore. If a rash or sore is found, discontinue use until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- ✱ These collars can cause pressure necrosis if used incorrectly and is often misidentified as burns.
- ✱ If possible, reposition the collar on the pet's neck every 1 to 2 hours.
- ✱ Never connect a lead to the electronic collar, because it may cause excessive pressure on the contact points.
- ✱ Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.

Waterproofing the Collar

To ensure the collar is 100% waterproof, make sure the rubber cover on the USB charging port on the back of the collar is fully sealed.

If water gets into the collar and the collar vibrates for no reason, remove the collar from your dog, unscrew the screws, wipe out the water stains on the circuit board and the shell. Wait for it to dry, then re-install it and try again.

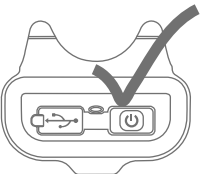

Fully sealing
100% Waterproof

HOW TO SET UP THE COLLAR

We has been paired the collar with remote. So you can easy right out of the box. Usually, The Black Collar paired to the Channel A, the Red Collar paired to the Channel B.

Pairing the Remote Control to the Collar

Channel A and/or B are used when you want to MANUALLY trigger a response when your dog barks or does a bad behavior that you want to correct.

You can use any of the three methods: beep, vibrate, or shock.

Hold the button on the collar down for 3 seconds. You will hear a beep and the LED light will flash red to confirm it is in pairing status.

Within 10 seconds, press and hold one of the buttons on the remote (beep, vibrate, or shock) to pair the collar with the remote.

 
 
When you hear the second beep, this confirms the pairing is complete.

Use the Intensity toggle switch on the back of remote to set the shock intensity level for Channel A or B.

If you want to pair another collar to the same remote, change the toggle switch on the remote right to the second channel and follow the same instructions.

1. Hold the button for 3 seconds

2. Press and hold one of mode buttons

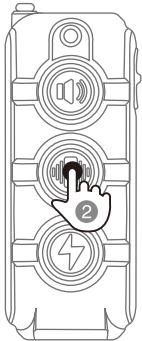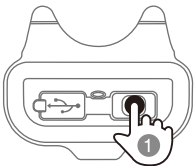

Responding Range

The puppy training collar has a responding range of approximately 1,300 feet, which may slightly vary depending on the way the remote is held. Hold the remote out and away from your body to maintain an ideal range.

When holding the remote, please do not touch or block the antenna to avoid a potential sharp decrease in the responding range. To ensure strong signals and connections, make sure the device is sufficiently charged before each use. Range will not be limited through glass windows, but it will be limited through a door or wall.



Maximum range



Typical range



Minimum range

Tips

Combining this collar with systematical training courses, the Beep and Vibrate could result in losing effectiveness of reducing dogs' bad behaviors or obeying commands. Therefore, the electrostatic pulse mode can be used for slight punishments at times to achieve better performances based on your actual need.



Made in China

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Product Prodigy, Inc** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.