

User manual

ALARM CLOCK WITH QI CHARGING PAD

MODEL: 4-LD6142

Manufacturer: Putian City HAIWEI Electronics Co., Ltd.

No. 3111 Hangang Xin Road, Chigang, Hanjiang District, 350014 Putian City,
Fujian Province, PEOPLE'S REPUBLIC OF CHINA

Importer: digi-tech gmbh, Valterweg 27A, DE-65817 Eppstein, GERMANY

Lidl Great Britain Ltd, Lidl House, 14 Kingston Road, Surbiton, KT5 9NU

Please read the manual carefully and familiarize yourself with the functions of the alarm clock before using it. Retain these instructions for future reference and pass them on together with the device when you pass on the device to other users.

Use the product only for its intended purpose.

General safety information

This unit can be used by children aged 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been instructed concerning the safe use of the appliance and have understood the resulting risks. Children should never play with the device.

Cleaning and user maintenance must not be performed by children without supervision.

Batteries safety warnings

CAUTION, Risk of fire or explosion if the battery is replaced by an incorrect type.

Install batteries correctly by matching the polarities (+/-)

Always replace a complete set of batteries and never mix used and new batteries

Remove exhausted batteries immediately

Remove batteries when not in use

Do not recharge and do not dispose of batteries in fire as the batteries may explode

Ensure batteries are stored away from metal objects as contact may cause a short circuit

Avoid exposing batteries to extreme temperature or humidity or direct sunlight

Keep all batteries out of reach from children, they are a chocking hazard.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Specifications and functions

The operating temperature: 0°C to +35°C, humidity: 20% to 95%

Operating conditions

Store the product indoors, in a dry place, away from extreme temperatures, under direct sunlight, dust, or in a damp environment.

Do not immerse in water

Avoid contact with any corrosive materials

Do not dispose this unit in a fire as it may explode

Open the battery cover with screw by screwdriver and insert the battery



Read these instructions – All the safety and operating instructions should be read before this product is operated.



Class III appliance



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys an new electrical or electronic equipment.



Use only power supplies listed in the user instructions

Adapter Model(s): HH0024B-090200-AU

Made By: HAI HONG ELECTRONICS CO., LTD.



Do not ingest battery, Chemical Burn Hazard

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Please refer the information on the bottom enclosure for electrical and safety information before installing or operating the apparatus.

Function:

Time set

1: We can switch 12/24 hour by long pressing this SETUP button. We can press +/- button to set number what you want. And then press SET button to confirm.

2: The hour number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

3: The minute number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

4: The year number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

5: M/D OR D/M number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

6: The month number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

7: The date number flash. We can press +/- button to set number what you want. And then press SET button to confirm.

ALARM 1 SET

- 1: Press alarm button once and enter into ALARM 1 mode.
- 2: Alarm 1 switching button open. We can set alarm 1 time and open alarm function.
- 3: Long press alarm button, the hour number flash. We can press +/- button to set number what you want. And then press ALARM button to confirm.
- 4: The minute number flash. We can press +/- button to set number what you want. And then press ALARM button to confirm.
- 5: We can open and close the ALARM 1 by ALARM 1 switching button.

ALARM 2 SET

It is the same to alarm 1 setting.

Backlight set

There are four levels backlight: high, middle, low, lower.

Snooze set

When the alarm sound, we can have 5 minutes snooze time after we press the snooze button. When the snooze time finish, the alarm bell will be sounding again.

UP button set

Long press button to switch C/F unit.

Charging set

When we take the phone on the charging pad, the phone can be charged during the product plug by adapter.

If we take other material on the charging pad, it cannot be charging.

A CR2032 cell can be used to remember the time, temperature and date.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

This equipment contains magnets. Always keep equipments with magnets more than 20cm from medical devices, such as pacemakers, internal cardio defibrillators or other devices that can be affected by a magnetic field. Also, keep products with magnets away from credit cards, ID cards and other media that use magnetically encoded information.