

Karaoke Treasure Instructions

I. Buttons Operation

1. “D/M” Hold: ON/OFF
2. “>” Long press aloud, short press a song
3. “<” Long press whisper, short press last song
4. Microphone volume adjustment.
5. Reverb depth adjustment.
6. Pause long press to change the tone.
7. Short press mode switch, long press the light switch.
8. One-click silence: When playing music, short press to eliminate the original sing.

V. Wireless Karaoke

1. Power NO: Boot up
2. Connection wireless: enable the wireless of mobile phone, click to connect, successful connection if prompt tone is produced.
3. Adjust voice: adjust the sound volume of mike and the reverberation to suitable level.
4. Start Karaoke.

VI. Recording with mobile phone

1. Open the Karaoke software in the mobile phone, such as: USING, Kugou Music or other recording APPS, select your favorite song, record the song according to the above mentioned singing method.
2. Test and save the song: operate according to the instructions of Karaoke software.


VII. Selfie function

1. Press the “Number 7” button to switch from wireless mode to selfie mode;
2. Enable wireless in the mobile phone, search “shutter”, click connection;
3. Open the photograph interface of the mobile phone, press the “>” or “<” button to take photos.

Note: 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system, it doesn't support other versions temporarily. It doesn't support the mobile phone which has the independent and solid photograph button.

Technical Parameters


- Output Power: 3W • Frequency Range: 100HZ~10KHZ
- Max Sound Pressure Level: >115DB 1KHZ TDH < 1%
- Reverberation Mode: sound effect reverberation
- Power Supply: Built-in 18650 Li-battery
- Charging Power: DC-5V

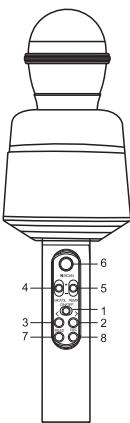

K 歌 宝 说 明 书

一、按键操作

- 1.“D/M” 开机/关机
2. “>” 长按大声，短按下一曲
3. “<” 长按小声，短按上一曲
4. 话筒音量调节。
5. 混响深度调节。
6. 暂停长按变音。
7. 短按模式转换，长按灯光开关。
8. 一键消音：在播放音乐时，短按一下消除原唱。

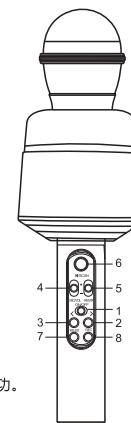

二、无线K歌

- 1.打开电源：开机。
- 2.蓝牙连接：打开手机蓝牙，点击进行配对连接，出现提示音表示连接成功。
- 3.调整人声：调整麦克风人声音量和混响强度到合适位置。
- 4.开始K歌。

三、手机录歌

- 1.打开手机中的K歌软件，如：天籁K歌，酷狗音乐或其它录歌APP，选择自己喜欢的歌，按上述唱歌方法，开始录制歌曲。
- 2.调试并保存歌曲：按K歌软件说明操作即可。

四，自拍功能

- 1.短按“7号”键，从蓝牙模式转换到自拍模式；
- 2.手机打开蓝牙，搜索“shutter”，点击连接；
- 3.打开手机的拍照界面，此时按“>”或者“<”按键进行拍照。

附：安卓系统要求4.2.2以上版本，IOS要求6.0以上版本，其它版本暂时不支持。手机有独立拍照实体按键的一般不支持。

产品技术参数

- 输出功率：3W • 频率范围：100HZ~10KHZ
- 最大声压级：>115DB 1KHZ TDH < 1%
- 混响模式：音效混响 • 供电方式：内置18650锂电池
- 充电电源：DC-5V

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction