 


A33 USER'S MANUAL **EN**

2.1 CH PORTABLE WIRELESS SPEAKER

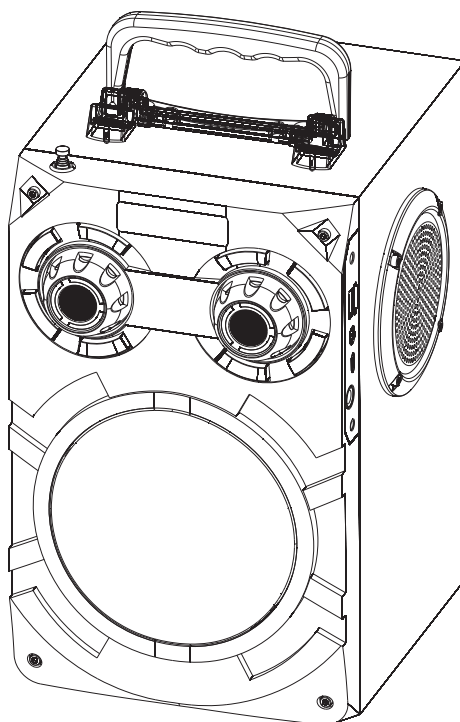

Thank you for purchasing our product A33. This device can be easily connected with audio or video devices for your daily needs. Before you use this product for the first time, please read this manual carefully to get familiar with all its function.

Package contents

- | | | | |
|--------------------------|-----|-------------------------|-----|
| 1.A33 speaker | 1PC | 4.USB charge cable..... | 1PC |
| 2.User manual..... | 1PC | 5.Remote control..... | 1PC |
| 3.3.5mm Audio cable..... | 1PC | 6.Stand holder..... | 1PC |

Technical Specifications

Output power:60W
Frequency:80Hz-20KHz
S/N ratio:≥75db
Output Impedance: 4 Ω
Input voltage:DC 5V
Battery capacity : 8000mAh
Speaker driver size : 4 " * 1 woofer, 3 " * 2 tweeter
Product size:W160*D210*H260mm

 
Product Features

1. Using the newest decoding chip,Bluetooth 5.0, connect quickly .
- 2.60 W output power ,portable 2.1 channel design, 3 speaker drivers,outstanding surround sound.
3. Support Bluetooth,Aux in,USB,TF card,FM radio,Recording,EQ,Remote,Microphone and so on .
4. Five tuning controls: Volume,Bass,Treble,Mic echo,Mic volume.
5. Double power supply:DC 5V-1A charging & Build-in four rechargeable lithium battery .
6. Compatible for personal computer , MP3 , MP4 , smart phone and other smart Devices.
7. Intelligently select MP3/FM station by remote number keys.
8. Can memory the song number after turn off.
9. The top of A33 speaker has a stand holder that can support the standing of mobile phones, tablets, etc

Safety information

1. Store the loudspeaker , away from humid areas , high temperature , oil and other liquids .
2. Do not expose the product to direct sunlight and rain.
3. Set a suitable volume to avoid hearing impairment.
4. If you do not use the product for a long time, charge it at least once per three months in order to avoid damage to lithium battery .
5. It is forbidden to disassemble, repair or open the product.
6. When charging, please keep away from the reach of children to avoid electric shock or suffocation.

Function operational specification

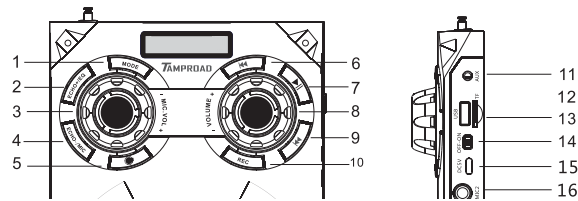

1. Mode key :Short press is convert present mode ,press can choose BLUE/TF / USB/LINE/FM mode ,long press is remove the original voice.
2. Microphone Echo+/EQ :short press increase the microphone echo. Long press 2 seconds is convert indoor/outdoor mode.
3. Microphone volume knob: rotate this knob to convert microphone volume
4. Microphone Echo-/Microphone priority : short press decrease the microphone echo, Long press 2 seconds is open/close the microphone priority.
5. LED key: short press is convert LED mode, Long press 2 seconds is close all LED light.
6. Previous song: In USB/TF status, short press is previous song, long press is fast return. In Bluetooth mode ,short press is previous song. In FM mode, short press is previous radio station, long press is human made search previous radio station.
7. Pause button: In Blue/USB/TF/FM/LINE mode, short press is mute or playing pause (FM/AUX/USB/REC mode pause will be shown as PAUS). In FM, long press is automatically FM channel searching and memory. In BLUE, long press is disconnect bluetooth. In USB /TF, long press is play recording .
8. Main Volume Knob: rotate this knob to convert the speaker main volume
9. Next song: In USB/TF status ,short press is next song ,long press is fast forward. In Bluetooth mode ,short press is next song. In FM mode ,short press is next radio station, long press is human made search next radio station.
10. REC key: Short press in enter into recording function ,short press again is play the recording ,long press is delete the recording.

- 11. AUX input jack
- 12. USB socket: insert the USB with music inside, can play the music in MP3, WAV format.
- 13. TF card socket: insert the TF card with music inside, can play the music in MP3, WAV format
- 14. Power switch, pull on is turn on, pull off is turn off.
- 15. DC 5V charging jack. 16. Microphone jack 17. Earphone mic jack

Bluetooth mode

Turn on the speaker and Open the hands of the Bluetooth Settings (Mobile phone brand different, Bluetooth opening method will be different), into the search, the A33 will be found, please connect it. When the Bluetooth pairing is successful, Then you can play the music by your phone. In case of unsuccessful pairing, turn off the speaker and restart it. After successfully connecting to Bluetooth, if you turn off the device, but the Bluetooth on your smart phone remains open, when you restart the device, the Bluetooth will be connected automatically.

When the speaker Bluetooth is connected to the Bluetooth of your mobile phone, if you want to connect the Bluetooth of other mobile phone, you must first press and hold the **▶||** button to disconnect the Bluetooth connection of your mobile phone, or you can directly disconnect your mobile phone's Bluetooth, and then pair the Bluetooth on other mobile phones.

Fm radio mode

To activate radio FM mode, turn on A33 speaker, use Mode button to select FM or press the FM button on the remote control. To search for available radio stations automatically, click and hold **▶||**, FM Stations will be saved automatically. To switch stations, click **◀◀** or **▶▶** or click the number keys on the remote control, each number key will save the corresponding FM radio station.

To start searching radio stations manually, please use the number on the remote to enter the station number you need. For example: if you want to search for "90.5" radio station, you can directly press the number 905 on the remote control to go to 90.5 radio station.

AUX/Line in mode

Turn on A33 speaker, select AUX mode, you can use AUX cable to connect your MP3 or computer with the speaker, and then play your music.

Play by TF card or USB flash

Turn on A33 speaker and insert your TF card/USB flash to automatically switch to TF/USB mode, and play the music from TF card/USB flash. After pulling out, if you re-insert the TF card/USB flash, the speaker will start playing from the previous breakpoint.

Recording mode


In TF / USB mode, you click REC to enter the recording mode, and then you must use the microphone to record. Press REC again to end the recording and play the recording. The recording will be saved in TF card or USB flash memory. long press REC is delete the current recording.

Charging

To charge the battery, insert the Micro USB charge cable to the speaker port, then connect the USB port to a DC 5V charger, and plug the charger into an AC 220V power source. Charge the speaker the same as Charge your phone.
Charging LED light indicator: It is always red when charging; the red light will be off after fully charged.

Solutions To Common Problems

Trouble	Solutions
Bluetooth pairing failed	Cause 1: The speaker is not in Bluetooth mode Cause 2: The speaker Bluetooth is automatically connected to other devices Solution: Press "Mode" choose Bluetooth mode, if other devices are automatically connected, long press "▶ " to disconnect Bluetooth, turn on the phone Bluetooth, and connect to "A33".
Speaker sound is too small	Cause 1: The volume of the speaker is too low Cause 2: The volume of the phone is too low Solution: Please increase the speaker and phone volume.
Music playing staccato	Cause 1: The Effective distance between the speaker and the mobile phone may be more than 100 feet Cause 2: There are obstacles between the speaker and the mobile phone Solution: If it is the above reason, please shorten the effective distance between the speaker and the mobile phone. If not, please reconnect to Bluetooth.
Speaker doesn't work	Cause 1: The speaker may have run out of power Cause 2: Bluetooth is not connected Cause 3: The volume of the speaker may not be turned on, or the volume of the mobile phone may not be turned on Solution: Please turn on the speaker again after fully charging, reconnect Bluetooth, increase the volume of the speaker and the phone.

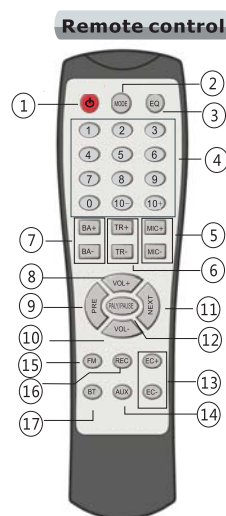 

1. Standby
2. Mode key : Short press is conversion now mode , press can choose BLUE /TF/USB/ LINE /FM mode ,long press is remove the original voice.
3. EQ key: Five sound effects. 'pop' means 'Popular Music', 'roc' means 'Rock Music', 'JAZ' means 'Jazz Music', 'CLA' means 'Classical Music', 'cut' means 'Country Music', 'nor' means 'Normal Music',long press is microphone priority.
4. Number key: In the USB / TF mode, press the number to select the song you want to play in the USB flash memory / TF card; in the FM radio mode,press the number 905 to go to '90.5' radio station, you can freely choose FM radio frequency you want.
5. Microphone volume Tuning
6. Treble Tuning
7. Bass Tuning
8. Increase volume
9. Previous song: In USB /TF status, short press is previous song, long press is fast return. In Bluetooth mode ,short press is previous song. In FM mode,short press is previous radio station, long press is human made search previous radio station.
10. Decrease volume

11. Next song: In USB /TF status ,short press is next song ,long press is fast forward. In Bluetooth mode ,short press is next song. In FM mode ,short press is next radio station, long press is human made search next radio station.

12. Pause button: In Blue/USB/TF/FM/LINE mode ,short press is mute or playing pause (FM/AUX/USB/REC mode pause will be shown as PAUS). In FM, long press is automatically FM channel searching and memory . In BLUE, long press is disconnect bluetooth. In USB /TF, long press is play recording.

13. Microphone Echo Tuning

14. Aux Mode: Use AUX cable to connect to TV, MP3, computer, mobile phone, iPad, iPod, etc.

15. FM Mode: To search radio stations manually, please use the number on the remote to enter the station number you need.

16. REC key: Short press in enter into recording function ,short press again is play the recording ,long press is delete the recording.

17. Bluetooth Mode

Long press the 0 key to switch the LED flashing mode, long press the 1 key to turn on/off the LED light.

Thank you again for purchasing the A33 speaker. If you have any questions, please contact us. Hope our products can get your love and recommend.

Best wish for you ! Wishing every happiness will always be with you !

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

 
two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

A33 BENUTZERHANDBUCH DE

2.1CH TRAGBARER DRAHTLOSER LAUTSPRECHER

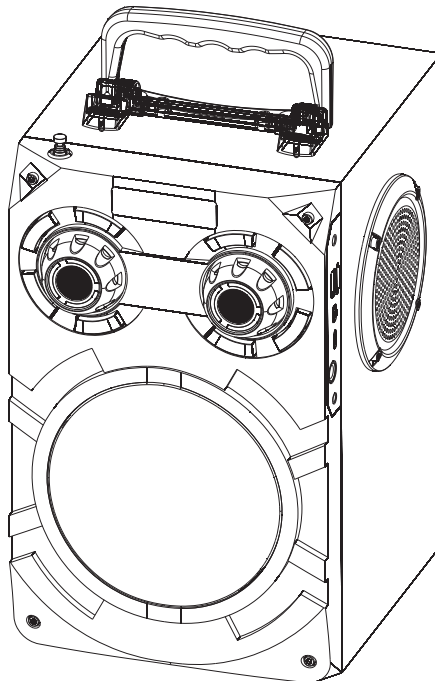

Vielen Dank, dass Sie sich für unser Produkt A33 entschieden haben. Dieses Gerät kann sich an Audio- oder Videogeräte anschließen und zu Ihrem täglichen Bedarf eingesetzt werden. Bevor Sie das Produkt zum ersten Mal benutzen, lesen Sie bitte dieses Handbuch sorgfältig durch, um sich mit allen Funktionen vertraut zu machen.

Lieferumfang

- | | |
|--------------------------------|----------------------------------|
| 1. A33 Lautsprecher1Stk. | 4. USB-Ladekabel1 Stk. |
| 2. Benutzerhandbuch1Stk. | 5. Fernbedienung.....1 Stk. |
| 3. 3,5mm Audiokabel1Stk. | 6. Ständerhalterung..... .1 Stk. |

Technische Spezifikation

Ausgangsleistung: 60W
Frequenz: 80Hz-20KHz
S/N-Verhältnis: $\geq 75\text{db}$
Ausgangsimpedanz: $4\ \Omega$
Eingangsspannung: DC5V
Batteriekapazität: 8000mAh
Lautsprechertreiber: 4" * 1 Woofer, 3" * 2 Hochtöner
Produktabmessung: B160 * T210 * H260mm

 
Produktmerkmale

1. Einsatz vom neuesten Dekodierungschip, mit Bluetooth 5.0 und schneller Verbindung.
2. 60 W Ausgangsleistung, tragbare 2.1-Kanal-Design, 3 Lautsprecher-Treiber, hervorragende Surround-Sound.
3. Bluetooth, Auxin, USB, TF-Karte, FM-Radio, Aufnahme, EQ, Fernsteuerung, Mikrofon und so weiter sind unterst ütz.
4. Fünf Stimmregler: Lautstärke, Bass, Höhen, Mikrofon-Echo, Mikrofon-Lautstärke.
5. Spannungsversorgung: DC 5V-1A durch Aufladen oder Einlegen von vier wiederaufladbaren Lithium-Batterien.
6. Kompatibel für PC, MP3, MP4, Smartphone und andere intelligente Geräte.
7. Intelligente Auswahl von MP3/FM-Sendern durch ferngesteuerte Zifferntasten.
8. Speicherung der Songnummer nach dem Ausschalten.
9. Oberhalb des A33-Lautsprechers wird eine Ständerhalterung angebracht, worauf Ihr Mobiltelefone, Tablets usw. aufgestellt werden können.

Sicherheitshinweise

1. Lagern Sie den Lautsprecher fern von Feuchträumen, hohen Temperaturen, Öl und anderen Flüssigkeiten.
2. Setzen Sie das Gerät nicht direktem Sonnenlicht und Regen aus.
3. Stellen Sie eine geeignete Lautstärke ein, um Hörschäden zu vermeiden.
4. Wenn Sie das Gerät für längere Zeit nicht benutzen, laden Sie es mindestens einmal in drei Monaten auf, um Schäden an der Lithiumbatterie zu vermeiden.
5. Es ist verboten, das Gerät zu zerlegen, zu reparieren oder aufzumachen.
6. Halten Sie das Gerät beim Aufladen außerhalb der Reichweite von Kindern, um einen elektrischen Schlag oder eine Erstickengefahr zu vermeiden.

Funktion und Betriebsspezifikation

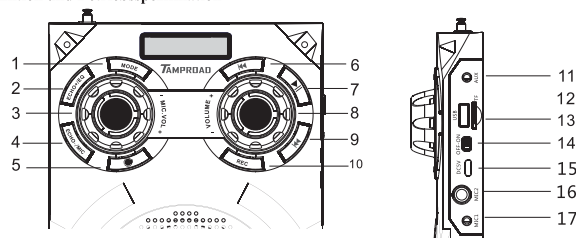

1. Modus- Taste: Durch kurzes Drücken wird der aktuelle Modus umgeschaltet. Durch Drücken ist der BLUE/TF/USB/LINE/FM-Modus auszuwählen, und durch langes Drücken wird die ursprüngliche Stimme entfernt.
2. Mikrofonecho+/EQ: Kurzes Drücken erhöht das Mikrofonecho. 2 Sekunden lang drücken, um den Innen-/Außenmodus umzuwandeln.
3. Mikrofonlautstärke-Regler: Drehen Sie diesen Regler, um die Mikrofonlautstärke umzuwandeln.
4. Mikrofon-Echo-/Mikrofon-Priorität: Kurzes Drücken verringert das Mikrofon-Echo, langes Drücken von 2 Sekunden ist das Öffnen/Schließen der Mikrofon-Priorität.
5. LED-Taste: Kurzes Drücken ist LED-Modus umzuwandeln, 2 Sekunden lang drücken, um alle LED-Lichter zu schließen.
6. Vorheriger Musiktitel: Im USB/TF-Status wird durch kurzes Drücken der vorherige Musiktitel abgespielt, langes Drücken führt zum schnellen Rücksprung. Im Bluetooth-Modus wird durch kurzes Drücken der vorherige Musiktitel ausgewählt. Im FM-Modus wird durch kurzes Drücken der vorherige Radiosender ausgewählt, und durch langes Drücken wird die manuelle Suche nach dem vorherigen Radiosender gestartet.
7. Pausentaste: Im Blue/USB/TF/FM/LINE-Modus wird durch kurzes Drücken Stummschaltung oder Wiedergabepause aktiviert (FM/AUX/USB/REC-Modus-Pause wird als PAUS angezeigt). Im FM-Modus wird bei langem Drücken automatisch der FM-Kanal gesucht und gespeichert. Im BLUE-Modus wird durch langes Drücken die BLUE-Verbindung getrennt. Im USB/TF-Modus wird durch langes Drücken die Aufnahme abgespielt.
8. Hauptlautstärke-Regler: Drehen Sie diesen Regler, um die Hauptlautstärke des Lautsprechers umzuwandeln.
9. Nächster Musiktitel: Im USB/TF-Status wird durch kurzes Drücken der nächste Musiktitel abgespielt, langes Drücken führt zum schnellen Vorlauf. Im Bluetooth-Modus wird durch kurzes Drücken der nächste Musiktitel ausgewählt. Im FM-Modus wird durch kurzes Drücken der nächste Radiosender ausgewählt, und durch langes Drücken wird die Suche nach dem nächsten Radiosender gestartet.