




Product Instruction

Electric Tripod Base (Model: D01)

Product Diagram

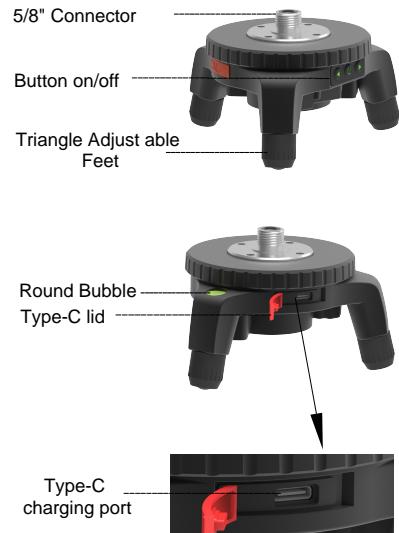

Packing List

Item	Quantity
Triangle Base	1
Remote control (with batteries)	1
5/8" to 1/4" Adaptor	1
1/4" to 5/8" Adaptor	1
USB/Type-C charging cable	1
Instruction manual	1


Attachment Diagram



Attention:1.Built-in battery model is 18650 lithium battery (2600 mAh)Please use the correct charger (5V 1A, not included) and Type-C cable;

Please replace the batteries in time when the remote control malfunctions/cannot receive signals.

Remote control and pairing

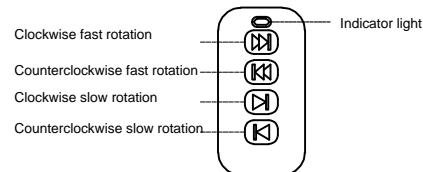


a. Remote control and machine pairing: in the electric triangle base on state, long press \triangleleft , base Indicator green light flashes, and then click any key on the remote control, the base indicator red light flashes 3 times, that is, pairing success, at this time you can release \triangleleft
 b. Remote control distance: >10m
 c. at the same time, long press \triangleleft and \odot to turn on the rotation mode, at this time the red indicator light is always on. Single press \triangleleft , can implement counterclockwise rotation and pause, the same way, single press \triangleright , can implement clockwise rotation and pause. Press and hold \triangleright button to turn off the machine.

(This product can rotate manually)

Product Instruction

Rubber key indication

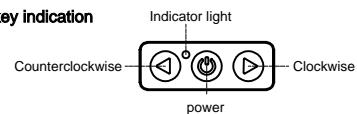

a. Long press \odot for 0.5 seconds, the indicator light is always on, the motorized triangle base is on, long press \odot for 2 seconds to turn off the machine;

b. Short press \triangleright , the indicator light blinks once, the turntable moves clockwise; long press \triangleright , the indicator light continues to blink, the turntable continues to rotate clockwise;

c. Short press \triangleleft , the indicator light blinks once, the turntable counterclockwise pointing; long press \triangleleft , the indicator light continues to flash, the turntable continues to rotate counterclockwise;

(Note: there is a delay of <1.5 seconds when alternately switching between rotating in the opposite direction)

Low Battery Alarm

- a. When the indicator light flashes red, the motorized tripod is in low battery state, please charge it in time;
- b. When charging, the indicator light flashes green, when full, the green light is always on.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.