

F30

PHONE STAND WITH WIRELESS SPEAKER AND ALARM CLOCK

User Manual



Before using the multi-function device, please read the instruction carefully and operate it in strict accordance with the instructions.


Product Features

- With phone stand ,free your hands.
- Wireless speaker, hands-free Wireless function.
- USB supports Mp3 playing music.
- LED large screen display.
- Dual alarm clock function, alarm sound source can be selected from default melody, USB disk.
- Sleep function.
- Timer function (countdown by seconds).
- Dual ports charger (one USB interface, one type-C interface) .
- RGB colored lights.

What's included


- F30 Main Unit — ① USB Charging Cable — ①
User Manual — ①

Details about Buttons

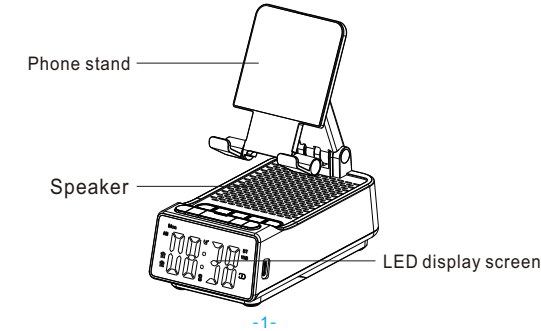


TOP VIEW

BOTTOM VIEW

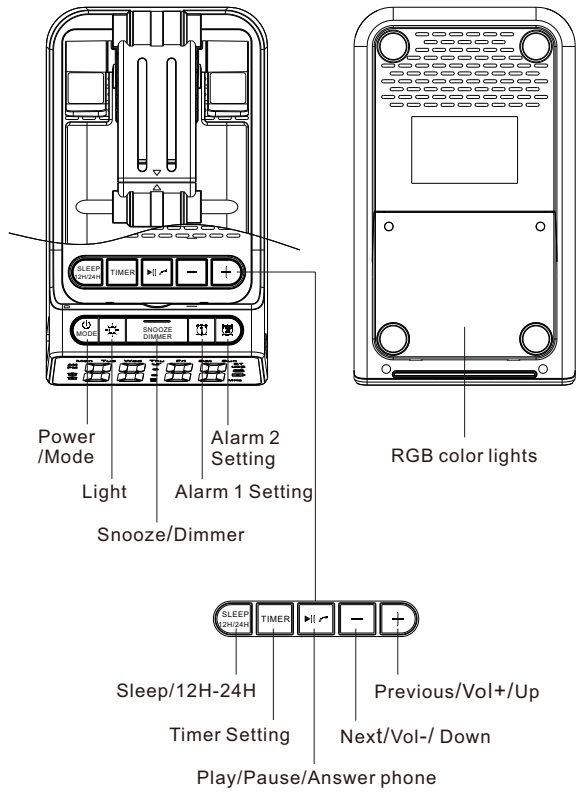

LEFT VIEW

RIGHT VIEW

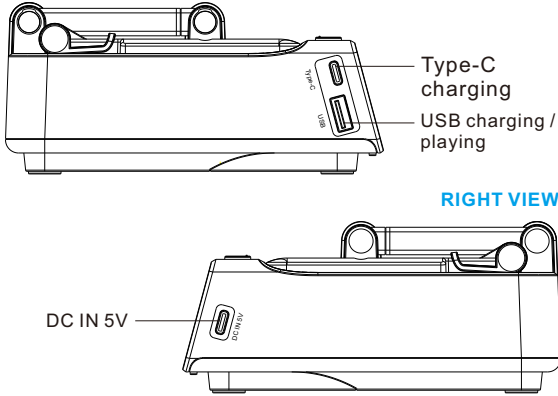

Getting Started

- Please read this product manual carefully before using this product.
1. Open the package, take the product out of the box, and open the mobile phone support frame.
 2. Long press the POWER button and the power of speaker will be turned on and the LED screen will light up and enter clock mode.
 3. Wireless connection and playback
Long press the POWER button to turn on the speaker, then the LED screen lights up and press the MODE button to wireless mode, then the BT symbol on the LED screen flashes. Using the Wireless function of mobile phone to search the Wireless device of the audio and connect it(the device model

is F30). The wireless speaker will voice prompt when wireless device is connected successfully. It indicates the Wireless link is successful. Turn on the phone's music player, and the speaker can play the phone's music through Wireless signal.
* After connecting to the Wireless for 20 minutes without any operation, the Wireless will automatically disconnect and require a restart of the machine to reconnect.

4. Playing Music

In the process of playing music, Press once $\text{--}/+/\text{▶}/\text{◀}$ to control previous song, next song and play/pause respectively. Long Press $\text{--}/+$ to decrease or increase volume.

5. Press once $\text{▶}/\text{◀}$ to answer the call comes in.

6. Play songs of U disk

Press the MODE button to USB playback mode, you can be directly inserted U disk into the USB port of speaker, The speaker will automatically switch to play music of U disk.

7. Time setting

When the phone is wirelessly connected to the speaker, time of speaker will automatically synchronize to time of phone. The update time will be displayed on the LED screen.

Note: The time on LED display will automatically update when the speaker is connected with devices.

8. 12H/24H setting

Long press the 12H/24H button to switch the 12 hour and 24 hour modes.

In the12 hour mode, the LED screen will display AM or PM symbols.

9. Alarm setting

Alarm1 and Alarm2 are set in the same way.

9.1 Alarm ON/OFF

Press the ⏻ button to turn on the alarm, and then press the ⏻ button to turn it off.

9.2 Alarm time setting

Press and hold the ⏻ button for 2 seconds to enter HOUR setting.

↓ The HOUR digits will flash, press the $\text{--}/+$ button to adjust to hour of Alarm clock

Press the ⏻ button to enter MINUTE setting.

↓ The MINUTE digits will flash, press the $\text{--}/+$ button to adjust to minute of Alarm clock

Press the ⏻ button to enter RING TONE setting.

↓ Press the $\text{--}/+$ button to choose one from five built alarm-sounds and USB

Press the ⏻ button to enter Weekday alarm clock setting.

↓ Press the $\text{--}/+$ button to choose Weekday alarm mode

Weekday alarm mode: Monday to Friday/ Monday to Sunday/ Saturday to Sunday.

Press the ⏻ button to confirm and exit from alarm setting mode.

Notice: Adjusting the alarm volume must be in the clock state (not in the wireless or USB play state), press once $\text{--}/+$ button adjust the alarm volume, L05-L30 level adjustable. Volume value will appear when you are adjust volume.

9.3. Turn off alarm daily

Press ⏻ or ⏻ to stop the alarm when it's ringing. The alarm will go off on the next date you set.

9.4 SNOOZE

When the alarm goes off, press SNOOZE to snooze for a while, the alarm will go off again 9 minutes later.

10. SLEEP Setting

When music is playing, press the SLEEP button to activate the sleep function, press continually adjust the sleep time intervals at 15-30-45-60-90-120-00(OFF). It will automatically exit and set the sleep time as displayed last time when you leave the button alone for 5 seconds.

11. TIMER Setting

Long press the TIMER button to activate the timer function, the timer symbol on the LED screen will light up. Press the $\text{--}/+$ buttons to adjust the required timing time, then press the TIMER button to confirm the timer time. The timer will count down in seconds(The maximum countdown time can reach 60 minutes).

When the countdown time arrives, the alarm will sound, you can press the timer button to turn off the timer function.

12. Using the RGB Lights

Press 💡 to turn on the RGB lights, continue to press the 💡 to switch the color and style of the RGB lights (Can switch between 7 color light modes).

Long press 💡 to turn off the night light.

13. USB Charging

The unit is added with USB and Type-C output interface for iPod, mobile Phone and iPad charging. Charging range: 5V/1A-2A.

14. Brightness setting

Press DIMMER button to adjust 5 levels brightness of the LED brightness.


15. Battery charging

In use, when the battery is low, the speaker will display a beeping low voltage prompt, and the 🔋 will flash. At this time, it is necessary to charge the speaker in a timely manner, otherwise the speaker will automatically shut down.

The icon 🔋 on the display is always on when charging the stereo and disappears when it is fully charged.

16. Using of mobile phone holder

Open the mobile phone bracket and automatically support the mobile phone.

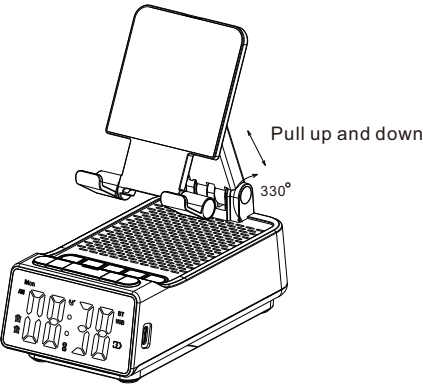

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.