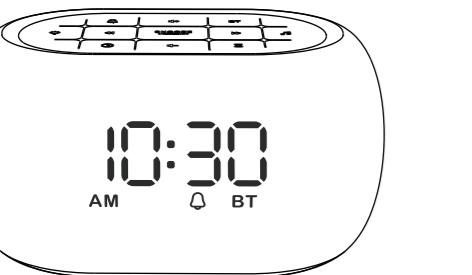


尺寸90*110MM 材质：120g铜版纸 单色印刷 折法：风琴折

ANJANK
AC209 User Manual



If a faulty product is found when setting up please email us at customer@kerweilai.com

Power Specifications
AC, 100-240V, 50-60Hz, 0.2A
DC, 5V-1A, 24W, Class 2

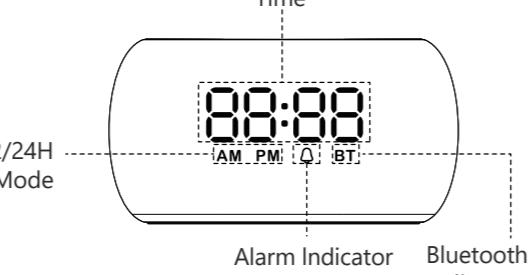
Package Include

- 1*White Noise Machine
- 1*Adapter with cord
- 1*CR2032 button cell
- 1*User Manual

Features

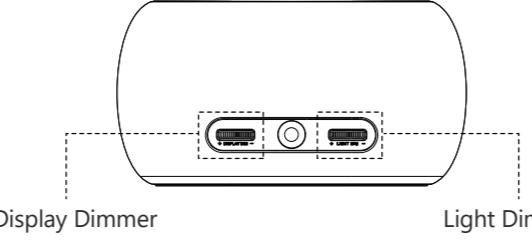
- Bluetooth Speaker
- 20 Soothing Sounds
- 30-level Volume Control
- Alarm Clock
- 8 Ringtones
- 7-Color Night Light
- 0-100% Display Dimmer
- 0-100% Night Light Dimmer
- 12/24H Mode
- 9 Minutes Snooze
- Sleep Timer
- Battery Backup (Only memory function)

Front View



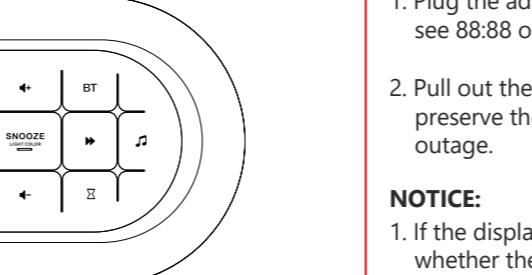
Time
12/24H Mode
AM PM BT
Alarm Indicator Bluetooth Speaker Indicator

Back View



Display Dimmer Light Dimmer

Top View



Alarm Setting Time Set
Volume Up Sleep Timer
Volume Down Music Play/Pause
BT Bluetooth Speaker
Night Light Previous Track/+
SNOOZE LIGHT COLOR Snooze/Light Color Switch

Getting Started

1. Plug the adapter into a standard household outlet, you will see 88:88 on the display and the machine is ready to be set.
2. Pull out the insulator sheet before use. Backup battery is to preserve the time and alarm settings in case of power outage.

NOTICE:

1. If the display is "blank" after plugging in, please check whether the "Display Dimmer" on the back is at a high position.
2. It is NOT a battery-powered alarm clock. The battery just preserves time and alarm settings in case of power outage. The screen will go blank if only use battery. Please keep plugged in.

Sound Selection

1. Press the "♪" button to switch on/off the sound mode.
2. Press the "◀" or "▶" button to switch among all of 20 sounds.

List of Track

Nature Sounds			
1	Sea Wave 1	7	Croak
2	Sea Wave 2	8	Bird Chirp
3	Music Box	9	Summer Night
4	Rain	10	Campfire
5	Thunderstorm	11	Wind
6	Stream	12	Yoga Music

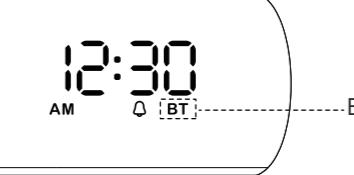
White Noises			
1	Brown Noise 1	1	Fan Sounds 1
2	Brown Noise 2	2	Fan Sounds 2
3	Pink Noise	3	Fan Sounds 3
4	White Noise 1		
5	White Noise 2		

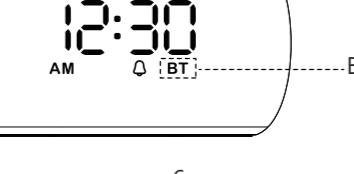
Wireless Speaker Pairing

3. Press "◀" or "▶" button to play the previous track or next track, or press "BT" button to pause it.
4. Press "◀" or "▶" button or use your phone to adjust the speaker volume.

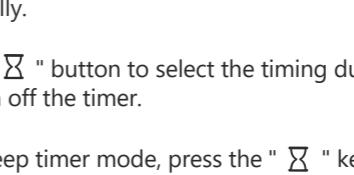
NOTICE:

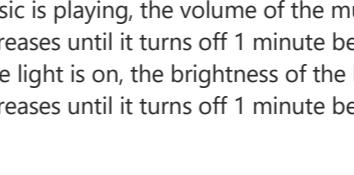
1. When wireless speaker turns on, the "AC209" will automatically connect to the last phone if available. If not, "AC209" will enter pairing mode.
2. Long press "BT" button to exit the current bluetooth device connection and enter pairing mode again. "BT" icon will blink.
3. Place your speaker and phone no more than 5 meters (49ft) away from each other.

1 
Blink

2 
Blink

3 
Blink

4 
Blink

5 
Blink

6 
Blink

7

Auto Time Setting

Under Bluetooth connection, the clock will auto-sync time according to your phone. If you want change hour format, press the "⌚" button.

NOTICE:

Because of the MAP/HFP protocol restriction, some phones did not support the auto-setting. If the clock cannot auto-correct time, please set time manually.

Manual Time Setting

1. Press the "⌚" button to set HOUR setting. Press "◀" or "▶" button to set hour.
2. Press the "⌚" button to confirm and enter MINUTE setting. Press "◀" or "▶" button to set minute.
3. Press the "⌚" button to confirm and enter 12/24 hour mode setting. Press "◀" or "▶" button to select.
4. Press the "⌚" button to finish time setting.

NOTE:

When the wireless speaker is on, time cannot be set manually, only can press the "⌚" button to switch 12/24 hour format.

Alarm On / Off

Long press the "⌚" button to turn on/off the Alarm. If the "⌚" icon on the display disappears, this alarm will NOT go off the next day.

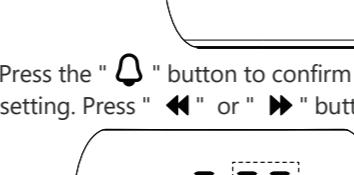
Alarm And Ringtone Setting

1. Press the "⌚" button to enter HOUR setting. Press "◀" or "▶" button to set hour.
2. Press the "⌚" button to confirm and enter MINUTE setting. Press "◀" or "▶" button to set minute.
3. Press the "⌚" button to confirm and enter 12/24 hour mode setting. Press "◀" or "▶" button to select.
4. Press the "⌚" button to finish time setting.

NOTE:

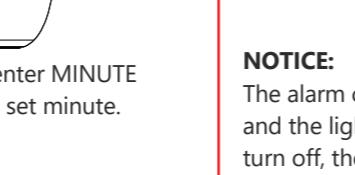
When the wireless speaker is on, time cannot be set manually, only can press the "⌚" button to switch 12/24 hour format.

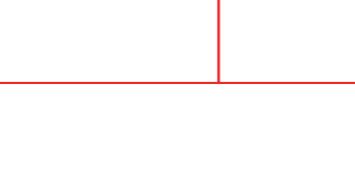
3 
Blink

4 
Blink

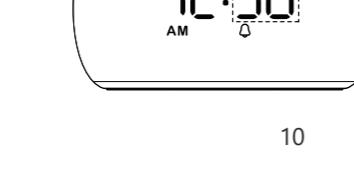
5 
Blink

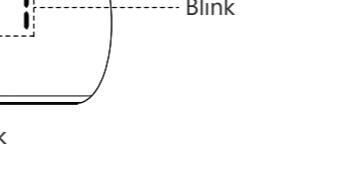
6 
Blink

7 
Blink

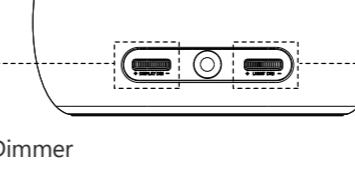
8 
Blink

 
9 
Blink

10 
Blink

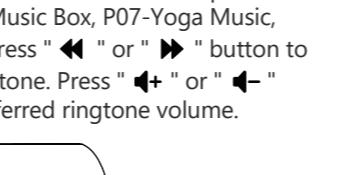
11 
Blink

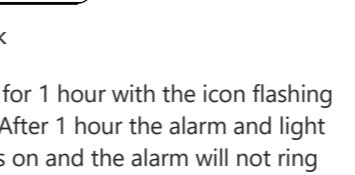
12 
Blink

13 
Blink

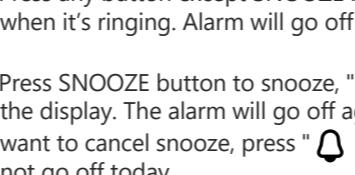
14 
Blink

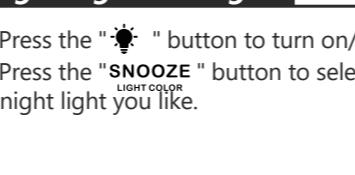
15

3 
Blink

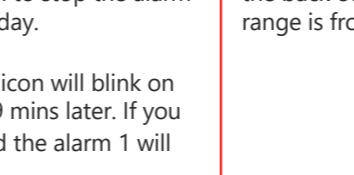
4 
Blink

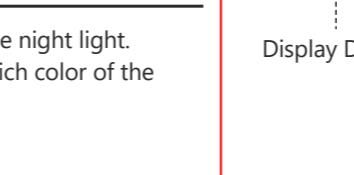
5 
Blink

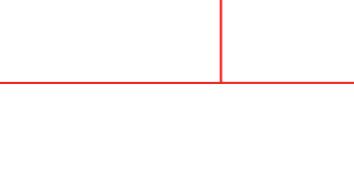
6 
Blink

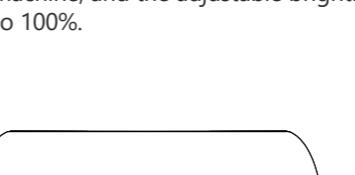
7 
Blink

8 
Blink

9 
Blink

10 
Blink

11 
Blink

12 
Blink

13 
Blink

14 
Blink

15

Alarm Pause / Snooze

When the alarm goes off, you have two options:

1. Press any button except SNOOZE button to stop the alarm when it's ringing. Alarm will go off next day.
2. Press SNOOZE button to snooze. "⌚" icon will blink on the display. The alarm will go off again 9 mins later. If you want to cancel snooze, press "⌚", and the alarm 1 will not go off today.

Night Light Setting

1. Press the "💡" button to turn on/off the night light.
2. Press the "SNOOZE LIGHT COLOR" button to select which color of the night light you like.

Dimmer Control of Screen Display&Night Light

The "Display Dimmer" dial and the "Light Dimmer" dial are at the back of the machine, and the adjustable brightness range is from 0 to 100%.

Sleep Timer Setting

1. When the machine is on, press the "💤" button repeatedly to select a sleep timer ranging from 1H, 2H, 3H, 4H, OFF. The led light of the selected timer will light on accordingly. If no operation is performed within 5S, the machine will return to the time display and start the timer automatically.
2. Press the "💤" button to select the timing duration as OFF to turn off the timer.
3. When in sleep timer mode, press the "💤" key to check the remaining time. Press the "💤" key again to reset the timer.

NOTE:

When the music is playing, the volume of the music gradually decreases until it turns off 1 minute before the off time; when the light is on, the brightness of the light gradually decreases until it turns off 1 minute before the off time.

Support

If you have any issue with this clock, please contact us at customer@kerweilai.com. We will address your issue within 24 hours.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.