

说明书英文版（ 正面 ）

1. Long press this button to power on and off. Press this button to turn on or off the playback function.

2. Press this button to switch four display modes of electric screen light.

3. Short press this button, pause the playback, long press this button, enter the timing off setting, clockwise or counterclockwise turn the volume button to adjust the timing time, short press the volume button to confirm the completion of the setting. Long press this button, the timing time blinks for 3 seconds, and then the timing shutdown function automatically enters. Long press this button, turn the volume button to set the time to 0, and short press the volume button to confirm to turn off the timer shutdown function. When the timer shutdown function is enabled, the timer shutdown icon is on; when the timer shutdown function is disabled, the timer shutdown icon is off.

4. Short press this button to adjust the brightness of the display light by 1-5 steps. Long press this button to enter the clock setting, turn the volume button clockwise or counterclockwise to adjust the clock, short press the volume button to confirm, turn the volume button clockwise or counterclockwise to adjust the minute, short press the volume button to confirm the setting is complete

5. Short press this button to turn on and off the alarm clock function. Long press this button to enter the alarm time setting, turn the volume button clockwise or counterclockwise to adjust the clock, short press the volume button to confirm, turn the volume button clockwise or counterclockwise to adjust the minute, and short press the volume button to confirm. The alarm can be selected from 1-5 kinds of FM radio and ringtones. When the alarm clock function is turned on, the alarm clock icon is on, and when the alarm clock is turned off, the alarm clock icon is off.

When the alarm sounds, turn the volume button to enter the snooze mode. After 5 minutes of snooze, the alarm rings for 1 minute and then enter the snooze mode again. After 5 consecutive snoozes, the snooze function will automatically exit. Press any key on the panel to cancel the snooze mode.

6. Press this button to switch FM, BLUETOOTH, USBplay and LINE IN functions for playback. To use the FM function, insert the FM antenna first. Long press the button to enter the FM automatic station selection.

7. This is the electric quantity indicator icon. When the product is charging, the electric quantity indicator or blinks; when the electric quantity is full, the electric quantity indicator keeps on.

8. When switching FM channel or music selection, press the volume button and then turn the volume button to switch FM channel or music selection. After stopping the selection operation for 3 seconds, it will automatically switch to the volume + and - mode.

Product specification

说明书英文版（ 反面 ）

Electric screen lamp

Power display

Function switching
FM automatic
station selection

Lighting mode

Pause playback
Timed shutdown

Volume knob

Clock

alarm
clock

On / off

Product parameters

• SPEKER: 5W/4Ω

• INPUT: TYPE-C USB ,DC5V/1A

• FM FREQUENCY: 76-108MHz

• LEVEL LIGHT PATTERN: 4

• PRODUCT SIZE : 154*71*74mm

• Product model: Cx008

• BATTERY CAPACITY: 1800mah

POLAR RHYTHM

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.